




stellar.heatnglo.com

## Custom Fireplace Program Co-linear Direct Vent Powervented Gas Fireplaces

### ENLIGHT COLLECTION LEFT CORNER

#### Installation & Operating Manual

Available Widths: 3', 4', 5', 6', 7', & 8'

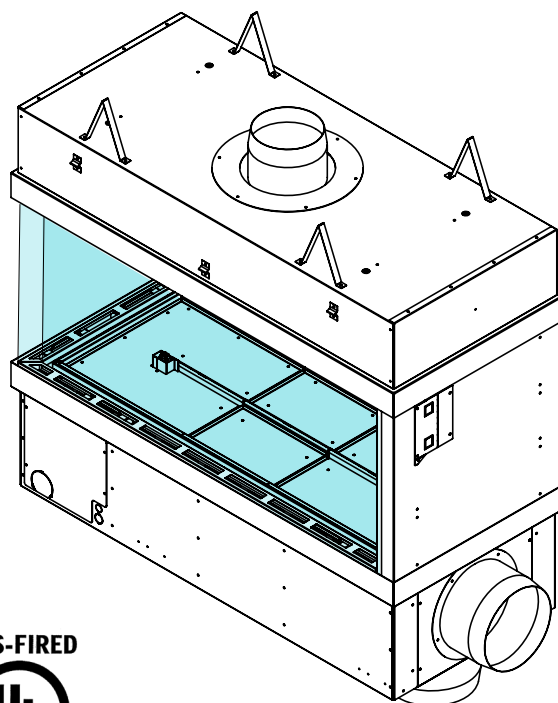

**WARNING:**  
**FIRE OR EXPLOSION HAZARD.**

Failure to follow all instructions and safety warnings exactly could result in serious injury, death, or property damage.



This appliance is only for use with  
Natural Gas or Propane Gas

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
  - Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - Leave the building immediately.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

## **DO NOT DISCARD**

**Installer:**  
Leave this manual with the appliance.

**Consumer:**  
Retain this manual for future reference.



### **SERVICE**

Our gas hearth products must be installed and serviced by trained fireplace professionals.



## **DANGER**



**HOT GLASS WILL CAUSE BURNS.**

**DO NOT TOUCH GLASS UNTIL COOLED.**

**NEVER ALLOW CHILDREN TO TOUCH GLASS.**

**Read this manual before installing or operating this appliance.  
Please retain this owner's manual for future reference.**

***Congratulations on selecting a  
Stellar by Heat & Glo gas fireplace.***

You've selected a model within the Enlight Collection that is crafted to elevate even the most unique spaces. Each of our Enlight Collection's configurations sets the stage with the most robust flames in its class, with commercial grade components providing the utmost in safety and reliability.

As the owner of a new fireplace, you'll want to read and carefully follow all of the instructions contained in this owner's manual.

Pay special attention to all cautions and warnings.

**DO NOT DISCARD.**

This owner's manual should be retained for future reference. We suggest that you keep it with your other important documents and product manuals.

**Installation Team: at the time of install, please record the following pertinent information about the fireplace for the homeowners reference:**

Model Name: \_\_\_\_\_

Serial Number: \_\_\_\_\_ Date Installed: \_\_\_\_\_

Dealer Purchased From: \_\_\_\_\_

Dealer City/State: \_\_\_\_\_ Dealer Phone: \_\_\_\_\_

Notes: \_\_\_\_\_

\_\_\_\_\_

If your model number has not been filled out above, please contact your dealer the fireplace purchased through directly for assistance identifying your model number by the serial number.



**STELLAR**

**by Heat & Glo**

[stellar.heatnglo.com](http://stellar.heatnglo.com)

Stellar by Heat&Glo, a division of Hearth & Home Technologies, Inc.

22160 Cedar Avenue S.

Lakeville, MN 55044

(P) 952-224-4072

(E) [StellarInfo@hearthnhome.com](mailto:StellarInfo@hearthnhome.com)

## UL RATING PLATE LOCATION & MODEL NUMBER IDENTIFICATION

The rating plate is used for multiple designs and multiple collections, and custom fireplaces.

The generic nomenclature listed on the rating plate will not identically match the model of Enight fireplace you have.

The rating plate must stay with the fireplace and is located below the burner in an area that will only be reachable while servicing.


**STELLAR**  
by Heat & Glo
 

**MH48906**  



 Energy Verified  
Rendement  
Énergétique Vérifié

Vented Gas Fireplace  
Not For Use With Solid Fuel  

DATE OF MFG

SERIAL NO.

Tested to: ANSI Z21.50-2019/CSA 2.22-2019 Vented Gas Fireplaces and CAN/CSA P.4.1-15  
 This vented gas fireplace is not for use with air filters.  
 This appliance must be installed in accordance with local codes, if any; if none, follow the National Fuel Gas Code, ANSI Z223.1/NFPA 54, or Natural Gas and Propane Installation Codes, CSA B149.1.

---

This unit is equipped for use with **NATURAL GAS**

---

**Model Number, Input and Orifice Specifications - NATURAL GAS**

|                                        |                          |
|----------------------------------------|--------------------------|
| Manifold Pressure HI Setting (in W.C.) | 3.5"                     |
| Manifold Pressure LO Setting (in W.C.) | 3.5"                     |
| Minimum Inlet Pressure (in W.C.)       | 7.0"                     |
| Maximum Inlet Pressure (in W.C.)       | 10.0"                    |
| Electrical Specifications              | 120 VAC, 5.8 amp (.35kW) |

| Model No.                                     | Maximum Input Rating BTU/Hr | Burner Orifice (DMS) | Model No.                           | Maximum Input Rating BTU/Hr | Burner Orifice (DMS) |
|-----------------------------------------------|-----------------------------|----------------------|-------------------------------------|-----------------------------|----------------------|
| <input type="checkbox"/> 2-XX-YY-R            | 20,000                      | (1X) #43             | <input type="checkbox"/> 9-XX-YY-R  | 160,000                     | (8X) #43             |
| <input type="checkbox"/> 2-XX-YY-L            | 20,000                      | (1X) #43             | <input type="checkbox"/> 9-XX-YY-L  | 160,000                     | (8X) #43             |
| <input type="checkbox"/> 3-XX-YY-R            | 40,000                      | (2X) #43             | <input type="checkbox"/> 9-XX-YY-T  | 160,000                     | (15X) #51            |
| <input type="checkbox"/> 3-XX-YY-L            | 40,000                      | (2X) #43             | <input type="checkbox"/> 10-XX-YY-R | 180,000                     | (9X) #43             |
| <input type="checkbox"/> 3-XX-YY-T            | 40,000                      | (3X) #51             | <input type="checkbox"/> 10-XX-YY-L | 180,000                     | (9X) #43             |
| <input type="checkbox"/> 4-XX-YY-R            | 60,000                      | (3X) #43             | <input type="checkbox"/> 10-XX-YY-T | 180,000                     | (17X) #51            |
| <input type="checkbox"/> 4-XX-YY-L            | 60,000                      | (3X) #43             | <input type="checkbox"/> 11-XX-YY-R | 200,000                     | (10X) #43            |
| <input type="checkbox"/> 4-XX-YY-T            | 60,000                      | (5X) #51             | <input type="checkbox"/> 11-XX-YY-L | 200,000                     | (10X) #43            |
| <input type="checkbox"/> 5-XX-YY-R            | 80,000                      | (4X) #43             | <input type="checkbox"/> 11-XX-YY-T | 200,000                     | (19X) #51            |
| <input type="checkbox"/> 5-XX-YY-L            | 80,000                      | (4X) #43             | <input type="checkbox"/> 12-XX-YY-R | 220,000                     | (11X) #43            |
| <input type="checkbox"/> 5-XX-YY-T            | 80,000                      | (7X) #51             | <input type="checkbox"/> 12-XX-YY-L | 220,000                     | (11X) #43            |
| <input checked="" type="checkbox"/> 6-XX-YY-R | 100,000                     | (5X) #43             | <input type="checkbox"/> 12-XX-YY-T | 220,000                     | (21X) #51            |
| <input type="checkbox"/> 6-XX-YY-L            | 100,000                     | (5X) #43             | <input type="checkbox"/> 13-XX-YY-R | 240,000                     | (12X) #43            |
| <input type="checkbox"/> 6-XX-YY-T            | 100,000                     | (9X) #51             | <input type="checkbox"/> 13-XX-YY-L | 240,000                     | (12X) #43            |
| <input type="checkbox"/> 7-XX-YY-R            | 120,000                     | (6X) #43             | <input type="checkbox"/> 13-XX-YY-T | 240,000                     | (23X) #51            |
| <input type="checkbox"/> 7-XX-YY-L            | 120,000                     | (6X) #43             | <input type="checkbox"/> 14-XX-YY-R | 260,000                     | (13X) #43            |
| <input type="checkbox"/> 7-XX-YY-T            | 120,000                     | (11X) #51            | <input type="checkbox"/> 14-XX-YY-L | 260,000                     | (13X) #43            |
| <input type="checkbox"/> 8-XX-YY-R            | 140,000                     | (7X) #43             | <input type="checkbox"/> 14-XX-YY-T | 260,000                     | (25X) #51            |
| <input type="checkbox"/> 8-XX-YY-L            | 140,000                     | (7X) #43             | <input type="checkbox"/> 15-XX-YY-R | 280,000                     | (14X) #43            |
| <input type="checkbox"/> 8-XX-YY-T            | 140,000                     | (13X) #51            | <input type="checkbox"/> 15-XX-YY-L | 280,000                     | (14X) #43            |
|                                               |                             |                      | <input type="checkbox"/> 15-XX-YY-T | 280,000                     | (27X) #51            |

## MODEL NUMBER IDENTIFICATION

### Viewing Width Of The Fireplace (Feet)

3-4-5-6-7-8 = Enight Model

9-15 = Only Used For Custom Models

### Viewing Height Of Fireplace (Inches)

20-24-30-36-48-60 = Enight Models Only

OH = Open Hearth (All Heights)

GL = Glass, Direct Vent (All Heights)

# 6-XX-YY-G

### Configuration Of The Fireplace

SS = Single-Sided

ST = See Through (Double-Sided)

BY = Bay

PR = Pier

LC = Left Corner

RC = Right Corner

4S = Four-Sided (Island)

### Style Of Burner

G = Enight Models Only,  
Direct Vent (Ribbon)

R = Ribbon

L = Log Oak (Not Driftwood)

T = Torch

# TABLE OF CONTENTS

| Section Description                                    | Page         |
|--------------------------------------------------------|--------------|
| Introduction & Homeowners Reference                    | 2            |
| UL Rating Plate Location & Model Number Identification | 3            |
| Table of Contents                                      | 4-5          |
| <b>1 Safety Information</b>                            | <b>6</b>     |
| <b>2 Commonwealth of Massachusetts Requirements</b>    | <b>7</b>     |
| <b>3 Specifications</b>                                | <b>8-11</b>  |
| A. Fireplace Dimensions - All Sizes                    | 8            |
| B. Dimensions Schematic                                | 9            |
| C. Fireplace Specifications                            | 10           |
| D. Installation Overview                               | 10           |
| E. Placement Clearance Requirements                    | 10           |
| Non-Combustible Materials Specifications               | 10           |
| Combustible Materials Specifications                   | 10           |
| F. Fireplace Clearances To Combustibles                | 11           |
| <b>4 Prepare The Fireplace</b>                         | <b>12-15</b> |
| A. Standoff Installation                               | 12           |
| B. Nailing Tab Installation                            | 12-13        |
| C. Shipping Bracket Support                            | 14           |
| D. Threaded Rod Requirements                           | 14           |
| E. Threaded Rod Installation Example                   | 15           |
| <b>5 Framing &amp; Mantel Requirements</b>             | <b>17-21</b> |
| A. Important Framing Notes & Framing Dimensions        | 17           |
| ➔ A.1 Framing Dimensions                               | 18           |
| A.2 Framing Dimensions - Recess                        | 19           |
| B.1 Mantel Requirements - With 1/2" Standoffs          | 20           |
| B.2 Mantel Requirements - Without 1/2" Standoffs       | 21           |
| <b>6 Glass Frame Assembly</b>                          | <b>22-23</b> |
| A. Glass Frame Assembly Identification                 | 22           |
| B. Install Glass Frame Assembly/Glass Edge Protectors  | 23           |
| C. Remove Glass Frame Assembly                         | 23           |
| <b>7 Gas Line Specifications &amp; Connection</b>      | <b>24-25</b> |
| ➔ A. Fuel Conversion                                   | 24           |
| ➔ B. Gas Pressure                                      | 24           |
| ➔ C. Gas Connection & Gas Line Purging                 | 24           |
| D. Gas & Electric Access Locations                     | 25           |
| <b>8 Venting</b>                                       | <b>26-43</b> |
| A. Approved Venting & Powervent Systems                | 26           |
| B.1 System Supply Voltage Chart                        | 26           |
| B.2 Powervent Supply Voltage Chart                     | 26           |
| C. RS Series Powervent Specifications                  | 27           |
| D. Chimney Collar Dimensions                           | 27           |
| E. RSIF Series Powervent Specifications                | 28           |
| F. In-line Powervent Preparations - RSIF 180           | 29           |

| Section Description                                                 | Page         |
|---------------------------------------------------------------------|--------------|
| <b>8 Venting Continued</b>                                          | <b>26-43</b> |
| G. Horizontal Vent System Clearance                                 | 30           |
| H. Wall Pass Through                                                | 30           |
| I. Pitot Tube Information                                           | 30           |
| J. Vertical Terminations Guidelines                                 | 31           |
| ➔ K. Horizontal Terminations Guidelines                             | 31           |
| L. Horizontal Cap Location & Clearances                             | 32           |
| M.1 Horizontal RS Powervent Placement Clearances                    | 33           |
| M.2 Horizontal RSIF Powervent Placement Clearances                  | 33           |
| N. Vertical Cap Location & Clearances                               | 34           |
| O. Vertical Cap Location & Clearances - RS012/14/16                 | 35           |
| P. Vertical Cap Location & Clearances - RSIF160/180                 | 35           |
| Q.1 Wall Termination Cap Installation Without Damper                | 36           |
| Q.2 Wall Termination Cap Installation With Damper                   | 36           |
| R.1. Roof Termination Cap Installation With Damper                  | 37           |
| R.2 Roof Termination Cap Installation Without Damper                | 37           |
| S.1 Chase Top Cap Installation Without Damper                       | 38           |
| S.2 Chase Top Cap Installation With Damper                          | 38           |
| T. Chimney Shroud Types & Specifications                            | 39           |
| U. Outside Air-Intake                                               | 40           |
| V. Changing Outside Air From The Side To The Bottom                 | 41           |
| W. Room Air For Combustion - Toe Kick Example 1                     | 42           |
| X. Room Air For Combustion - Toe Kick Example 2                     | 43           |
| <b>9 Optional Venting Accessories</b>                               | <b>44-45</b> |
| A. Vertical Air-Intake Side Chute                                   | 44           |
| B. Universal Exhaust & Intake Louver 8/10 & 12                      | 45           |
| <b>10 Electrical-Includes Standard &amp; Tethered Control Panel</b> | <b>46-55</b> |
| A. Electrical Installation Overview                                 | 46           |
| ➔ B.1 Electrical Schematic - Service                                | 47           |
| ➔ B.2 Electrical Schematic - Field                                  | 48           |
| B.3 Junction Box & Capacitor                                        | 49           |
| C.1 Terminals 1 & 2 - LED Lights                                    | 49           |
| C.2 Terminals 3 & 4 - Main Flame (Smart Home)                       | 50           |
| C.3 Terminals 5 & 6 - Fireplace Power                               | 51           |
| C.4 Terminals 7 & 8 - Powervent Connection                          | 51           |
| C.5 Terminals 9 & 10 - Flue Damper Connection                       | 52           |
| C.6 Terminals 11 & 12 - Flue Damper Prove                           | 52           |
| D. Tethered Control Panel Installation Overview                     | 53           |
| ➔ E.1 Tethered Electric Wiring Schematic - Field                    | 54           |
| ➔ E.2 Tethered Electric Wiring Schematic - Service                  | 55           |
| <b>11 Finishing</b>                                                 | <b>56-57</b> |
| ➔ A.1 Finishing Using 1/2" Clearance Standoffs                      | 56           |
| ➔ A.2 Finishing Using 1/2" Clearance Standoffs                      | 57           |
| <b>12 Lighting &amp; Shutdown</b>                                   | <b>58-59</b> |
| A. Lighting The Fireplace                                           | 58           |
| B. If The Fireplace Does Not Light                                  | 59           |

## TABLE OF CONTENTS

| Section Description |                                                      | Page  |
|---------------------|------------------------------------------------------|-------|
| 13                  | Pressure Testing                                     | 60    |
|                     |                                                      |       |
| 14                  | Finalizing The Installation                          | 60    |
|                     | A. Installing The Media                              | 60    |
|                     | B. Flame Appearance                                  | 60    |
|                     |                                                      |       |
| 15                  | Maintenance                                          | 61    |
|                     | A. Vent System                                       | 61    |
|                     | B. Glass Cleaning & Replacement                      | 61    |
|                     |                                                      |       |
| 16                  | Replacement Parts                                    | 62-64 |
|                     | A. Replacement Parts                                 | 62    |
|                     | B. Glass Size & Specifications                       | 63    |
|                     | C. Horizontal & Vertical Glass Trim Pieces           | 64    |
|                     |                                                      |       |
| 17                  | Service & Troubleshooting                            | 65-67 |
|                     | Table For Documenting Service & Maintenance History  | 65    |
|                     | Basic Troubleshooting                                | 66-67 |
|                     |                                                      |       |
|                     | Hearth & Home Technologies Warranty                  | 68-69 |
|                     |                                                      |       |
|                     | Superbright LED Lights Remote Operating Instructions | 70-78 |

# 1 - SAFETY INFORMATION

This fireplace complies with ANSI Z21.50-2019 / CSA 2.22-2019 Vented Gas Fireplaces and CAN/CSA P.4.1-15.

Installation must conform with local building codes or in the absence of local building codes, with the National Fuel Gas Code, ANSI Z223.1 / NFPA 54 - Current Edition, or the Natural or Propane Installation Code, CAN/CSA B149.1

## A. SAFETY ICON DESIGNATIONS

Various safety icons appear throughout this installation manual. Please familiarize yourself with the icons making sure you understand the serious consequences that may occur if ignored or of handling the products inappropriately.



### IMPORTANT NOTE

This indicates additional instructions that you should consider during the installation.



### DO NOT

This indicates something that you must never do.



### RISK OF FIRE

This designates a danger of risk of fire or damage to property.



### RISK OF EXPLOSION

This designates a danger of risk of an explosion.



### HOT GLASS WARNING

This indicates danger of serious bodily injury or property damage if glass is handled while still hot.



### CAUTION

This indicates danger of serious bodily injury or property damage



### STOP!

This indicates notes that may include reviewing warnings on other pages throughout the manual

## B. IMPORTANT SAFETY CONSIDERATIONS

- Installation and repair should be done only by a qualified service person. The appliance should be inspected by a qualified service person before use. Annual inspection by a qualified service person is required to maintain warranty. When drawing room air for combustion more frequent cleaning may be required due to excessive lint from carpeting, bedding materials, etc. It is imperative that control compartments, burners and circulation air passageways of the appliance be kept clean.
  - Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.
  - Young children should be carefully supervised when they are in the same room as the appliance. Toddlers, young children and others may be susceptible to accidental contact burns. A physical barrier is recommended if there are at risk individuals in the house. To restrict access to a fireplace or stove, install an adjustable safety gate to keep toddlers, young children and other at risk individuals out of the room and away from hot surfaces.
  - Clothing or other flammable material should not be placed on or near the appliance.
  - Adequate accessibility clearances for servicing and proper operation must be maintained.
  - This appliance must not share or be connected to a chimney flue serving any other appliance.
  - Keep area around the appliance clear of combustible materials, gasoline and other flammable vapor and liquids.
  - The flow of combustion and ventilation air must not be obstructed.
  - Due to high temperatures the appliance should be located out of traffic and away from furniture and draperies.
  - The glass front or any part removed for servicing the appliance must be replaced prior to operating the appliance. Work should be done by a qualified service technician.
  - Clean glass only when cool and only with non-abrasive cleansers.
  - Do not operate this appliance with the glass/frame assembly removed, cracked or broken. Replacement of the glass assembly must only be performed by a licensed or qualified service person. **DO NOT SUBSTITUTE MATERIALS.**
  - Do not strike or slam glass assembly.
  - Keep burner and control compartment clean.
  - Do not use this fireplace if any part has been under water. Immediately call a qualified service technician to inspect this appliance and to replace any part of the control system and any gas control which has been under water.
  - **DANGER: Under no circumstances should any solid fuel (wood, coal, paper or cardboard etc.) be used in this appliance.**
  - **STATE OF CA WARNING:** This product and the fuels used to operate this product (liquid propane or natural gas), and the combustion of such fuels, can expose you to chemicals including benzene, which is known to the State of California to cause cancer and reproductive harm.
- For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## 2 - COMMONWEALTH OF MASSACHUSETTS REQUIREMENTS



**NOTE: THE FOLLOWING REQUIREMENTS REFERENCE VARIOUS MASSACHUSETTS AND NATIONAL CODES NOT CONTAINED IN THIS MANUAL.**

For all sidewall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

### INSTALLATION OF CARBON MONOXIDE DETECTORS

At time of installation of side wall horizontally vented gas fueled equipment, the installing plumber or gas-fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gas-fitter shall observe that a battery operated or hard wired carbon monoxide detector is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors.

In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.

In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

### APPROVED CARBON MONOXIDE DETECTORS

Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

### SIGNAGE

A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print no less the one-half inch (1/2) in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".

### INSPECTION

The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08 (2) (a) 1 through 4.

### EXEMPTIONS

The following equipment is exempt from 248 CMR 5.08 (2) (a) 1 through 4: The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

### MANUFACTURES REQUIREMENTS GAS EQUIPMENT VENTING SYSTEM PROVIDED

When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:

Detailed instructions for the installation of the venting system design or the venting system components; and a complete parts list for the venting system design or venting system.

### MANUFACTURES REQUIREMENTS GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED

When the manufacturer of Product Approved side wall horizontally vented gas equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:

The referenced "special venting systems" instructions shall be included with the appliance or equipment installation instructions and; the "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed Installation instructions.

A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

### 3 - SPECIFICATIONS

#### A. FIREPLACE DIMENSIONS - ALL SIZES

| MODEL #                                                                                      | B-VENT<br>FLUE                                                                                                                                  | AIR<br>INTAKE | FINISHING<br>WIDTH - FRONT | FINISHING<br>HEIGHT | FINISHING<br>WIDTH - END | HEIGHT TO<br>TRIM TOP | OVERALL<br>HEIGHT | CENTER<br>OF VENT | OVERALL<br>WIDTH | WEIGHT      |
|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----------------------------|---------------------|--------------------------|-----------------------|-------------------|-------------------|------------------|-------------|
|                                                                                              | The dimensions in green are the allowable finishing width and height required to fit the glass into the fireplace; must not overlap onto glass. |               |                            |                     |                          |                       |                   |                   |                  |             |
|                                                                                              | Ø                                                                                                                                               | Ø             | A                          | B                   | C                        | D                     | E                 | F                 | H                | LBS [KG]*   |
| 3-LC-20-G                                                                                    | 8"                                                                                                                                              | 10"           | 39-31/32 [1,015]           | 20 [508]            | 22-3/16 [564]            | 38 [1,067]            | 46 [1,168]        | 20-7/8 [530]      | 41-3/4 [1,065]   | 366 [166]   |
| 4-LC-20-G                                                                                    | 8"                                                                                                                                              | 10"           | 51-31/32 [1,320]           | 20 [508]            | 22-3/16 [564]            | 38 [1,067]            | 46 [1,168]        | 26-7/8 [683]      | 53-3/4 [1,365]   | 446 [202]   |
| 5-LC-20-G                                                                                    | 8"                                                                                                                                              | 10"           | 63-31/32 [1,625]           | 20 [508]            | 22-3/16 [564]            | 38 [1,067]            | 46 [1,168]        | 32-7/8 [835]      | 65-3/4 [1,670]   | 526 [239]   |
| 6-LC-20-G                                                                                    | 10"                                                                                                                                             | 10"           | 75-31/32 [1,930]           | 20 [508]            | 22-3/16 [564]            | 38 [1,067]            | 46 [1,168]        | 38-7/8 [987]      | 77-3/4 [1,975]   | 508 [276]   |
| 7-LC-20-G                                                                                    | 10"                                                                                                                                             | 10"           | 87-31/32 [2,234]           | 20 [508]            | 22-3/16 [564]            | 38 [1,067]            | 46 [1,168]        | 44-7/8 [1,140]    | 89-3/4 [2,280]   | 688 [321]   |
| 8-LC-20-G                                                                                    | 10"                                                                                                                                             | 12"           | 99-22/23 [2,539]           | 20 [508]            | 22-3/16 [564]            | 40 [1,016]            | 52 [1,321]        | 50-7/8 [1,292]    | 101-3/4 [2,584]  | 806 [366]   |
| 3-LC-24-G                                                                                    | 8"                                                                                                                                              | 10"           | 39-31/32 [1,015]           | 24 [610]            | 22-3/16 [564]            | 42 [1,067]            | 50 [1,270]        | 20-7/8 [530]      | 41-3/4 [1,065]   | 388 [176]   |
| 4-LC-24-G                                                                                    | 8"                                                                                                                                              | 10"           | 51-31/32 [1,320]           | 24 [610]            | 22-3/16 [564]            | 42 [1,067]            | 50 [1,270]        | 26-7/8 [683]      | 53-3/4 [1,365]   | 472 [214]   |
| 5-LC-24-G                                                                                    | 8"                                                                                                                                              | 10"           | 63-31/32 [1,625]           | 24 [610]            | 22-3/16 [564]            | 42 [1,067]            | 50 [1,270]        | 32-7/8 [835]      | 65-3/4 [1,670]   | 555 [252]   |
| 6-LC-24-G                                                                                    | 10"                                                                                                                                             | 10"           | 75-31/32 [1,930]           | 24 [610]            | 22-3/16 [564]            | 42 [1,067]            | 50 [1,270]        | 38-7/8 [987]      | 77-3/4 [1,975]   | 640 [290]   |
| 7-LC-24-G                                                                                    | 10"                                                                                                                                             | 10"           | 87-31/32 [2,234]           | 24 [610]            | 22-3/16 [564]            | 42 [1,067]            | 50 [1,270]        | 44-7/8 [1,140]    | 89-3/4 [2,280]   | 727 [328]   |
| 8-LC-24-G                                                                                    | 10"                                                                                                                                             | 12"           | 99-22/23 [2,539]           | 24 [610]            | 22-3/16 [564]            | 44 [1,118]            | 56 [1,422]        | 50-7/8 [1,292]    | 101-3/4 [2,584]  | 848 [385]   |
| 3-LC-30-G                                                                                    | 8"                                                                                                                                              | 10"           | 39-31/32 [1,015]           | 30 [762]            | 22-3/16 [564]            | 48 [1,219]            | 56 [1,422]        | 20-7/8 [530]      | 41-3/4 [1,065]   | 420 [191]   |
| 4-LC-30-G                                                                                    | 8"                                                                                                                                              | 10"           | 51-31/32 [1,320]           | 30 [762]            | 22-3/16 [564]            | 48 [1,219]            | 56 [1,422]        | 26-7/8 [683]      | 53-3/4 [1,365]   | 510 [231]   |
| 5-LC-30-G                                                                                    | 8"                                                                                                                                              | 10"           | 63-31/32 [1,625]           | 30 [762]            | 22-3/16 [564]            | 48 [1,219]            | 56 [1,422]        | 32-7/8 [835]      | 65-3/4 [1,670]   | 600 [272]   |
| 6-LC-30-G                                                                                    | 10"                                                                                                                                             | 10"           | 75-31/32 [1,930]           | 30 [762]            | 22-3/16 [564]            | 48 [1,219]            | 56 [1,422]        | 38-7/8 [987]      | 77-3/4 [1,975]   | 692 [314]   |
| 7-LC-30-G                                                                                    | 10"                                                                                                                                             | 10"           | 87-31/32 [2,234]           | 30 [762]            | 22-3/16 [564]            | 48 [1,219]            | 56 [1,422]        | 44-7/8 [1,140]    | 89-3/4 [2,280]   | 782 [355]   |
| 8-LC-30-G                                                                                    | 10"                                                                                                                                             | 12"           | 99-22/23 [2,539]           | 30 [762]            | 22-3/16 [564]            | 50 [1,270]            | 62 [1,574]        | 50-7/8 [1,292]    | 101-3/4 [2,584]  | 910 [413]   |
| 3-LC-36-G                                                                                    | 8"                                                                                                                                              | 10"           | 39-31/32 [1,015]           | 36 [914]            | 22-3/16 [564]            | 54 [1,372]            | 62 [1,575]        | 20-7/8 [530]      | 41-3/4 [1,065]   | 452 [205]   |
| 4-LC-36-G                                                                                    | 8"                                                                                                                                              | 10"           | 51-31/32 [1,320]           | 36 [914]            | 22-3/16 [564]            | 54 [1,372]            | 62 [1,575]        | 26-7/8 [683]      | 53-3/4 [1,365]   | 550 [249]   |
| 5-LC-36-G                                                                                    | 8"                                                                                                                                              | 10"           | 63-31/32 [1,625]           | 36 [914]            | 22-3/16 [564]            | 54 [1,372]            | 62 [1,575]        | 32-7/8 [835]      | 65-3/4 [1,670]   | 649 [295]   |
| 6-LC-36-G                                                                                    | 10"                                                                                                                                             | 10"           | 75-31/32 [1,930]           | 36 [914]            | 22-3/16 [564]            | 54 [1,372]            | 62 [1,575]        | 38-7/8 [987]      | 77-3/4 [1,975]   | 742 [337]   |
| 7-LC-36-G                                                                                    | 10"                                                                                                                                             | 10"           | 87-31/32 [2,234]           | 36 [914]            | 22-3/16 [564]            | 54 [1,372]            | 62 [1,575]        | 44-7/8 [1,140]    | 89-3/4 [2,280]   | 838 [380]   |
| 8-LC-36-G                                                                                    | 10"                                                                                                                                             | 12"           | 99-22/23 [2,539]           | 36 [914]            | 22-3/16 [564]            | 56 [1,422]            | 68 [1,727]        | 50-7/8 [1,292]    | 101-3/4 [2,584]  | 973 [441]   |
| 3-LC-48-G                                                                                    | 8"                                                                                                                                              | 10"           | 39-31/32 [1,015]           | 48 [1,219]          | 22-3/16 [564]            | 66 [1,676]            | 74 [1,880]        | 20-7/8 [530]      | 41-3/4 [1,065]   | 518 [235]   |
| 4-LC-48-G                                                                                    | 8"                                                                                                                                              | 10"           | 51-31/32 [1,320]           | 48 [1,219]          | 22-3/16 [564]            | 66 [1,676]            | 74 [1,880]        | 26-7/8 [683]      | 53-3/4 [1,365]   | 626 [284]   |
| 5-LC-48-G                                                                                    | 8"                                                                                                                                              | 10"           | 63-31/32 [1,625]           | 48 [1,219]          | 22-3/16 [564]            | 66 [1,676]            | 74 [1,880]        | 32-7/8 [835]      | 65-3/4 [1,670]   | 734 [333]   |
| 6-LC-48-G                                                                                    | 10"                                                                                                                                             | 10"           | 75-31/32 [1,930]           | 48 [1,219]          | 22-3/16 [564]            | 66 [1,676]            | 74 [1,880]        | 38-7/8 [987]      | 77-3/4 [1,975]   | 842 [382]   |
| 7-LC-48-G                                                                                    | 10"                                                                                                                                             | 10"           | 87-31/32 [2,234]           | 48 [1,219]          | 22-3/16 [564]            | 66 [1,676]            | 74 [1,880]        | 44-7/8 [1,140]    | 89-3/4 [2,280]   | 951 [431]   |
| 8-LC-48-G                                                                                    | 10"                                                                                                                                             | 12"           | 99-22/23 [2,539]           | 48 [1,219]          | 22-3/16 [564]            | 68 [1,727]            | 80 [2,032]        | 50-7/8 [1,292]    | 101-3/4 [2,584]  | 1,098 [498] |
| 3-LC-60-G                                                                                    | 8"                                                                                                                                              | 10"           | 39-31/32 [1,015]           | 60 [1,524]          | 22-3/16 [564]            | 78 [1,981]            | 86 [2,184]        | 20-7/8 [530]      | 41-3/4 [1,065]   | 517 [235]   |
| 4-LC-60-G                                                                                    | 8"                                                                                                                                              | 10"           | 51-31/32 [1,320]           | 60 [1,524]          | 22-3/16 [564]            | 78 [1,981]            | 86 [2,184]        | 26-7/8 [683]      | 53-3/4 [1,365]   | 700 [318]   |
| 5-LC-60-G                                                                                    | 8"                                                                                                                                              | 10"           | 63-31/32 [1,625]           | 60 [1,524]          | 22-3/16 [564]            | 78 [1,981]            | 86 [2,184]        | 32-7/8 [835]      | 65-3/4 [1,670]   | 822 [373]   |
| 6-LC-60-G                                                                                    | 10"                                                                                                                                             | 10"           | 75-31/32 [1,930]           | 60 [1,524]          | 22-3/16 [564]            | 78 [1,981]            | 86 [2,184]        | 38-7/8 [987]      | 77-3/4 [1,975]   | 943 [428]   |
| 7-LC-60-G                                                                                    | 10"                                                                                                                                             | 10"           | 87-31/32 [2,234]           | 60 [1,524]          | 22-3/16 [564]            | 78 [1,981]            | 86 [2,184]        | 44-7/8 [1,140]    | 89-3/4 [2,280]   | 1,064 [483] |
| 8-LC-60-G                                                                                    | 10"                                                                                                                                             | 12"           | 99-22/23 [2,539]           | 60 [1,524]          | 22-3/16 [564]            | 80 [2,032]            | 92 [2,336]        | 50-7/8 [1,292]    | 101-3/4 [2,584]  | 1,151 [522] |
| KEY = INCHES [MM] FOR COLUMNS A-G                                                            |                                                                                                                                                 |               |                            |                     |                          |                       |                   |                   |                  |             |
| WEIGHT = LBS [KG] *Unit weight includes the fireplace, the glass panels and the glass media. |                                                                                                                                                 |               |                            |                     |                          |                       |                   |                   |                  |             |


# 3 - SPECIFICATIONS

## B. DIMENSIONS SCHEMATIC


The hood shall be supported at specific locations using 1/4-20 UNC threaded rods. For more information, refer to Section 3 (Prepare The Fireplace).

*Model 4-LC-24-G Shown In Example.  
The full shop drawing for each width  
can be found under the RESOURCES tab  
at the [stellar.heatnglo.com](http://stellar.heatnglo.com) website.*


TOP VIEW

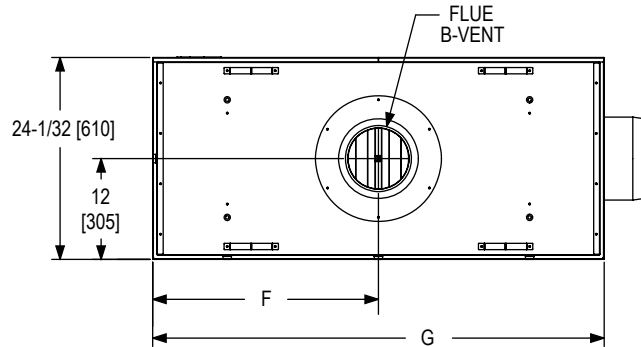

FRONT VIEW

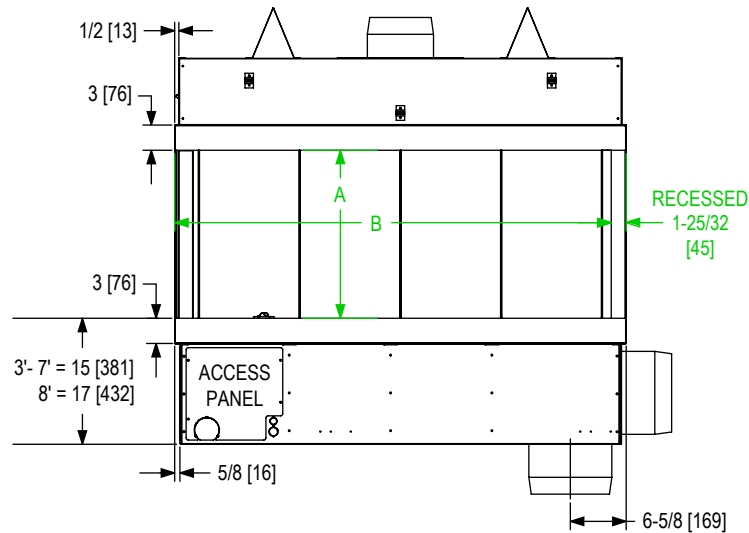

LEFT SIDE VIEW

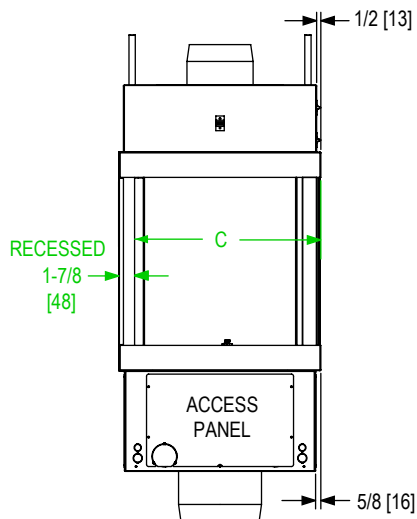

RIGHT SIDE VIEW

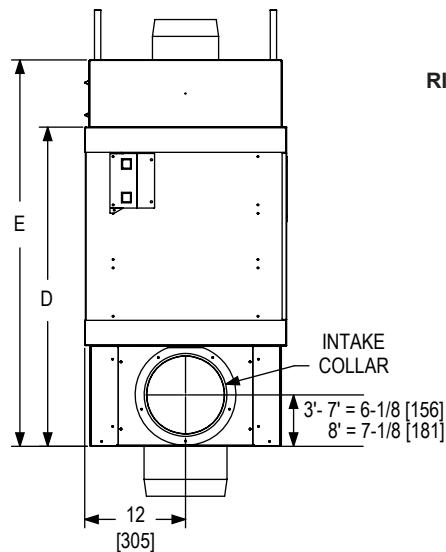


Figure 3B

inches [mm]

## 3 - SPECIFICATIONS

### C. SPECIFICATIONS

| MODEL WIDTH | B-VENT | OA  | REG PV | IN-LINE PV | BTU'S   | ORIFICE NG | ORIFICE Propane |
|-------------|--------|-----|--------|------------|---------|------------|-----------------|
| 3'          | 8"     | 10" | RS012  | RSIF160    | 40,000  | (2X) #43   | (2X) #55        |
| 4'          | 8"     | 10" | RS012  | RSIF160    | 60,000  | (3X) #43   | (3X) #55        |
| 5'          | 8"     | 10" | RS012  | RSIF160    | 80,000  | (4X) #43   | (4X) #55        |
| 6'          | 10"    | 10" | RS014  | RSIF180    | 100,000 | (5X) #43   | (5X) #55        |
| 7'          | 10"    | 10" | RS014  | RSIF180    | 120,000 | (6X) #43   | (6X) #55        |
| 8'          | 10"    | 12" | RS014  | RSIF180    | 140,000 | (7X) #43   | (7X) #55        |



**WARNING: NON-COMBUSTIBLE ZONE: USE ONLY NON-COMBUSTIBLE MATERIAL IN THIS AREA FOR ENTIRE WIDTH OF FIREPLACE. DO NOT USE WOOD, SHEETROCK, ETC., IN THIS ZONE.**



**NOTE: OTHER CLEARANCES APPLY. ALL CLEARANCES MUST BE MAINTAINED.**  
Refer to Section 4 (Framing), Section 5 (Non-combustible Zone) and Section 10 (Finishing) for more information.



**NOTE: The qualified installer should follow the procedure best suited for the installation.**

### D. INSTALLATION OVERVIEW

1. Frame should be built after the fireplace is installed or extra clearance must be planned for at the intake collar. Framing must allow for vent installation.
2. If masonry (optional) will be used, prepare foundation for the masonry load. A lintel is required to support the added weight above the fireplace.
3. Install hearth if desired.
4. Insert fireplace into framing.
5. Double check clearances to combustibles.
6. Complete gas line installation.
7. Complete electrical hook-up.
8. Complete venting installation.
9. Install facing material, mantel or cabinetry.
10. Install glass media/natural stone, and any interior options including mirrors and/or driftwood log set.
11. Verify proper operation of fireplace and all components.

### E. PLACEMENT CLEARANCE REQUIREMENTS

- This fireplace must be installed on a level surface capable of supporting the fireplace and venting.
- Fireplace must be placed directly on wood or non-combustible surface (not linoleum or carpet) extending entire depth and width of fireplace.
- This fireplace may be installed in a bedroom.

#### Non-Combustible Materials Specifications

Material which will not ignite and burn.  
Such materials are those consisting entirely of steel, iron, brick, tile, concrete, slate, glass or plasters, or any combination thereof.

Materials that are reported as passing **ASTM E 136, Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750 °C** shall be considered non-combustible materials.

#### Combustible Materials Specifications

Materials made of or surfaced with wood, compressed paper, plant fibers, plastics, or other material that can ignite and burn, whether flame proofed or not, or plastered shall be considered combustible materials.

### 3 - SPECIFICATIONS



#### F. FIREPLACE CLEARANCES TO COMBUSTIBLES

|                                | Inches | Millimeters |
|--------------------------------|--------|-------------|
| From unit left & right sides   | 1      | [25]        |
| To flooring under fireplace    | 0      | 0           |
| Unit top to ceiling            | 6      | [152]       |
| Unit side to adjacent sidewall | 1      | [25]        |

##### CLEARANCES SHOWN ARE MINIMUM TO COMBUSTIBLES

NON-COMBUSTIBLE FRAMING AND FINISHING MATERIALS ALLOWED RIGHT UP TO THE FIREPLACE.

6 [152] Top Standoffs; shipped flat.  
Quantity will vary by model & size.  
Refer to Section 3 (Prepare The Fireplace)  
for more information.

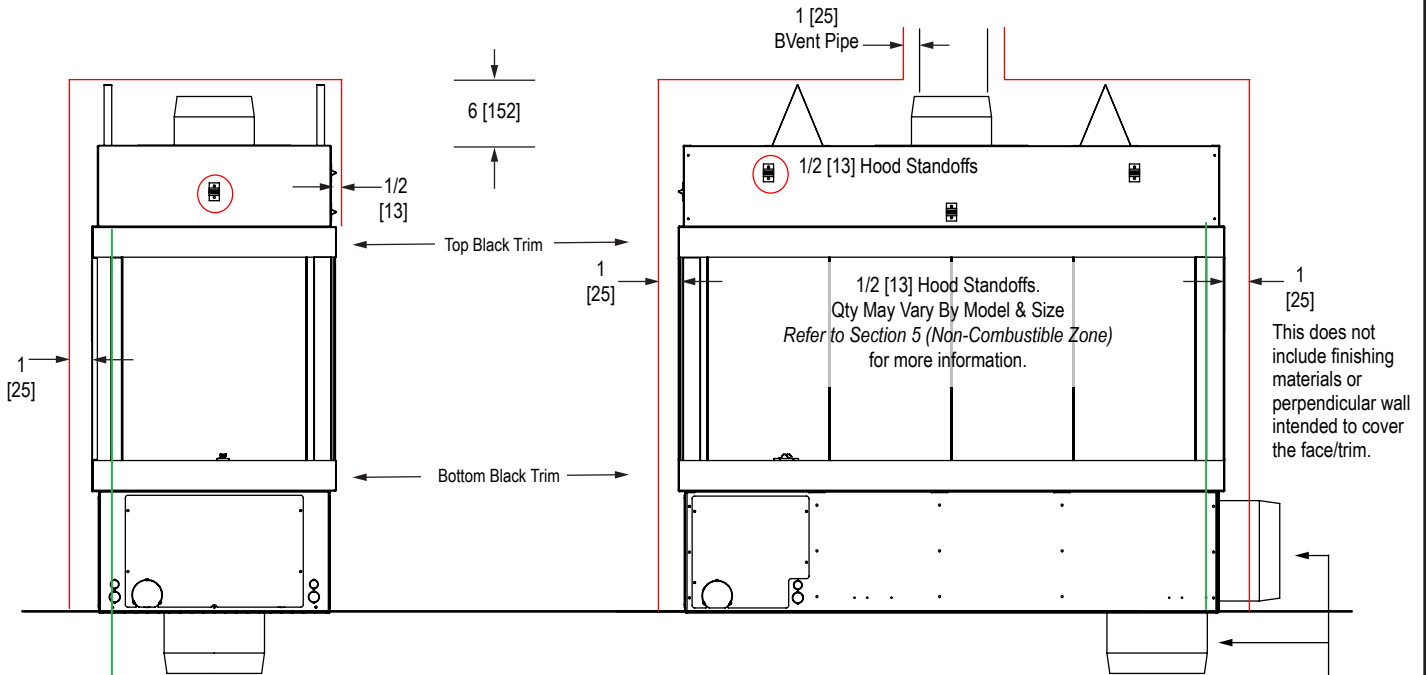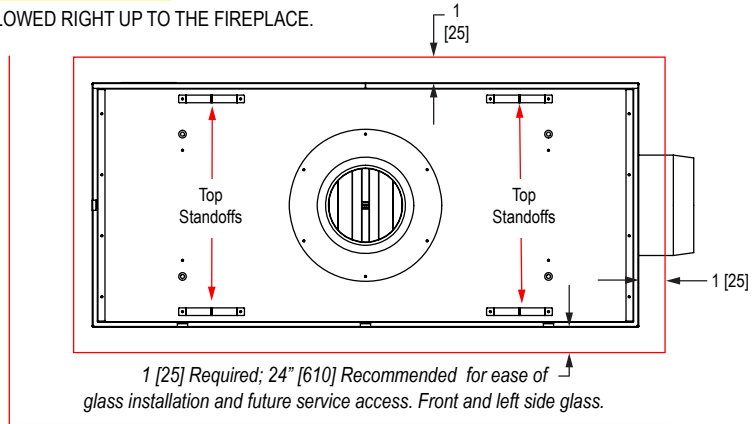

Can be a recess and/or combustible perpendicular wall extending past the face of the fireplace. Applies to both sides of glass.  
Refer to Section 3 (Specifications - Single Sided Dimensions)

Air-intake collar can be rotated to vent off the side or from the bottom of the fireplace.  
Refer to Section 9A (Venting Specifications)

inches [mm]

Combustible finishing materials may cover the 3 [76] top and bottom black trim.

Do not overlap glass.

Combustible framing allowed right up to the fireplace below the viewing area only.

A combustible mantel may be placed at the top of the viewing area. Do not overlap glass.

A combustible hearth extension may be used below the viewing area. Do not overlap glass.

Do not place on carpet, vinyl or soft surfaces.

Figure 3F

## 4 - PREPARE THE FIREPLACE



**CAUTION:** FIREPLACE IS NOT LOAD-BEARING.



**NOTE:** OTHER CLEARANCES APPLY. ALL CLEARANCES MUST BE MAINTAINED.

### A. STANDOFF INSTALLATION

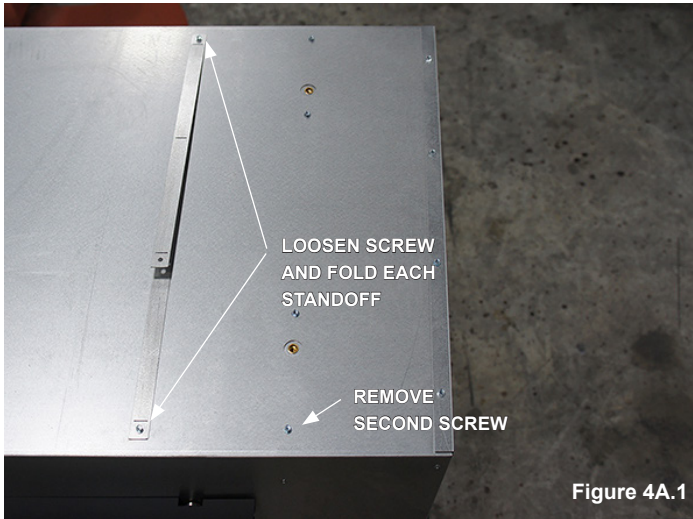


Figure 4A.1



Figure 4A.2

#### STEP 1: Refer to Figure 4A.1

The standoffs will be shipped in a flat state placed on the firebox top. Locate the standoffs and loosen the screws holding them in place.

#### STEP 2: Refer to Figure 4A.2

Fold the center of the standoff up and both ends out at the perforated lines. Using Figure 4A.2 for reference, locate the second pre-installed screw on the firebox top at each standoff location. Remove the screw, pivot the folded standoff into location and re-install the screw to secure the standoff. Tighten up the screw that was loosened in Step 1.

#### STANDOFFS

The fireplace has standoffs that are secured with two (2) screws each.

#### NAILING TABS

The fireplace has nailing tabs that are secured with two (2) screws each.

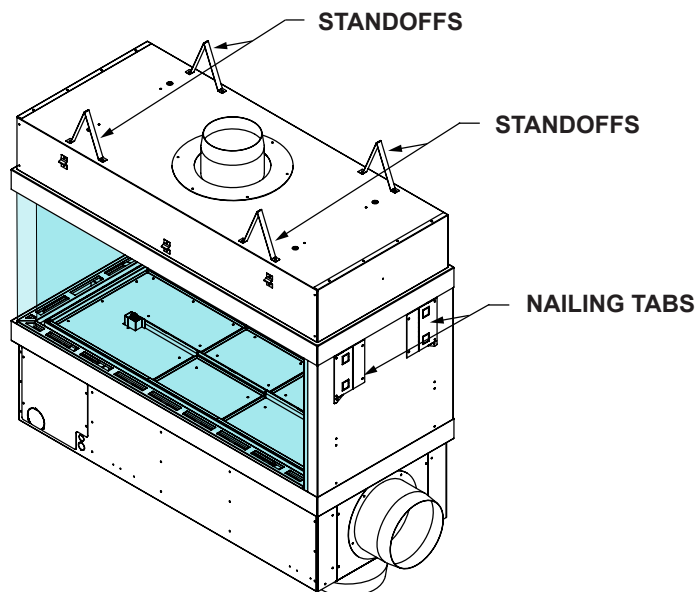


Figure 4A.3

Placement of the standoffs and nailing tabs.

## 4 - PREPARE THE FIREPLACE

### B. NAILING TABS



Figure 4B.1

#### STEP 1: Refer to Figure 4B.1

The nailing tabs will be shipped in a flat state placed on the firebox back. Locate the nailing tabs and remove the screws holding them in place.



Figure 4B.2

#### STEP 2: Refer to Figure 4B.2

Bend the two (2) small tabs out on each nailing flange at the perforated lines. Using Figure 4A.4 for reference, locate the pre-drilled holes on the firebox side each nailing tab will be placed at.

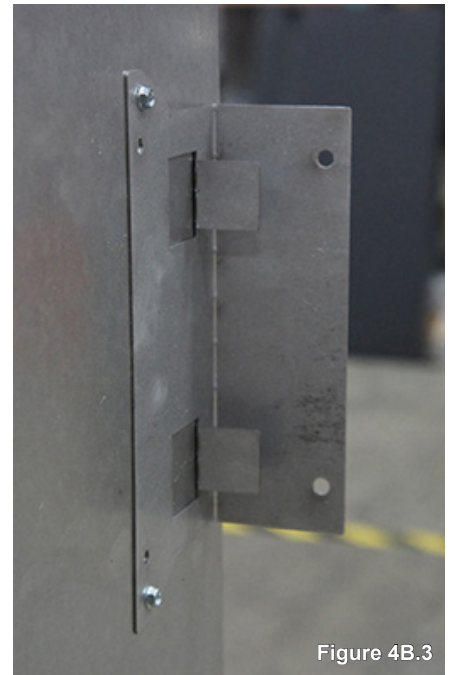


Figure 4B.3

#### STEP 3: Refer to Figure 4B.3 & Figure 4B.4

Set each nailing tab in place and secure using two (2) screws each. Bend the nailing tab out from fireplace at the remaining perforated line.



Figure 4B.4



Figure 4B.5

Reference Figure 4B.4 & Figure 4B.5 for nailing tabs on the glass panel side.

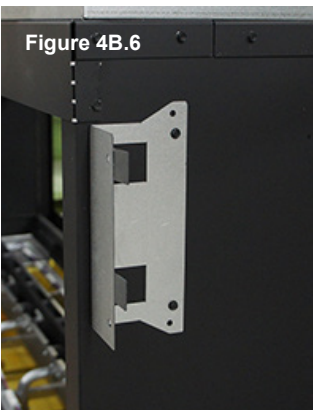


Figure 4B.6



Figure 4B.7

Reference Figure 4B.6 & Figure 4B.7 for the nailing tabs on back of the fireplace for the solid panel side.


The nailing tabs will ensure the 1" minimum clearance is kept to combustible framing. Refer to Figure 4B.5 and Figure 4B.7.

Depending on your installation and how you frame it out, you may not use the provided nailing tabs.

## 4 - PREPARE THE FIREPLACE

### C. SHIPPING SUPPORT BRACKET

The hood must be supported at specific locations using 1/4-20 UNC threaded rods. Temporary support brackets are put in place for shipping and installation support and must stay in place until fireplace hood is fully supported.

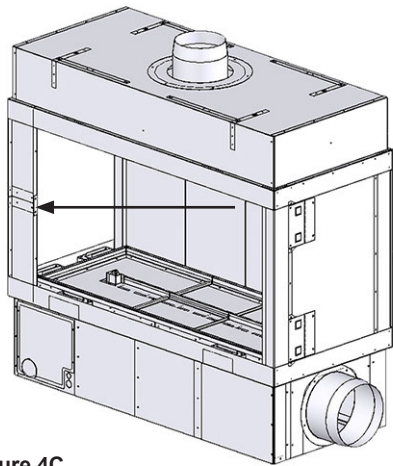

**Figure 4C**  
Temporary Shipping Support Bracket


1. Install the threaded rods in the appropriate locations as noted below in Section D (Threaded Rods).
2. Level the fireplace.
3. Ensure fireplace is fully supported and leveled and then remove support bracket.

**CAUTION! RISK OF INJURY!**  
**DO NOT** remove support bracket until fireplace is fully supported and level.


### D. THREADED RODS

The fireplace requires a threaded rod to be placed at the glass-to-glass intersection. Placement of the required threaded rods is at the I & J intersection at the front left and back left corners notated as REQUIRED I & J locations. Additional locations are provided if your installation needs more support notated as OPTIONAL I, J & K locations. Once the required threaded rod(s) are in place and the hood fully supported, the temporary support brackets may be taken off. See following page for threaded rod installation option.

**Figure 4D.1 - 3' 4' & 5' Models**  
Top View

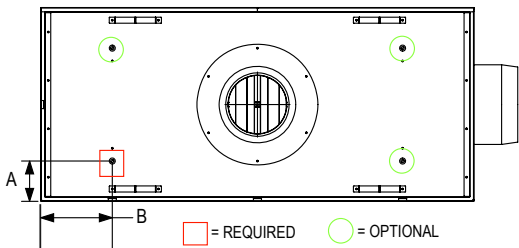

**Figure 4D.2 - 6', 7' & 8' Models**  
Top View

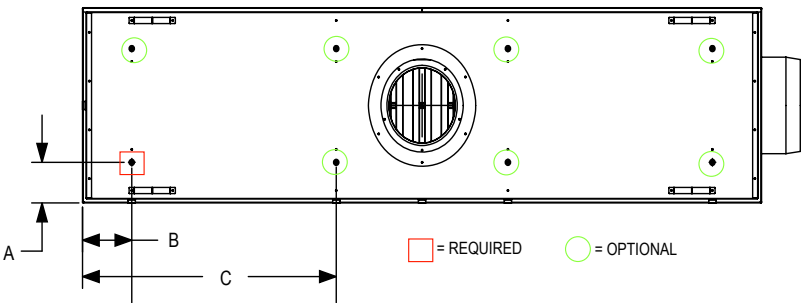

The hood shall be supported at specific locations using 1/4-20 UNC threaded rods.

Qty 1 threaded rods are required in the front right hand quarter.

All other locations are optional if additional support is needed.


| MODEL | QTY | Additional | Hood Weight | A      |     | B      |     | C      |     |
|-------|-----|------------|-------------|--------|-----|--------|-----|--------|-----|
|       | REQ | OPT        | LBS [KG]    | Inches | mm  | Inches | mm  | Inches | mm  |
| 3' LC | 1   | 3          | 81 [37]     | 5      | 127 | 6-3/8  | 162 | NA     | NA  |
| 4' LC | 1   | 3          | 98 [44]     | 5      | 127 | 8-7/8  | 225 | NA     | NA  |
| 5' LC | 1   | 3          | 119 [54]    | 5      | 127 | 11-7/8 | 302 | NA     | NA  |
| 6' LC | 1   | 7          | 139 [63]    | 5      | 127 | 6-7/8  | 175 | 26-7/8 | 683 |
| 7' LC | 1   | 7          | 158 [72]    | 5      | 127 | 6-7/8  | 175 | 32-7/8 | 835 |
| 8' LC | 1   | 7          | 202 [92]    | 5      | 127 | 6-7/8  | 175 | 38-7/8 | 987 |

## 4 - PREPARE THE FIREPLACE

### E. THREADED ROD INSTALLATION (EXAMPLE)

There are several different ways to support the fireplace top and one option is to use a Unistrut installed over the fireplace that is secured to structurally sound framing. Refer to Figure 4E.1.

For each threaded rod installation you may need:

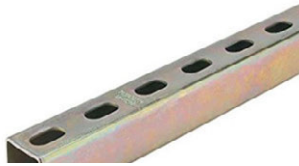

Super Strut  
or Uni-Strut

(Qty Per Threaded Rod Used)



Qty 1  
1/4-20  
Eyebolt



Qty 1  
Threaded  
Quick Link



Qty 1  
1/4-20  
Turnbuckle



Qty 1  
1/4-20  
Threaded Rod  
or All Thread



Qty 1  
Fender  
Washer



Up To Qty  
3 1/4-20  
Nut



Figure 4E.1

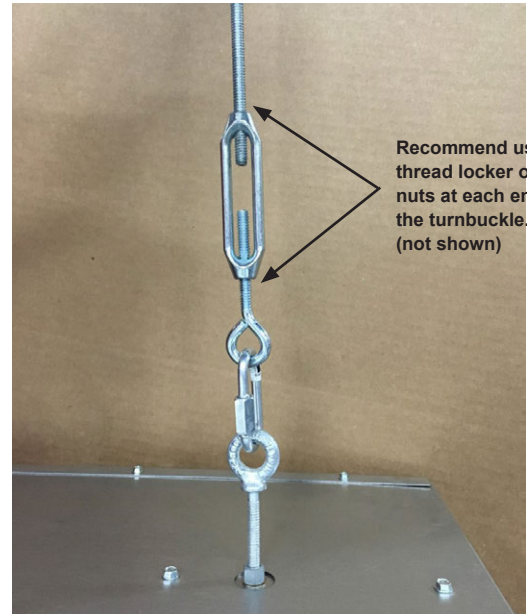


Figure 4E.2

- Install the threaded rod fully into the threaded fastener located on top of the fireplace.
- Insert the threaded rod into a hole in the Unistrut straight above the threaded fastener located on top the fireplace.
- Use a fender washer and nut on the top end of the threaded rod to adjust the height of the fireplace opening. Make sure the opening dimension is exact all the way around. Use thread locker to secure the nut from loosening (not shown).
- If the top of the threaded rod is to be secured into blind threaded fastener or if there isn't clearance above to adjust the rod, you can use a turnbuckle to adjust the height.
- Install an eyebolt fully into the threaded nut located on top of the fireplace.
- Use a quick link to connect the eye bolt to the reverse thread side of the turnbuckle.
- Thread the threaded rod into the normal side of the turnbuckle.
- Use the thread locker or jam nuts to secure the turnbuckle from loosening.

PAGE INTENTIONALLY LEFT BLANK

## 5 - FRAMING & MANTEL REQUIREMENTS

### A. IMPORTANT FRAMING NOTES & FRAMING DIMENSIONS



**NOTE:** Framing dimensions should allow for wall covering thickness and fireplace facing materials. When using a hearth, adjust rough opening size as necessary to maintain at least minimum clearance requirements.



**CAUTION:** Install fireplace on metal, concrete or hard wood surface extending the full width and depth of fireplace.



**CAUTION:** Vent cap location must be in compliance with guidelines in *Section 8 (Venting)* of this manual.



**NOTE:** REFER TO DIMENSIONS SECTION FOR ALLOWABLE FINISHING DIMENSIONS REQUIRED TO FIT THE GLASS PANELS INTO THE FIREPLACE.

FINISHING MATERIALS MUST NOT OVERLAP THE DIMENSIONS HIGHLIGHTED IN GREEN IN *SECTION 2 (DIMENSIONS)*. NEVER COVER THE GLASS WITH FINISHING MATERIALS.



**NOTE:** DO NOT PIERCE ANY OF THE BLACK PAINTED SURFACES WITH SCREWS, RIVETS, ETC. THIS INCLUDES THE 3" [76mm] BLACK TOP AND BOTTOM GLASS TRIM AND ANY PAINTED SIDES ADJACENT TO THE GLASS.

If masonry is to be used (optional), prepare the necessary foundation for the masonry load. When masonry construction is being used, a lintel must be used over top of fireplace to support the added weight. Build hearth to desired size and height. If a hearth extension is desired, combustible material may be used.

#### Review the IMPORTANT FRAMING NOTES fully prior to framing.

**IMPORTANT FRAMING NOTES:** inches [mm]

FRAMING SHOULD BE BUILT AFTER THE FIREPLACE IS INSTALLED OR EXTRA CLEARANCE MUST BE PLANNED FOR AT THE INTAKE COLLAR AND FOR THE THICKNESS OF MATERIALS USED.

THE FIREPLACE IS NOT LOAD-BEARING.

FRAMING DIMENSIONS ASSUMING 1/2 [13] DRYWALL OR NON-COMBUSTIBLE BOARD USED.

THESE DIMENSIONS REPRESENT THE FRAMING DIMENSIONS FOR COMBUSTIBLE MATERIAL.

NON-COMBUSTIBLE FRAMING AND FINISHING MATERIALS MAY BE USED WITHIN THESE DIMENSIONS RIGHT UP TO THE UNIT.

NO COMBUSTIBLE MATERIAL WITHIN 6 [152] OF THE TOP OF THE FIREPLACE.

NO COMBUSTIBLE MATERIAL WITHIN 1 [25] OF THE SIDES, BACK AND FRONT OF THE FIREPLACE.

COMBUSTIBLE MATERIAL MAY BE PLACED DIRECTLY ON THE FACE OF THE FIREPLACE ADJACENT TO THE GLASS.

SEE *SECTION 5 (NON-COMBUSTIBLE ZONE)* AND *SECTION 10 (FINISHING)* FOR DETAILS REGARDING 1/2 [25] STANDOFFS.

STEEL SURFACE MAY BE COVERED WITH NON-COMBUSTIBLE FINISHING MATERIAL.

1 [25] CLEARANCE TO THE B-VENT MUST BE MAINTAINED.


## 5 - FRAMING & MANTEL REQUIREMENTS

### A.1 FRAMING DIMENSIONS

NOTE: THE FIREPLACE IS NOT LOAD BEARING

NOTE: IF ANY FRAMING IS REQUIRED BETWEEN THE "B" HEIGHT AND THE TOP OF THE VIEWING OPENING, IT MUST BE STEEL STUDS. SEE 5B (NON-COMBUSTIBLE ZONE) FOR DETAILS.

Figure 5A.1

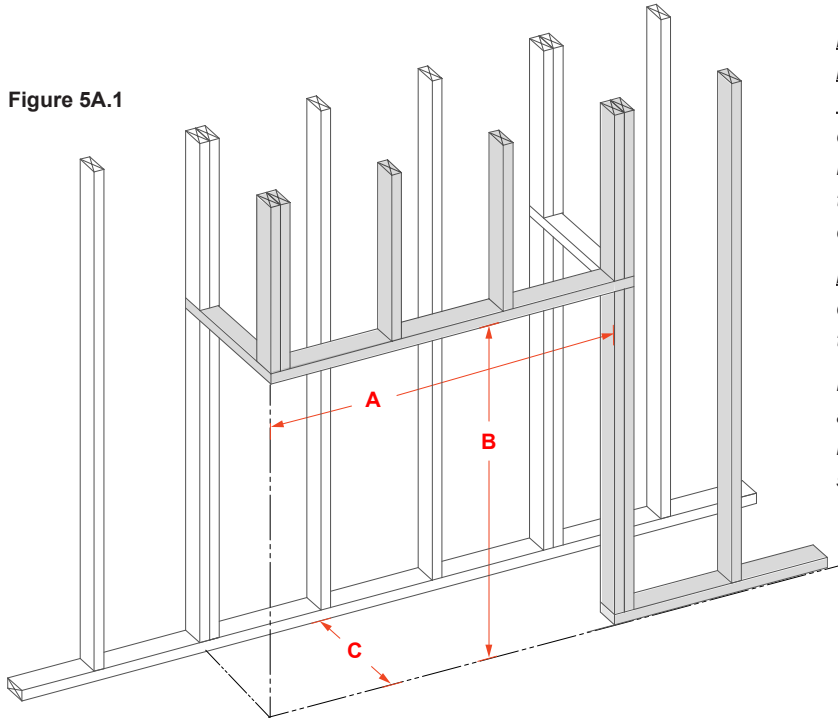

**Framing dimensions are a 1/2 [13] less than the required clearance dimension for each side/face with 1/2 [13] clearance standoffs. This allows for 1/2 [13] combustible backerboard (sheetrock), above the non-combustible zone air space, to bump up against the standoffs and seamlessly cover the top trim face of the fireplace.**

**If 1/2 [13] clearance standoffs are removed, the framing dimensions allow for 1/2 [13] non-combustible material to flush out with/up to the top trim face of the fireplace.**

**Refer to Sections 5B.1 & 5B.2 (Mantel Requirements) and Section 11 (Finishing) for more information on installations using and not using the 1/2 [13] clearance standoffs.**

inches [mm]

| MODEL     | A Width         | B Height   | C Depth        |
|-----------|-----------------|------------|----------------|
| 3-LC-20-G | 42-1/4 [1,073]  | 52 [1,321] | 24-17/32 [623] |
| 4-LC-20-G | 54-1/4 [1,378]  | 52 [1,321] | 24-17/32 [623] |
| 5-LC-20-G | 66-1/4 [1,683]  | 52 [1,321] | 24-17/32 [623] |
| 6-LC-20-G | 78-1/4 [1,988]  | 52 [1,321] | 24-17/32 [623] |
| 7-LC-20-G | 90-1/4 [2,292]  | 52 [1,321] | 24-17/32 [623] |
| 8-LC-20-G | 102-1/4 [2,597] | 58 [1,473] | 24-17/32 [623] |
| 3-LC-24-G | 42-1/4 [1,073]  | 56 [1,422] | 24-17/32 [623] |
| 4-LC-24-G | 54-1/4 [1,378]  | 56 [1,422] | 24-17/32 [623] |
| 5-LC-24-G | 66-1/4 [1,683]  | 56 [1,422] | 24-17/32 [623] |
| 6-LC-24-G | 78-1/4 [1,988]  | 56 [1,422] | 24-17/32 [623] |
| 7-LC-24-G | 90-1/4 [2,292]  | 56 [1,422] | 24-17/32 [623] |
| 8-LC-24-G | 102-1/4 [2,597] | 62 [1,574] | 24-17/32 [623] |
| 3-LC-30-G | 42-1/4 [1,073]  | 62 [1,574] | 24-17/32 [623] |
| 4-LC-30-G | 54-1/4 [1,378]  | 62 [1,574] | 24-17/32 [623] |
| 5-LC-30-G | 66-1/4 [1,683]  | 62 [1,574] | 24-17/32 [623] |
| 6-LC-30-G | 78-1/4 [1,988]  | 62 [1,574] | 24-17/32 [623] |
| 7-LC-30-G | 90-1/4 [2,292]  | 62 [1,574] | 24-17/32 [623] |
| 8-LC-30-G | 102-1/4 [2,597] | 68 [1,727] | 24-17/32 [623] |

| MODEL     | A Width         | B Height   | C Depth        |
|-----------|-----------------|------------|----------------|
| 3-LC-36-G | 42-1/4 [1,073]  | 68 [1,727] | 24-17/32 [623] |
| 4-LC-36-G | 54-1/4 [1,378]  | 68 [1,727] | 24-17/32 [623] |
| 5-LC-36-G | 66-1/4 [1,683]  | 68 [1,727] | 24-17/32 [623] |
| 6-LC-36-G | 78-1/4 [1,988]  | 68 [1,727] | 24-17/32 [623] |
| 7-LC-36-G | 90-1/4 [2,292]  | 68 [1,727] | 24-17/32 [623] |
| 8-LC-36-G | 102-1/4 [2,597] | 74 [1,880] | 24-17/32 [623] |
| 3-LC-48-G | 42-1/4 [1,073]  | 80 [2,032] | 24-17/32 [623] |
| 4-LC-48-G | 54-1/4 [1,378]  | 80 [2,032] | 24-17/32 [623] |
| 5-LC-48-G | 66-1/4 [1,683]  | 80 [2,032] | 24-17/32 [623] |
| 6-LC-48-G | 78-1/4 [1,988]  | 80 [2,032] | 24-17/32 [623] |
| 7-LC-48-G | 90-1/4 [2,292]  | 80 [2,032] | 24-17/32 [623] |
| 8-LC-48-G | 102-1/4 [2,597] | 86 [2,184] | 24-17/32 [623] |
| 3-LC-60-G | 42-1/4 [1,073]  | 92 [2,336] | 24-17/32 [623] |
| 4-LC-60-G | 54-1/4 [1,378]  | 92 [2,336] | 24-17/32 [623] |
| 5-LC-60-G | 66-1/4 [1,683]  | 92 [2,336] | 24-17/32 [623] |
| 6-LC-60-G | 78-1/4 [1,988]  | 92 [2,336] | 24-17/32 [623] |
| 7-LC-60-G | 90-1/4 [2,292]  | 92 [2,336] | 24-17/32 [623] |
| 8-LC-60-G | 102-1/4 [2,597] | 98 [2,489] | 24-17/32 [623] |

## 5 - FRAMING & MANTEL REQUIREMENTS

### A.2 FRAMING DIMENSIONS - RECESS



**NOTE: IT IS RECOMMENDED TO SET THE FIREPLACE IN TO PLACE PRIOR TO INSTALLING THE FRAMING.**  
Framing dimensions noted are minimum framing dimensions to combustible materials only, and it is the responsibility of the installer for determining framing dimensions that allow for wall covering thickness and fireplace facing materials for each individual installation.

**RECESS NOTE:** To bring the wall on either side of the fireplace more flush with the back wall of the fireplace, the walls may be framed out. 1-7/8 [48] of the fireplace may be covered in combustible material, add the 1 [25] of clearance from the back wall to the frame wall to get a 2-7/8 [73] build-out.

The wall finishing material must be subtracted from that number.

Finishing material must never overlap the glass.

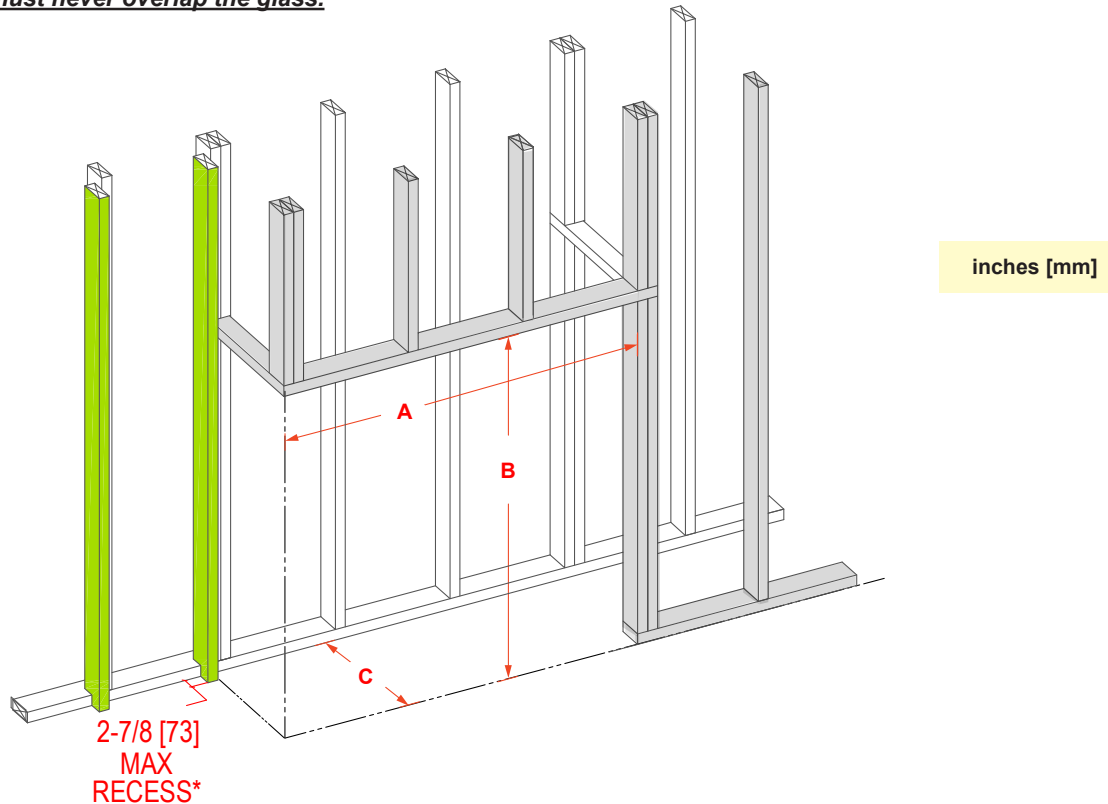


Figure 5A.2

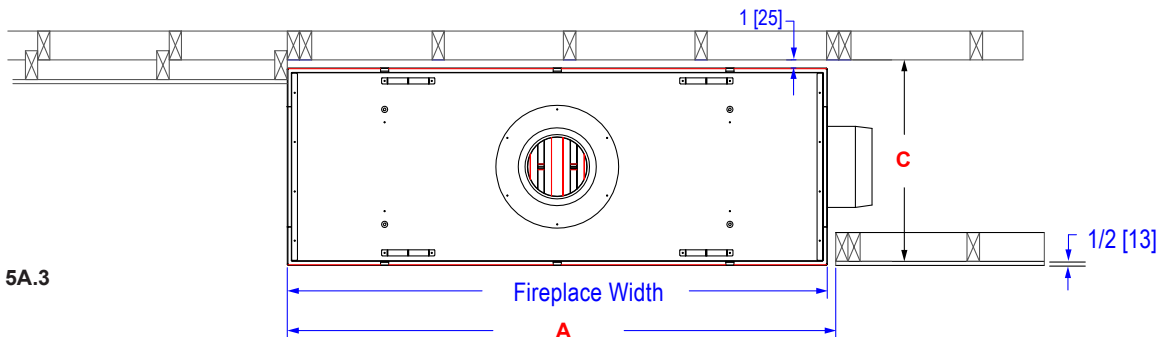


Figure 5A.3

## 5 - FRAMING & MANTEL REQUIREMENTS

### B.1 NON-COMBUSTIBLE ZONE - USING THE PROVIDED 1/2" STANDOFFS

The fireplace has standoffs installed on the front of the fireplace standard from the factory. They are located on the upper left, center and right front of the fireplace and are to ensure that the 1/2 [13] required clearance to combustibles on the surface of the fireplace is maintained.

If the standoffs are removed, only non-combustible material can be installed against the surface of the fireplace such as a non-combustible backer cement board. 1/2 [13] minimum thickness must be used in the space\* between the top of the 3 [76] trim to the combustible framing the full width of the fireplace. The space\* includes a 7 [178] minimum above the top of the fireplace that is recommended for ease of attachment. \*= 15 [381] for 3'-7" units and 19 [483] for 8' units.

Refer to Figure 5B.1 below for a standard installation using the provided 1/2 [13] standoffs.  
Refer to Figure 5B.2 for requirements when not using the provided 1/2 [13] standoffs.


INCHES [MM]



1/2 [13] Standoff

#### WARNING! Risk of Fire

Comply with all the minimum clearances as specified.

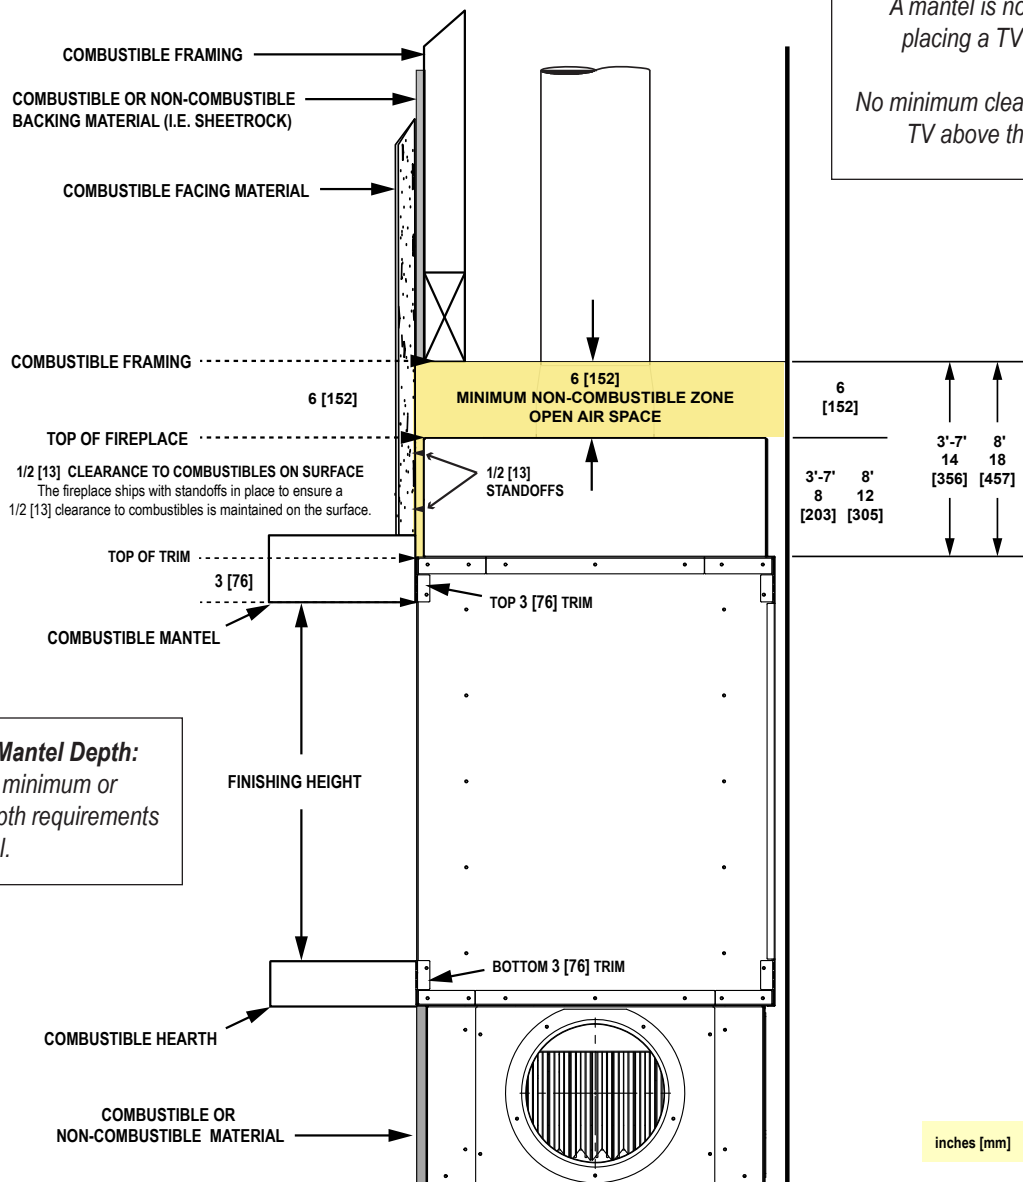

#### Notes About TV Placement:

A mantel is not required if you are placing a TV above the opening.

No minimum clearance required for a TV above the fireplace opening.

#### Note About Mantel Depth:

There are no minimum or maximum depth requirements for the mantel.

inches [mm]

SINGLE SIDED EXAMPLE: RIGHT SIDE VIEW  
APPLIES TO EACH GLASS FACE OF A MULTI-SIDED FIREPLACE

NOTE: Refer to Section 11 - Finishing The Wall (A.1) for more information.

Figure 5B.1

## 5 - FRAMING & MANTEL REQUIREMENTS

### B.2 NON-COMBUSTIBLE ZONE - **NOT** USING THE PROVIDED 1/2" STANDOFFS

The fireplace has standoffs installed on the front of the fireplace standard from the factory. They are located on the left, center and right front hood of the fireplace and are to ensure that the 1/2[13] required clearance to combustibles on the surface of the fireplace is maintained.

If the standoffs are removed, only non-combustible material can be installed against the surface of the fireplace such as a non-combustible backer cement board. 1/2 [13] minimum thickness must be used in the space\* between the top of the 3 [76] trim to the combustible framing the full width of the fireplace. The space\* includes a 7 [178] minimum above the top of the fireplace that is recommended for ease of attachment. \*= 15 [381] for 3'-7" units and 19 [483] for 8' units.

Refer to Figure 5B.2 below for requirements when not using the provided 1/2 [13] standoffs.  
Refer to Figure 5B.1 for a standard installation using the provided 1/2 [13] standoffs.

INCHES [MM]



1/2 [13] Standoff


#### **WARNING! Risk of Fire**

Comply with all the minimum clearances as specified.

#### **Notes About TV Placement:**

A mantel is not required if you are placing a TV above the opening.

No minimum clearance required for a TV above the fireplace opening.

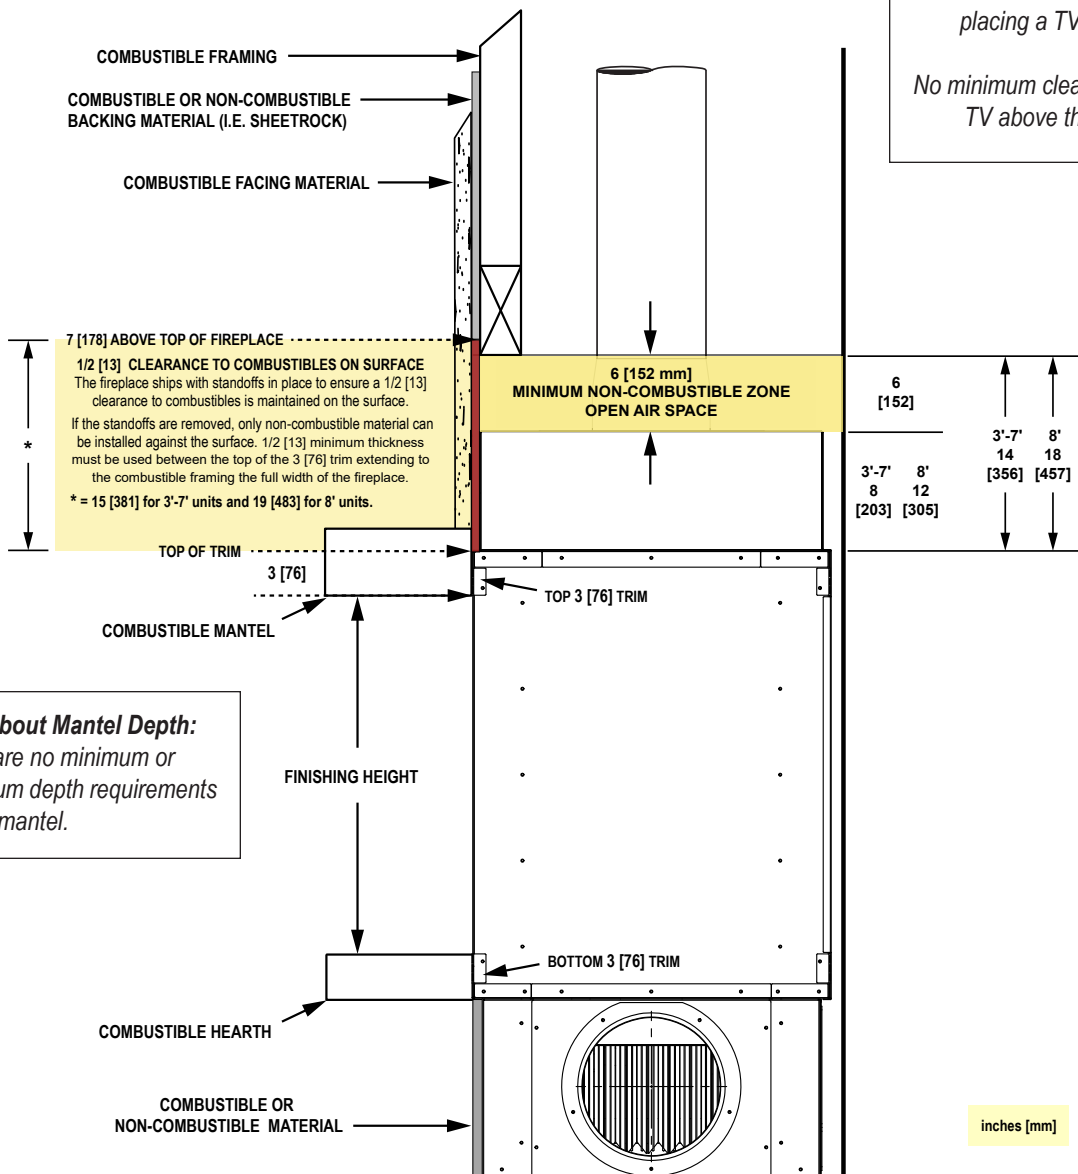

#### **Note About Mantel Depth:**

There are no minimum or maximum depth requirements for the mantel.

SINGLE SIDED EXAMPLE: RIGHT SIDE VIEW  
APPLIES TO EACH GLASS FACE OF A MULTI-SIDED FIREPLACE

**NOTE:** Refer to Section 11 - Finishing The Wall (A.2) for more information.

Figure 5B.2

## 6 - GLASS FRAME ASSEMBLY

### A. GLASS FRAME ASSEMBLY IDENTIFICATION

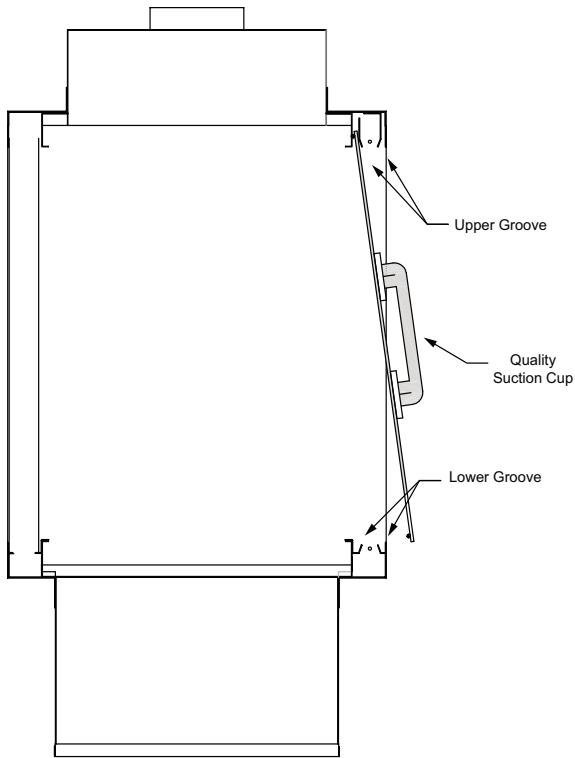


Figure 6A.1

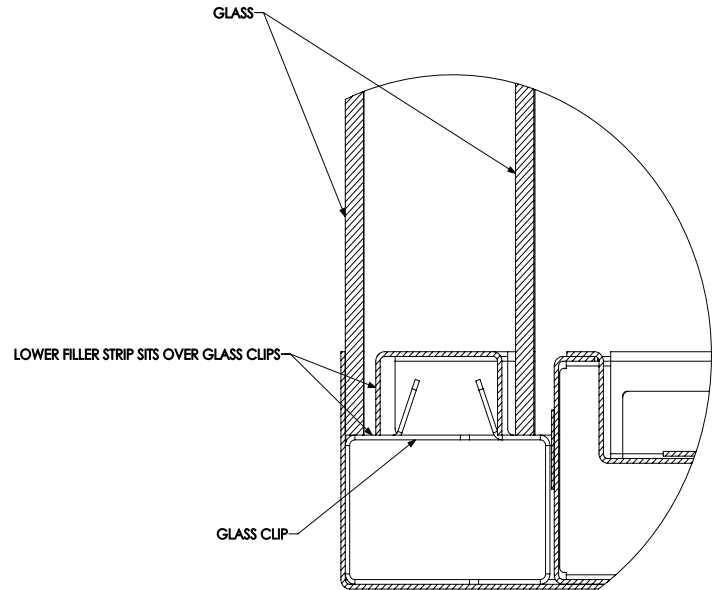


Figure 6A.2



**CAUTION:** TO PREVENT GLASS FRAME ASSEMBLY FROM FALLING FROM FIREPLACE AND BECOMING DAMAGED, FOLLOW THE INSTRUCTIONS EXACTLY WHEN REMOVING AND INSTALLING GLASS FRAME ASSEMBLY.



**STOP:** DO NOT OPERATE THIS FIREPLACE WITH THE GLASS REMOVED, CRACKED OR BROKEN. REPLACEMENT OF GLASS ASSEMBLY SHOULD BE DONE BY A LICENSED OR QUALIFIED SERVICE PERSON.



**WARNING:** DO NOT REMOVE GLASS ASSEMBLY WHEN HOT!!!!



**NOTE:** GLASS REMOVAL AND INSTALLATION MUST BE PERFORMED WITH TWO PEOPLE.



**NOTE:** Glass must be removed using quality suction cups. DO NOT attempt to remove the glass without using proper suction cups.



**NOTE:** IN CASE OF CHIPPED OR BROKEN GLASS, due to the size and sensitivity of shipping the glass separately it is best to have the replacement glass cut locally if needed.

**REFER TO SECTION 16 - REPLACEMENT PARTS FOR THE GLASS SIZE CHART FOR DIMENSIONS AND SPECIFICATIONS.**

## 6 - GLASS FRAME ASSEMBLY

Refer to Section 6 (Glass Frame Assembly Identification Figures 6A.1 & 6A.2) when installing and removing the glass frame assembly.

### B. INSTALL GLASS FRAME ASSEMBLY

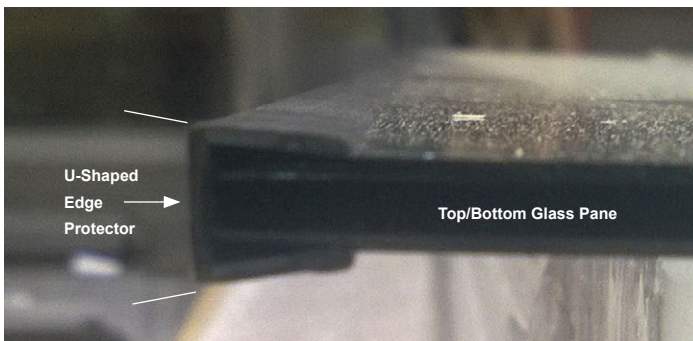


Figure 6B.1 - Outer Glass Edge Protector

#### **IMPORTANT: PLASTIC GLASS EDGE PROTECTORS**

*The fireplace is shipped with a plastic edge protector on the outer pane of glass only.*

See Figure 6B.1



Figure 6B.2 - Vertical Trim Piece

#### **Inner Glass**

1. Unwrap the panes of glass carefully making sure to protect the edges.
2. Apply the suction cups to the inner glass assembly, following instructions included with the suction cups.
3. Lift the glass into place. The top edge slips into the top groove (the glass will be behind the glass clip and against the gasketing); lift into the groove until the bottom is clear of the bottom trim. Make sure the glass is behind all the glass clips and slide the glass down into the inner bottom groove. Gently push the glass tightly into the gasketing. See Figure 6A.1.
4. Push vertical glass trim into place on each side. Once into place, slide the vertical glass trim all the way down so the top is almost even with the top viewing area. See Figure 6B.2.
5. Place the long horizontal trim piece between the lower glass clips. Slide back against the inner glass. See Figure 6B.2 and Figure 6B.3.

#### **Outer Glass**

6. Apply the suction cups to the outer glass and lift it into place in the same manner as the inner glass.

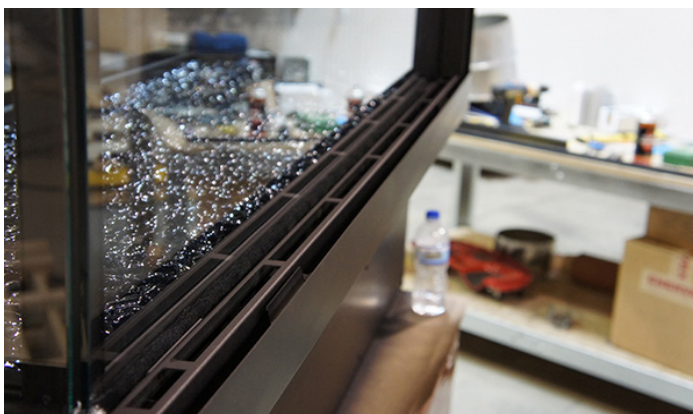


Figure 6B.3 - Horizontal Trim Piece



#### **WARNING: RISK OF INJURY!**

**DO NOT** remove glass until unit is cooled to room temperature. Glass breakage could occur.

### C. REMOVE GLASS FRAME ASSEMBLY

1. Apply the suction cups to the outer glass panel following the instructions included with the suction cups.
2. Gently lift the glass until the bottom edge is clear of the groove it sits in.
3. Bring the bottom edge of the glass towards you while lowering it to disengage it from the top groove.
4. Sit the glass on a padded surface to protect it. **IMPORTANT:** Protect the glass's edges.
5. Remove the lower trim piece that sits between the layer of glass.
6. Remove the inner trim vertical pieces.
7. Using the suction cups, remove the inner glass in the same manner.

## 7 - GAS LINE SPECIFICATIONS

This fireplace is manufactured for use with Natural Gas or Propane.



**WARNING: Risk of Fire! Risk of Explosion! Risk of Asphyxiation!**



Follow all instructions and warnings for installing and servicing gas line.



- Gas line installation and service must be performed by a qualified installer or licensed plumber in accordance with all applicable codes for the installation location (NFPA 54 / ANSI Z223.1, the current International Fuel Gas Code, or CAN/CSA B149 in Canada) (In the Commonwealth of Massachusetts installation must be performed by a licensed plumber or gas fitter).
- Check all fittings and connections by means of a listed combustible gas detector, a noncorrosive leak detection fluid, or other approved leak detection method. **DO NOT** use open flame.

### A. FUEL CONVERSION


- Make sure the appliance is compatible with available gas types.
- Conversions must be made by a qualified service technician using Hearth & Home Technologies specified and approved parts.

### B. GAS PRESSURE

- Install pressure regulator upstream of gas valve if line inlet pressure exceeds 1/2 PSIG.
- Recommended inlet pressure for optimal appliance performance: 7.0 in. w.c. (NG) 12.0 in. w.c. (Propane).
- Pressure requirements when in operation are:

| GAS LINE CONNECTION        | Propane                                 | NG                                      |
|----------------------------|-----------------------------------------|-----------------------------------------|
| MINIMUM INLET GAS PRESSURE | 11.0 inches W.C. (recommended)          | 7.0 inches W.C. (recommended)           |
| MAXIMUM INLET GAS PRESSURE | 14.0 inches W.C.                        | 10.0 inches W.C.                        |
| MANIFOLD PRESSURE (HI)     | 10.0 inches W.C.                        | 3.5 inches W.C.                         |
| ORIFICE SIZE               | See Specifications Chart in Section 3.C | See Specifications Chart in Section 3.C |
| INPUT BTU/HR               | See Specifications Chart in Section 3.C | See Specifications Chart in Section 3.C |

- Verify inlet pressure is within specified range, including when other household gas appliances are operating.

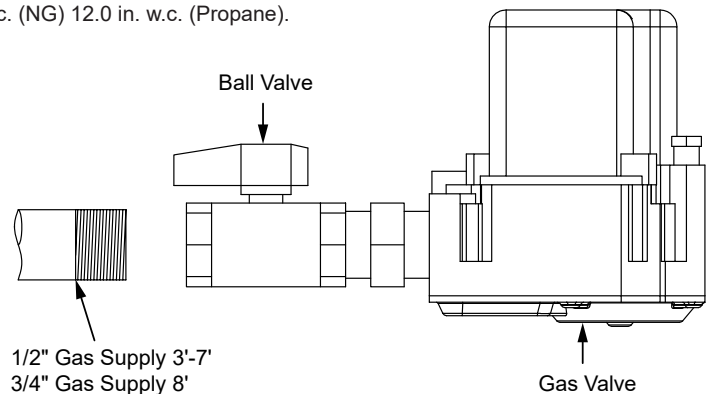

**NOTE:** A listed (and Commonwealth of Massachusetts approved) 1/2 in. or 3/4 in. T-handle manual shut-off ball valve and flexible gas connector are connected to the 1/2 in. or 3/4 in. control valve inlet.

**If substituting for these components, please consult local codes for compliance**

### C. GAS CONNECTION AND GAS LINE PURGING



**WARNING: Risk of Fire! Risk of Explosion!**



Gas buildup during line connection and purging could ignite.



- Support gas control when attaching pipe to prevent bending gas line.
- Gas line installation and purging of the gas fuel line **MUST** be performed by a qualified service technician or a licensed plumber in accordance with the applicable gas code for the installation location (NFPA 54 / ANSI Z223.1, the current International Fuel Gas Code, or CAN/CSA B149 in Canada).
- Use a listed combustible gas detector, a noncorrosive leak detection fluid, or other approved leak detection method to check all fittings and connections for gas leaks before lighting the appliance.
- Ensure ventilation.
- Eliminate ignition sources, such as sparks or open flames.

- Refer to Section 7.D for location of gas line access in appliance.
- Pipe incoming gas line into valve compartment.
- Ensure that gas line does not come in contact with outer wrap of the appliance. Follow local codes.
- Connect incoming gas line to the 1/2 in. or 3/4 in. NPT connection on manual shutoff valve.
- A small amount of air will be in the gas supply line and must be purged. Light the appliance to allow air to purge through the pilot assembly.

## 7 - GAS LINE SPECIFICATIONS



**NOTE:** The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at pressures in excess of 1/2 PSIG (14 in. w.c. / 3.5 kPa).

**NOTE:** The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas line at test pressures equal to or less than 1/2 PSIG (14 in. w.c. / 3.5 kPa).




**NOTE:** For high altitude installations, consult Stellar by Heat&Glo directly for proper rating methods.


### D. GAS & ELECTRIC ACCESS LOCATIONS

4' shown in example. Locations/dimensions are the same on all models and all sizes.



BACK SIDE VIEW

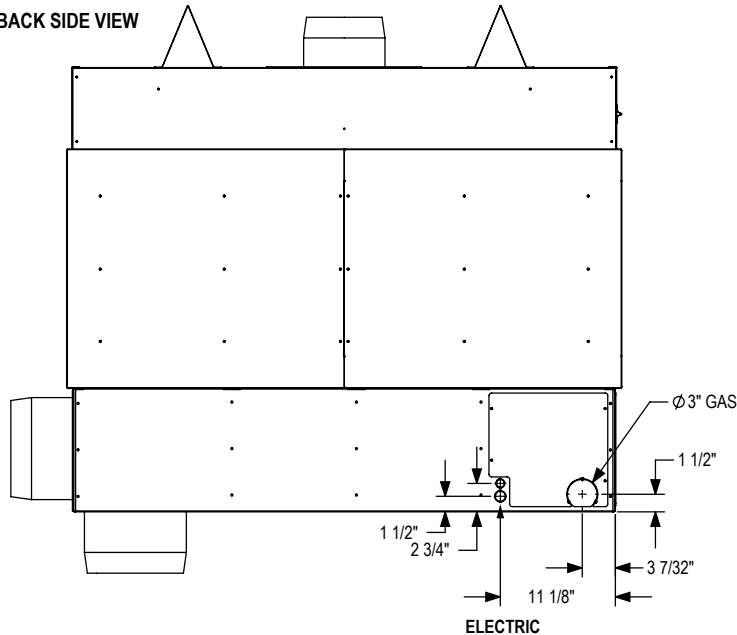

PILOT SIDE VIEW

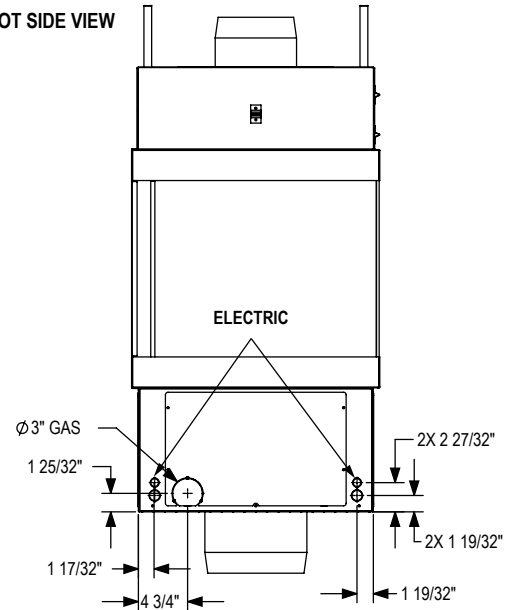

FRONT VIEW

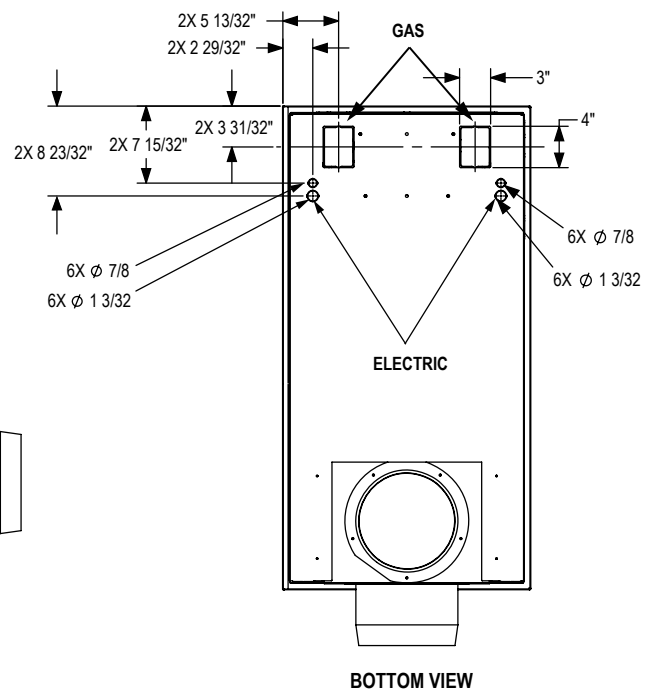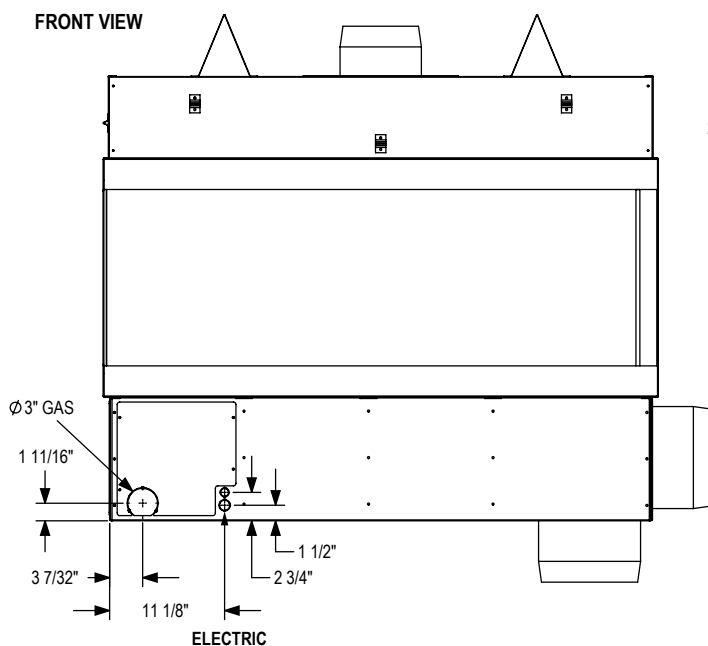

## 8 - VENTING



**CAUTION:** Consult the local and national installation codes to assure adequate combustion and ventilation air is available.



**NOTE:** Flame height and appearance will vary depending upon venting configuration and type of fuel used. Venting requirements apply to both Natural and Propane gas.



**STOP:** MAINTAIN ALL CLEARANCES AS STATED IN THIS INSTALLATION MANUAL.

### A. APPROVED VENTING

| Model # | DESCRIPTION | B-VENT<br>Ø | OUTSIDE<br>AIR<br>Ø | STANDARD<br>POWERVERT | IN-LINE<br>POWERVERT |
|---------|-------------|-------------|---------------------|-----------------------|----------------------|
| 3'      | ANY HEIGHT  | 8"          | 10"                 | RS012                 | RSIF160              |
| 4'      | ANY HEIGHT  | 8"          | 10"                 | RS012                 | RSIF160              |
| 5'      | ANY HEIGHT  | 8"          | 10"                 | RS012                 | RSIF160              |
| 6'      | ANY HEIGHT  | 10"         | 10"                 | RS014                 | RSIF180              |
| 7'      | ANY HEIGHT  | 10"         | 10"                 | RS014                 | RSIF180              |
| 8'      | ANY HEIGHT  | 10"         | 12"                 | RS014                 | RSIF180              |

\*Amperage listed is the maximum required for the appliance with all options.

Refer to the vent systems manufacturer's installation manual for complete installation instructions.

Installation must conform with the venting requirements and restrictions as outlined in this manual. SEE CHART ABOVE FOR SIZE diameter B-Type Venting that must be used. UL/CSA approved B-Vent only. DO NOT decrease the vent size.

**Vent runs are approved for up to 110 feet with quantity of eleven, 90-degree elbows.**

**Vent runs may also contain a downward component.** The downward component may be a maximum of 6 feet plus the distance to the center line of the elbow. See Figure 8B. This will be about 87" for 8" diameter pipe and 92" for 10" diameter pipe. Due to natural buoyancy of flue gas products, venting downward increases restriction. Every inch of vertical drop counts as triple inches subtracted off the total vent run.

Example: a maximum drop of 92" means the total allowed vent run is decreased by 276" (23')

Once a downward component has been utilized, the vent cannot go upwards again. Moisture may get trapped in the vent pipe.

### B.1 SYSTEM SUPPLY VOLTAGE

| POWERVERT MODEL NUMBER        | VAC | AMPS |
|-------------------------------|-----|------|
| RS012 (3', 4', & 5' Models)   | 120 | 3.2  |
| RS014 (6', 7' & 8' Models)    | 120 | 3.4  |
| RSIF160 (3', 4', & 5' Models) | 120 | 4.9  |
| RSIF180 (6', 7' & 8' Models)  | 120 | 7.3  |

### B.2 POWERVERT SUPPLY VOLTAGE

| POWERVERT MODEL NUMBER        | VAC | AMP | H/P |
|-------------------------------|-----|-----|-----|
| RS012 (3', 4', & 5' Models)   | 120 | 1.2 | 1/9 |
| RS014 (6', 7' & 8' Models)    | 120 | 1.4 | 1/7 |
| RSIF160 (3', 4', & 5' Models) | 120 | 2.9 | 1/4 |
| RSIF180 (6', 7' & 8' Models)  | 120 | 5.3 | 1/2 |

**Important:** Be sure to do your own calculations based on the center line dimension given from the pipe manufacture you are using for your installation.

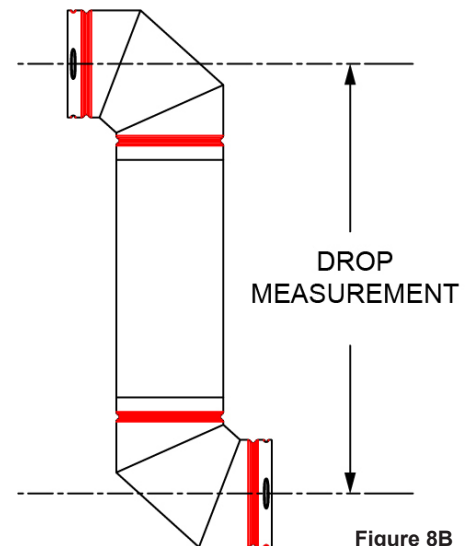


Figure 8B



**NOTE:** All pipe and elbow joints must be sealed. This is a UL tested and Stellar specific requirement, and may be different from the vent manufacturers instructions. This includes the longitudinal seam on the pipe. High Temp RTV Silicone and/or foil tape **MUST** be used on each joint/seam. Failure to do so may cause lack of vacuum and may not trigger the vacuum switch.



**ATTIC INSTALLATIONS:** Use an attic shield to maintain the required 1 [25] clearance to insulation.

## 8 - VENTING

### C. RS SERIES POWERVENT SPECIFICATIONS

#### Available Power Venting

A power vent (RS012 & RS014) is approved for use with this appliance. It is crucial that all B-Vent pipe and elbow joints, and the longitudinal seam are sealed using a high temperature RTV Silicone and/or foil tape.

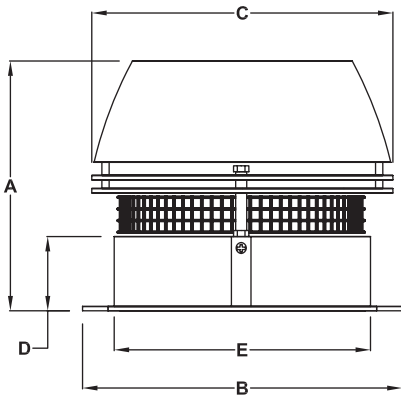


Figure 8C

| MODEL                           | RS012                                     | RS014                                     |
|---------------------------------|-------------------------------------------|-------------------------------------------|
| Fan Type                        | Axial Vane                                | Axial Vane                                |
| Motor Type                      | Totally enclosed, variable speed, Class F | Totally enclosed, variable speed, Class F |
| Voltage (VAC)                   | 1 x 120                                   | 1 x 120                                   |
| RPM                             | 1600                                      | 1600                                      |
| CFM                             | 950                                       | 1400                                      |
| Amperage (Amps)                 | 1.2                                       | 1.4                                       |
| Motor Output HP (kW)            | 1/9 (0.08)                                | 1/7 (0.1)                                 |
| Weight lbs (kg)                 | 37 (17)                                   | 47 (21)                                   |
| Dimension A in. (mm)            | 11.5 (292)                                | 13.1 (334)                                |
| Dimension B x B in.(mm)         | 14.3 (364)                                | 16.6 (422)                                |
| Dimension C in. (mm)            | 13.5 (344)                                | 15.5 (395)                                |
| Dimension D in. (mm)            | 3.3 (85)                                  | 3.9 (100)                                 |
| Dimension E in. (mm)            | 11.6 (294)                                | 13.5 (342)                                |
| Temperature Rating-Intermittent | 575 °F / 300 °C                           | 575 °F / 300 °C                           |
| Temperature Rating-Continuous   | 482 °F / 250 °C                           | 482 °F / 250 °C                           |

### D. CHIMNEY COLLAR DIMENSIONS

#### Chimney Collar Dimensions

A chimney collar is included for use with the RS012 and RS014. The chimney collar is used to attach the RS power vent.

Figures 8D.1 and 8D.2 show the dimensions of the chimney collar.

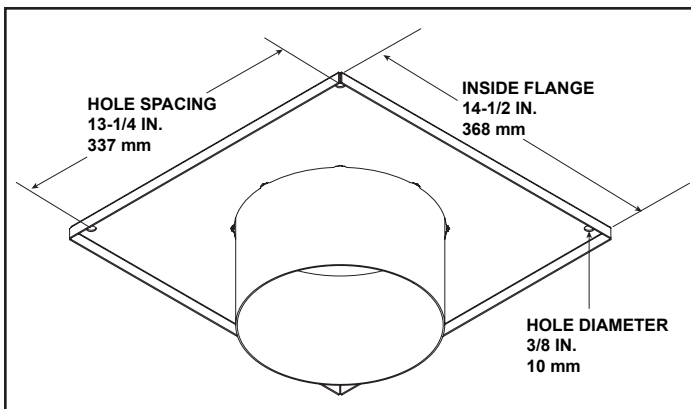


Figure 8D.1 8 Inch Chimney Collar Dimensions (RS012)

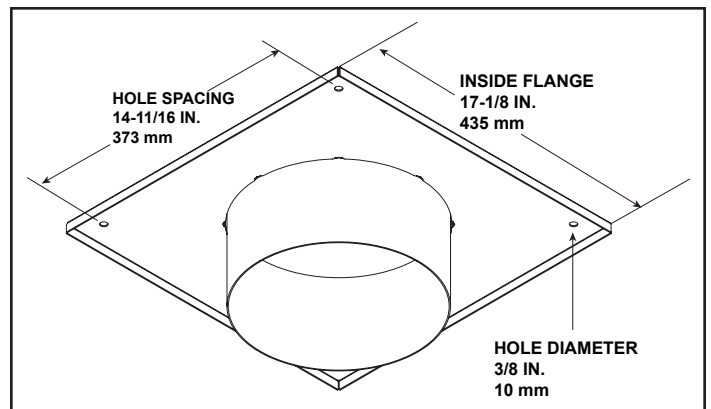


Figure 8D.2 10 Inch Chimney Collar Dimensions (RS014)

## 8 - VENTING

### E. RSIF SERIES POWERVENT SPECIFICATIONS

#### Available In-Line Power Venting

An in-line power vent (RSIF series from Enervex) is approved for use with Stellar fireplaces.

Vent runs after the in-line powervent may use a pressure approved pipe, but it is not required. If you use B-Vent after an in-line powervent it is crucial that all pipe and elbow joints, and the longitudinal seam are sealed using an high heat approved mastic or foil tape.

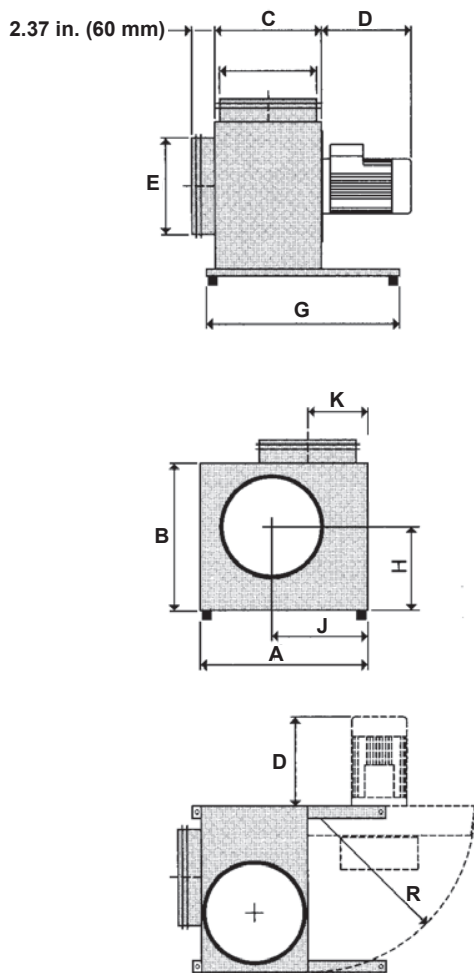


Figure 8E

| MODEL                        |  | RSIF160                        | RSIF180                        |
|------------------------------|--|--------------------------------|--------------------------------|
| Fan Type                     |  | Centrifugal Impeller (F-Wheel) | Centrifugal Impeller (F-Wheel) |
| Motor Type                   |  | TEFC                           | TEFC                           |
| Voltage (VAC)                |  | 1 x 120                        | 1 x 120                        |
| Amperage Amps                |  | 2.9                            | 5.3                            |
| Motor Output hp (kW)         |  | 1/4 (0.16)                     | 1/2 (0.35)                     |
| RPM                          |  | 1600                           | 1600                           |
| Weight lbs (kg)              |  | 38 (17)                        | 60 (27)                        |
| Duct Connection (E) in. (mm) |  | 8 (203)                        | 8 (203)                        |
| Dimension A in. (mm)         |  | 14.57 (370)                    | 16.15 (410)                    |
| Dimension B in. (mm)         |  | 12.60 (320)                    | 13.98 (355)                    |
| Dimension C in. (mm)         |  | 9.26 (235)                     | 9.26 (235)                     |
| Dimension D in. (mm)         |  | 5.52 (140)                     | 7.68 (195)                     |
| Dimension E in. (mm)         |  | 7.9 (200)                      | 7.9 (200)                      |
| Dimension G in. (mm)         |  | 15.75 (400)                    | 15.75 (400)                    |
| Dimension H in. (mm)         |  | 7.10 (180)                     | 7.88 (200)                     |
| Dimension J in. (mm)         |  | 8.27 (210)                     | 9.26 (235)                     |
| Dimension K in. (mm)         |  | 5.12 (130)                     | 5.12 (130)                     |
| Dimension R in. (mm)         |  | 14.57 (370)                    | 16.15 (410)                    |

Optional Universal Exhaust and Outdoor Air-Intake Louver information found in **Section 9 - Venting Options (B)**.

## 8 - VENTING

### F. IN-LINE POWERVENT PREPARATIONS - RSIF180

Perform the following steps when installing the RSIF180 on 6', 7' & 8' models.

1. Attach the provided 10 inch B-Vent collar to the intake side of the powervent. The intake side is located opposite the fan motor as shown in Figure 8F.1. The 10 inch B-Vent collar is packaged separately from the powervent. See Figure 8F.2.
2. Note the silhouette circle printed on the intake side of the powervent. The pre-drilled screw holes within the circle will be matched with the holes on the intake collar of the base plate. See Figure 8F.3.
3. Place the intake collar base plate onto the silhouette, matching up the holes as shown in Figure 8F.4. Fasten the base plate to the silhouette using five self-tapping screws.
4. Add the rope gasket included with the kit to the outlet side of the in-line powervent.
5. An adapter to increase from eight inch pipe to ten inch pipe is required on the outlet side of the in-line powervent. The adapter is included in the RSIF180 kit. See Figure 8F.5. Connect the adapter directly to the eight inch outlet collar of the in-line powervent. Connect the ten inch exhaust B-Vent to the collar and continue the vent run.

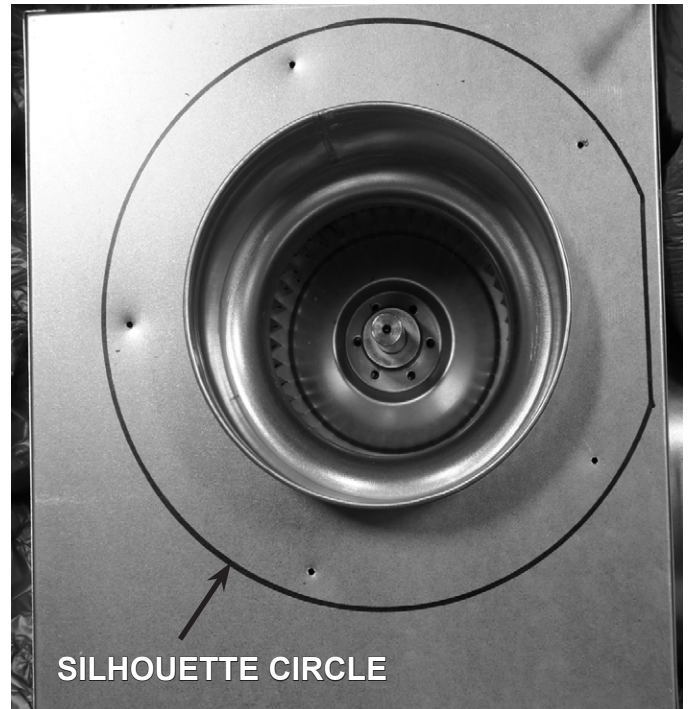


Figure 8F.3 Silhouette Circle on Intake

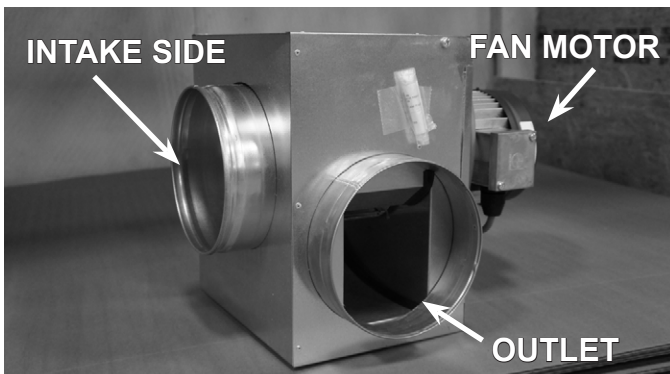


Figure 8F.1 In-Line Powervent (RSIF180)



Figure 8F.4 Base Plate Fastened to Intake

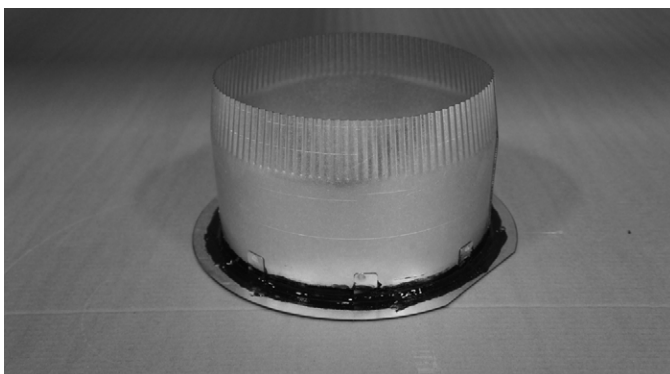


Figure 8F.2 Ten Inch B-Vent Collar



Figure 8F.5

## 8 - VENTING

### G. HORIZONTAL VENT SYSTEM CLEARANCES

| ALL APPROVED VENTING | TOP    | BOTTOM | SIDES  |
|----------------------|--------|--------|--------|
| HORIZONTAL           | 1 [25] | 1 [25] | 1 [25] |

inches [mm]

### H. WALL PASS-THROUGH - Follow all local codes for requirement of firestops.

### I. PITOT TUBE INFORMATION

There is a 1/4" pitot tube mounted in the center of the flue collar and is connected to the pressure switch. (Figure 8I)  
This monitors the pressure in the flue and is necessary for proper operation.  
Take care to keep the end of the tube clean.

**IMPORTANT: THIS TUBE MUST NOT BE BENT, CLOGGED, REMOVED, OR ALTERED IN ANY WAY.**

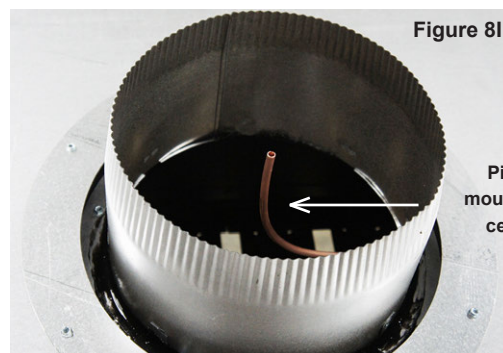


Figure 8I

Pitot Tube is mounted in the center of the flue collar

## 8 - VENTING

### J. VERTICAL TERMINATION GUIDELINES

- The fireplace must terminate with the included approved powered termination cap.
- **NO SUBSTITUTION IS ACCEPTABLE.**
- Carefully follow the instructions included with the approved powered termination cap.
- **DO NOT** use an additional speed control on this powervent.
- You must use the included Capacitor.

### K. HORIZONTAL TERMINATION VENT CAP LOCATION & CLEARANCE

**This gas appliance must not be connected to a chimney serving any other appliance.**

- DO NOT RECESS TERMINATION KIT INTO OUTSIDE BUILDING MATERIALS - i.e.: brick, stone, siding, etc. If necessary, extend framing so that termination kit will be exposed once building materials are installed.
- Vent termination must not be located where it will become plugged by snow or other material. The flow of combustion and ventilation air must not be obstructed.

#### LOCATION CLEARANCES:

- A. Above grade, veranda, porch, deck, balcony - 12 inches [305 mm].
  - B. Operable window or door - 12 inches [305 mm]; 48 inches [1219 mm] required for non-direct vent appliances using room air.
  - C. Permanently closed window\* - 12 inches [305 mm] (recommended to prevent condensation on window).
  - D. Ventilated soffit\* - 24 inches [610 mm]. Unventilated soffit\* - 12 inches [305 mm].
  - E. Vinyl or Resin-based materials\* - 36 inches [915 mm].
  - F. Outside corner\* - 6 inches [152 mm].
  - G. Inside corner\* to non-combustibles - 12 inches [305 mm]. Inside corner\* to combustibles - 24 inches [610 mm].
  - H. Meter / Regulator: Not to be installed above a gas meter/regulator assembly within 3 ft. [914 mm] horizontally from the center-line of the regulator.
  - I. Gas Service regulator vent outlet - 3 ft. [914 mm].
  - J. Non-mechanical air supply inlet to building or the combustion air inlet to any other appliance.  
US: 9 inches [229 mm] CANADA: 12 inches [305 mm].
  - K. Mechanical air supply inlet.  
US: 3 ft. [914 mm] above if within 10 ft. [3.05 m] horizontal. Massachusetts installations: 10 ft. [3.05 m]. CANADA: 6 ft. [1.83 m].
  - L. Above paved side-walk or paved driveway located on public property - 7 ft. [2.13 m].
  - M. Under veranda, porch, deck, or balcony [must be fully opened on a minimum of 2 sides] - Combustible - 24 inches [610 mm],  
Non-Combustible - 12 inches [305 mm].
  - N. Between two horizontal terminations - 12 inches [305 mm]. (Not shown in Figure 8K).
  - O. Between two vertical terminations - 12 inches [305 mm]. Terminations may be same height (Not shown in Figure 8K).
- N & O: Minimum of 12 inches [305 mm] required when two exhaust termination caps are placed next to each other. Measurement must be taken from inside edge of one steel chimney adapter to the inside edge of the other steel chimney adapter. A metal divider plate with same length and height as termination cap is required to be installed between the caps. Divider plate is not required if caps are at least 24 inches [610 mm] apart, measured edge to edge.
- P. Above furnace exhaust or inlet - 12 inches [305 mm]. (Not shown in Figure 8K).

\*Clearance must be in accordance with local installation codes & the requirements of the gas supplier.



**NOTE: A vent cannot be located directly above a side-walk or paved driveway that is located between two single family dwellings and serves both dwellings.**


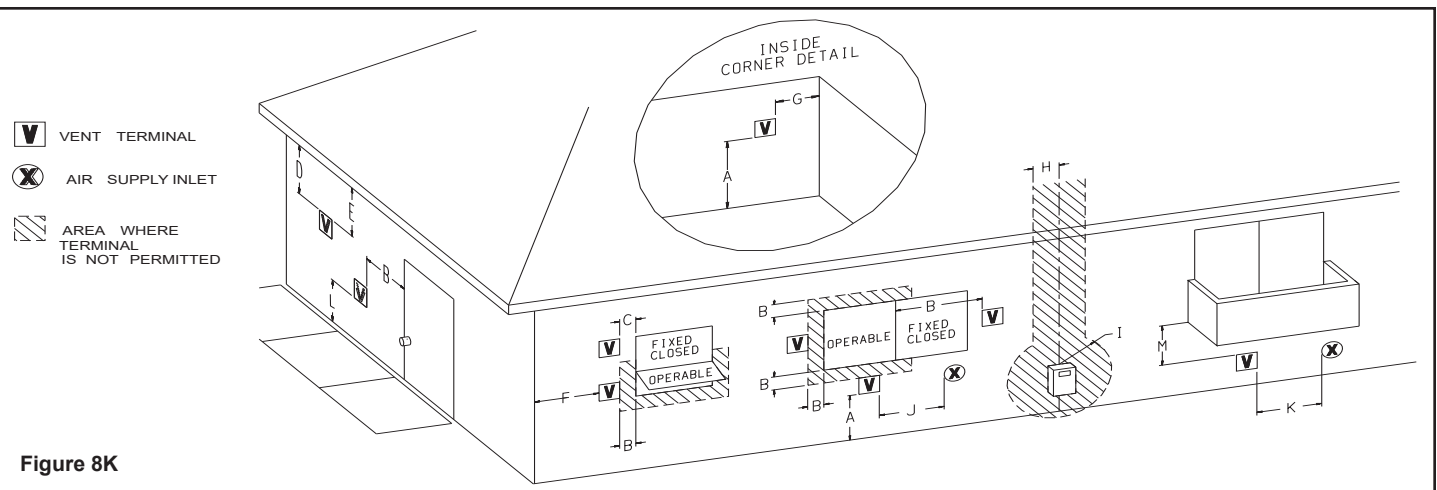


Figure 8K

## 8 - VENTING


### L. HORIZONTAL TERMINATION VENT CAP LOCATION & CLEARANCES

Inside Corner

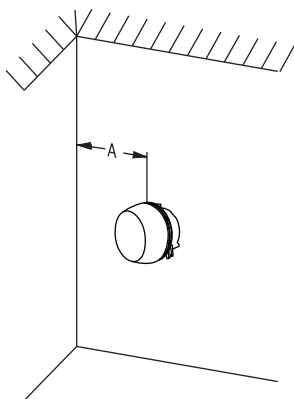


A = Combustible 24" (609.6mm)  
= Non-combustible 12" (304.8mm)

Outside Corner

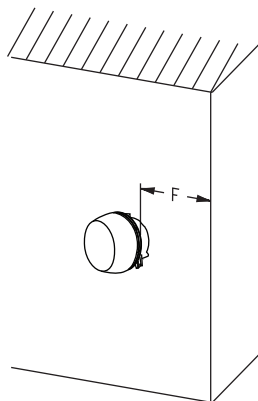

F = Combustible 6" (152mm)  
= Non-combustible 6" (152mm)

Recessed Location

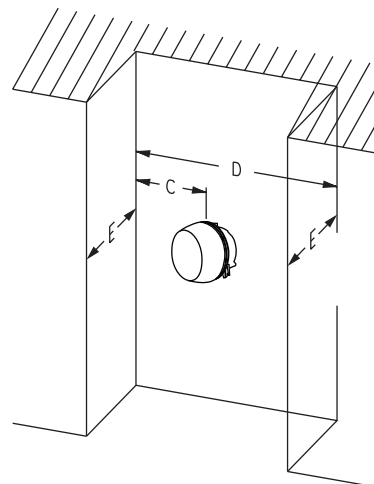


C = Clearance from corner in recessed location  
= Combustible 24" (609.6mm)  
= Non-combustible 12" (304.8mm)

D = Minimum width for back wall of a recessed location  
= Combustible 64" (1,625.6mm)  
= Non-combustible 40" (1,016mm)

E = Maximum depth of 48" (1,219mm) for recessed location


Balcony with perpendicular side wall

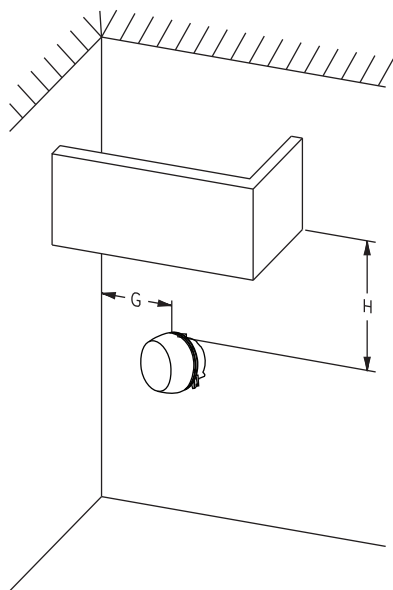

G = Combustible 24" (609.6mm)  
= Non-combustible 12" (304.8mm)

H = Combustible 24" (609.6mm)  
= Non-combustible 12" (304.8mm)

Balcony with no side wall

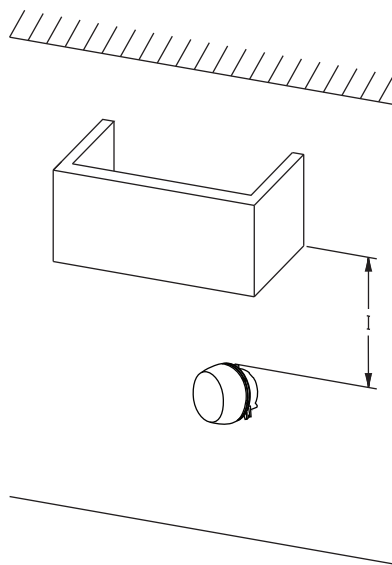

I = Combustible 24" (609.6mm)  
= Non-combustible 12" (305mm)

**IMPORTANT:**  
All dimensions are from the edge of the cap.

NOTE: Vinyl sided needs additional clearance. Add 12" (305mm) to combustible clearances for vinyl siding.


Figure 8L

## 8 - VENTING

### M. HORIZONTAL POWERVENT AND AIR-INTAKE PLACEMENT CLEARANCES

#### M.1 - RS SERIES POWERVENT

X = Intake  
PV = Vent

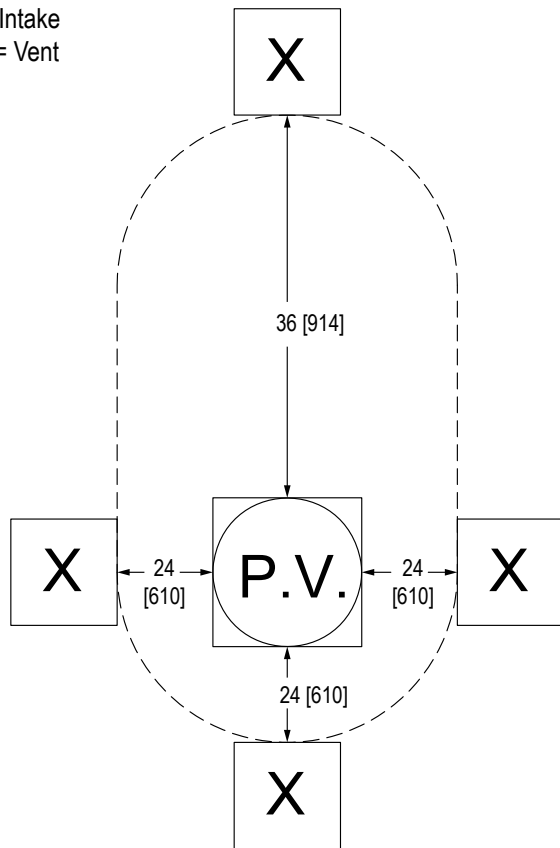

inches [mm]

Minimum Clearance Using a RS Series Powervent

Intake Placed Above Vent = 36 [914]


Intake Place To Left Side, Right Side or Below Vent\* = 24 [610]

\*Left/Right/Below With A Non-Combustible Divider Between = 12 [305]

Figure 8M.1

#### M.2 - IN-LINE POWERVENT (LOUVER 8/10)

X = Intake  
PV = Vent

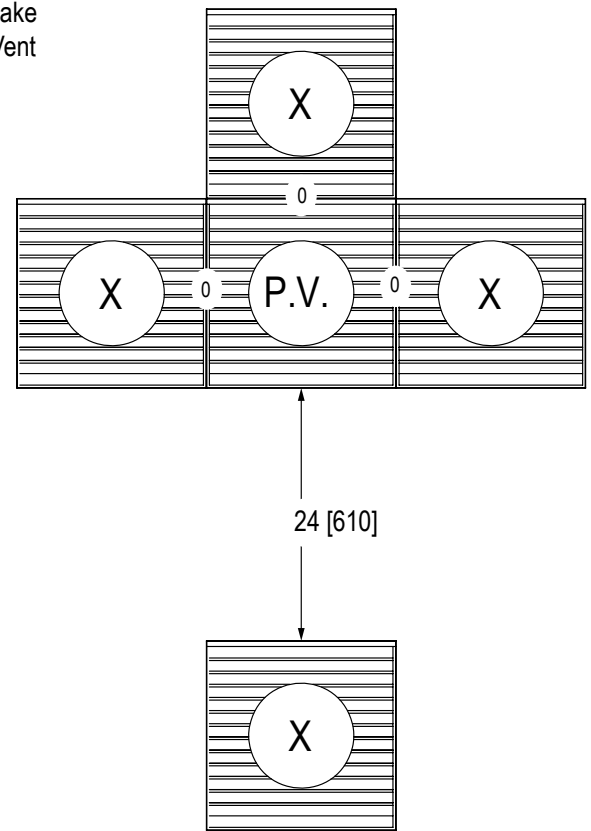

inches [mm]

Minimum Clearance Using an In-Line Powervent

Intake Placed Below Vent = 24 [610]

Intake Place To Left Side, Right Side or Above Vent = 0

Figure 8M.2

## 8 - VENTING

### N. VERTICAL VENT CAP LOCATION AND CLEARANCES

| ROOF PITCH          | H (Min.) Ft. | H (Min.) M. |
|---------------------|--------------|-------------|
| FLAT TO 6/12        | 1.0*         | 0.30        |
| OVER 6/12 TO 7/12   | 1.25*        | 0.38        |
| OVER 7/12 TO 8/12   | 1.5*         | 0.46        |
| OVER 8/12 TO 9/12   | 2.0*         | 0.61        |
| OVER 9/12 TO 10/12  | 2.5*         | 0.76        |
| OVER 10/12 TO 11/12 | 3.25*        | 0.99        |
| OVER 11/12 TO 12/12 | 4.0          | 1.22        |
| OVER 12/12 TO 14/12 | 5.0          | 1.52        |
| OVER 14/12 TO 16/12 | 6.0          | 1.83        |
| OVER 16/12 TO 18/12 | 7.0          | 2.13        |
| OVER 18/12 TO 20/12 | 7.5          | 2.27        |
| OVER 20/12 TO 21/12 | 8.0          | 2.44        |

\* = 3 foot minimum in snowy regions


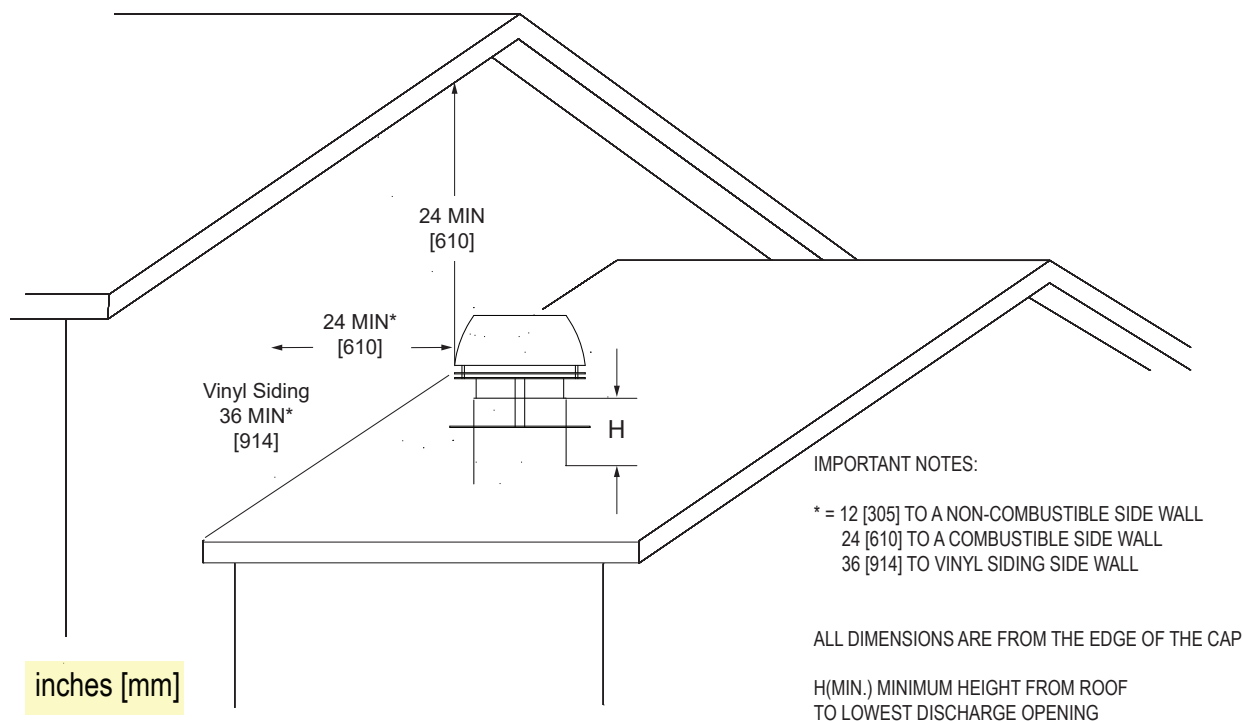


Figure 8N

## 8 - VENTING


### O. VERTICAL - CLEARANCES - RS012/14/16

Figure 8O

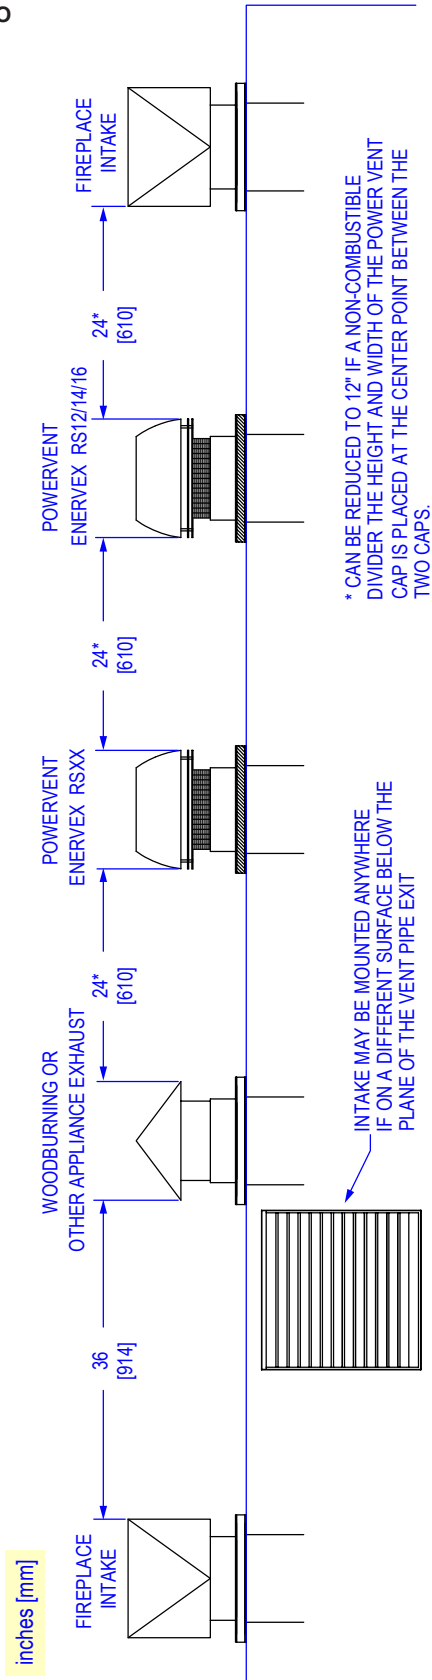

### P. VERTICAL - CLEARANCES - RSIF160/180

Figure 8P

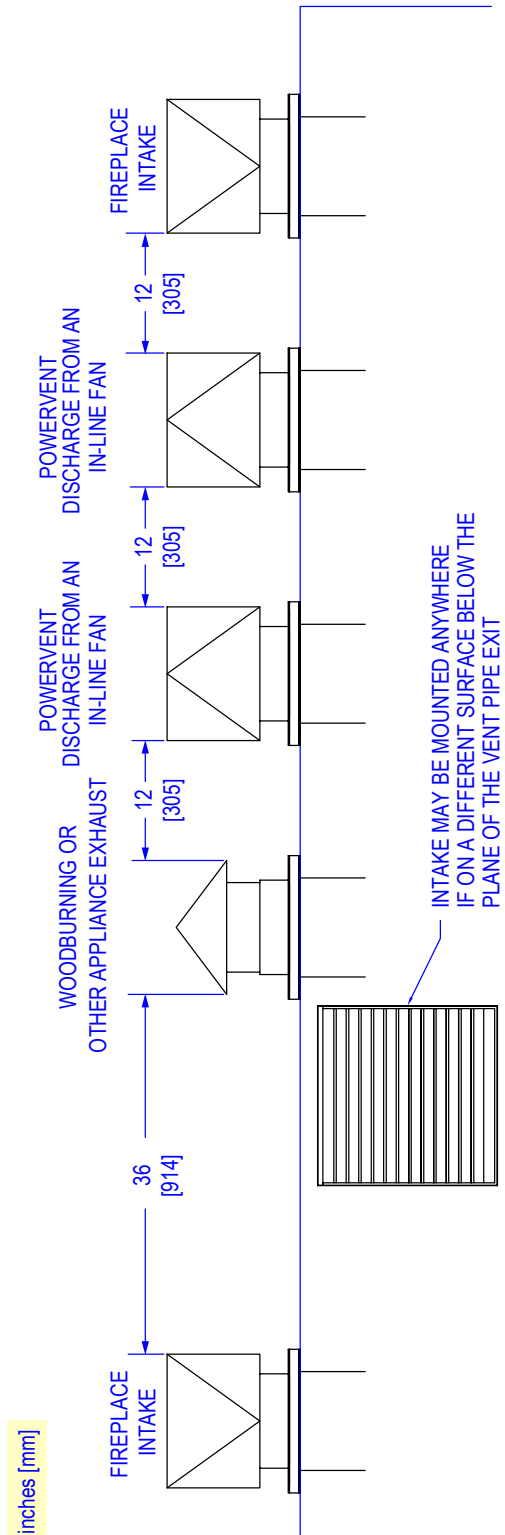

## 8 - VENTING

### Q. WALL TERMINATION - WITH AND WITHOUT DAMPER

#### Wall Termination Without Optional Mechanical Damper

FRAMING:

8" = 11-3/4 [298] W X 11-3/4 [298] H

10" = 13-1/4 [337] W X 13-1/4 [337] H

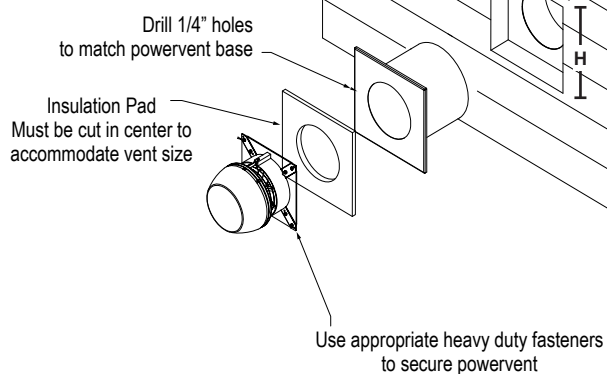


Figure 8Q.1

#### Wall Termination With Optional Mechanical Damper

OPTIONAL

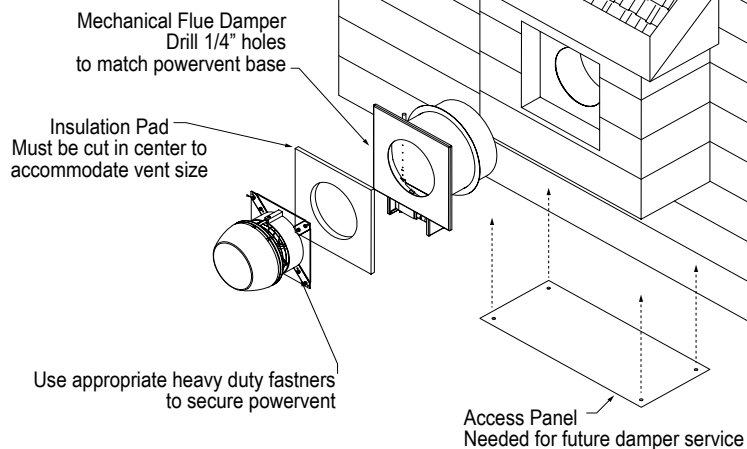


Figure 8Q.2

## 8 - VENTING

### R. ROOF TERMINATION CAP INSTALLATION - WITH AND WITHOUT DAMPER

#### Roof Termination Without Optional Mechanical Damper

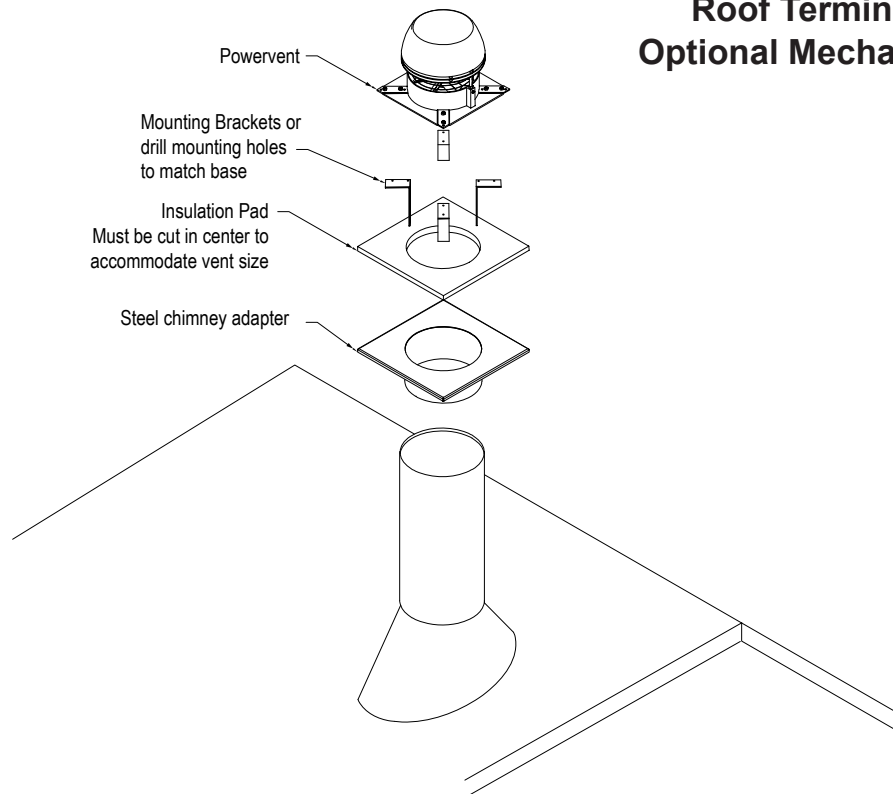


Figure 8R.1

#### Roof Termination With Optional Mechanical Damper

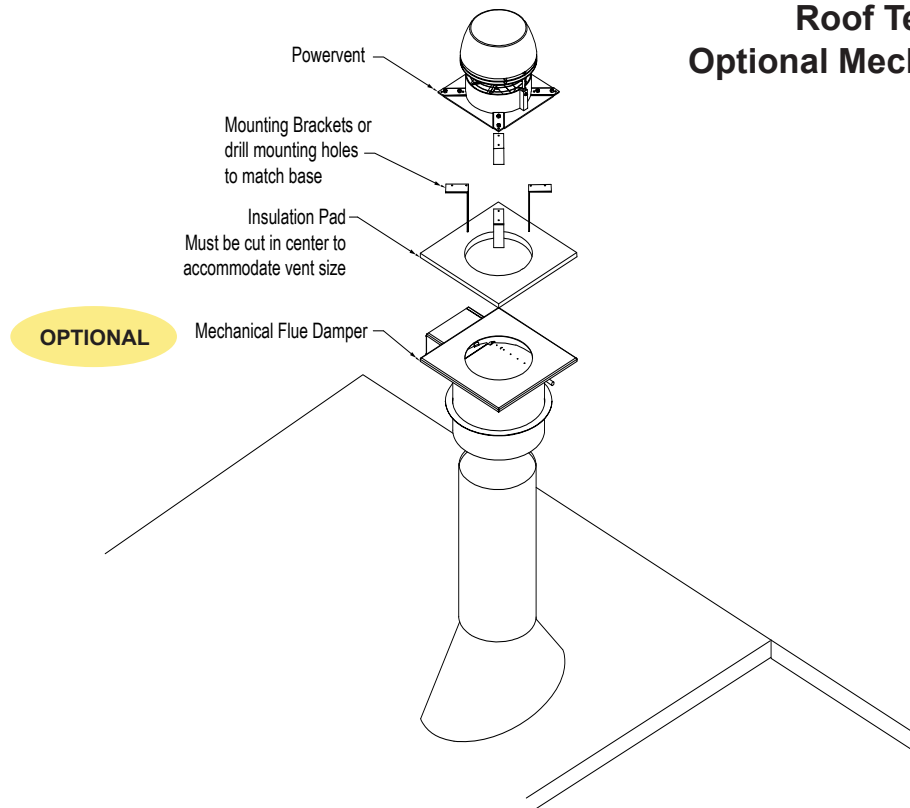


Figure 8R.2

## 8 - VENTING

### S. CHASE TOP CAP INSTALLATION - WITH AND WITHOUT DAMPER

#### Roof Termination Without Optional Mechanical Damper

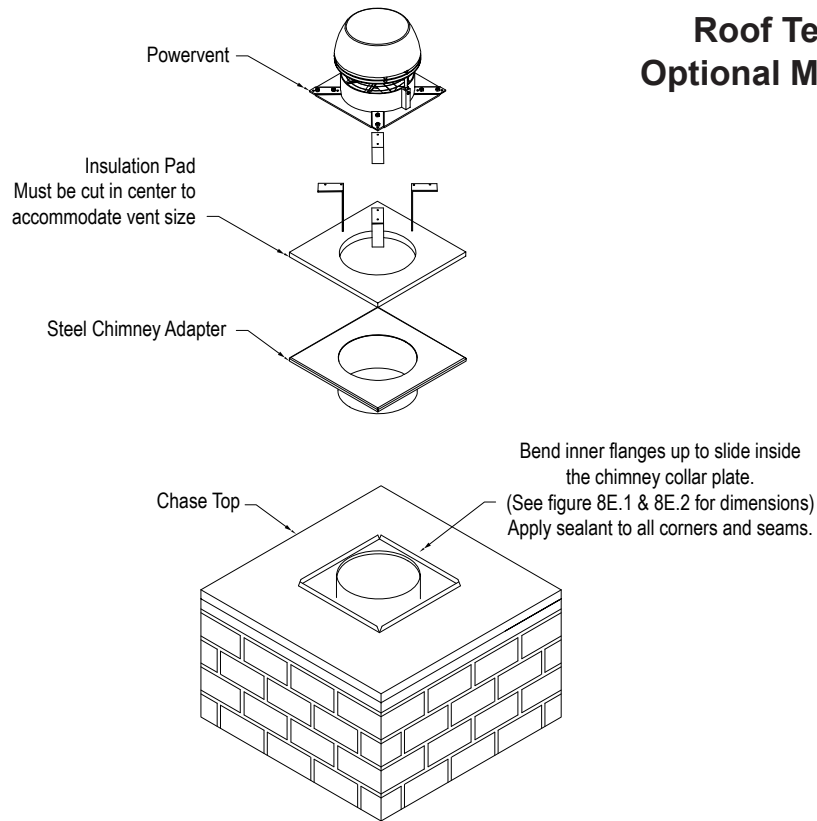


Figure 8S.1

#### Roof Termination With Optional Mechanical Damper

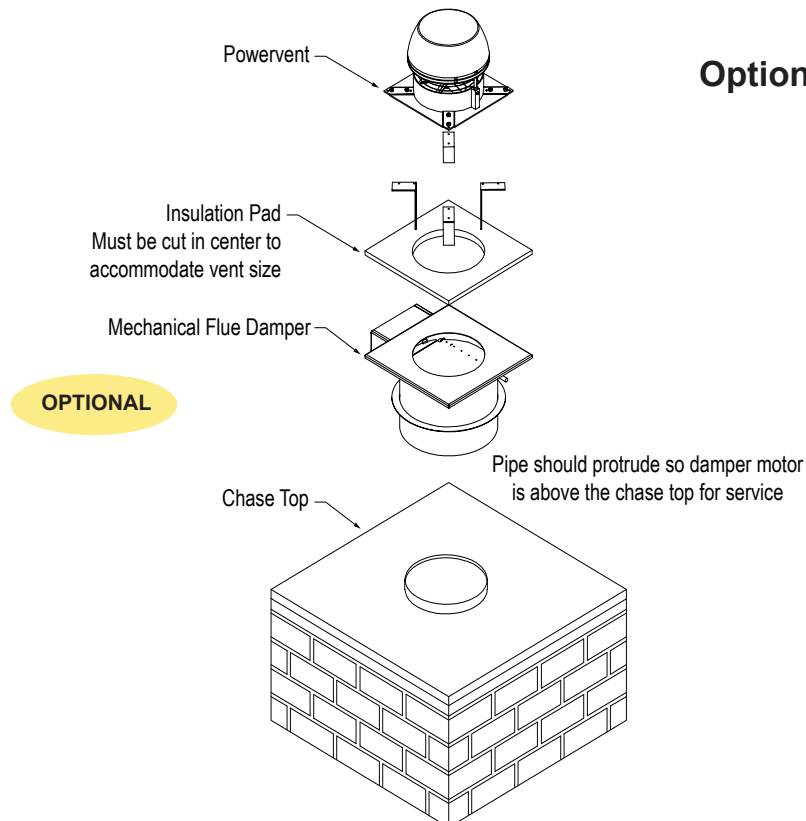


Figure 8S.2

## 8 - VENTING

### T. CHIMNEY SHROUD TYPES AND SPECIFICATIONS

NON-COMBUSTIBLE CONSTRUCTION ONLY ALLOWED

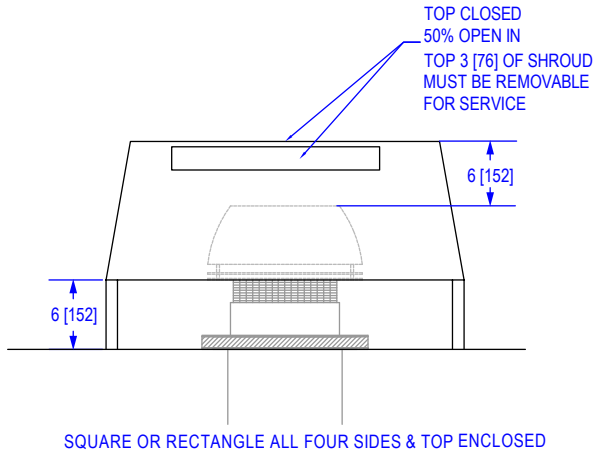


Figure 8T.1

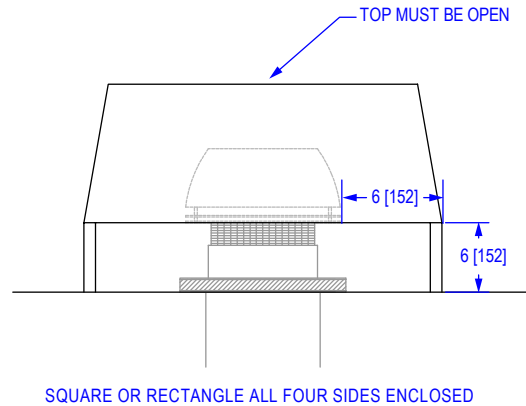


Figure 8T.2

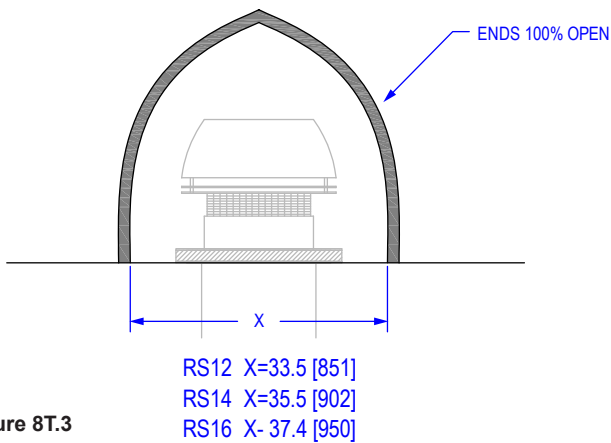


Figure 8T.3

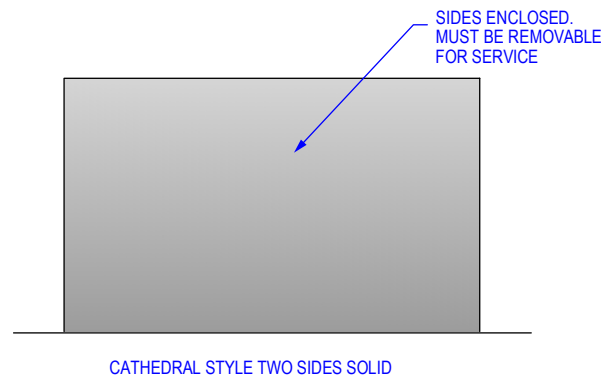


Figure 8T.4 (Side View)

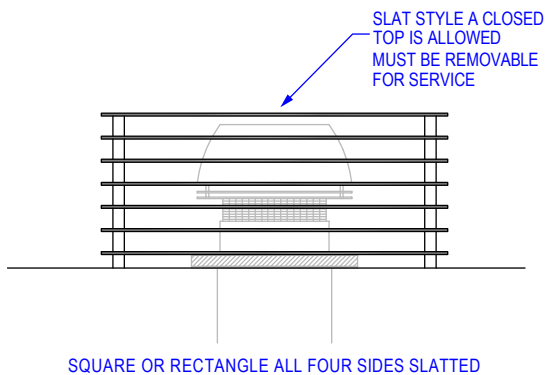


Figure 8T.5  
(Front View)

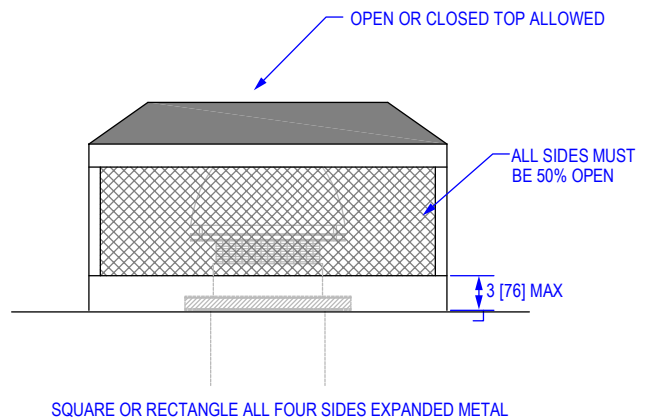


Figure 8T.6

inches [mm]

## 8 - VENTING

### U. OUTDOOR AIR INTAKE

This fireplace has the options of air intake connections on the side or the bottom of the fireplace.

***This fireplace is approved for use with 10 inch rigid metal pipe or UL approved 10 inch Class 0 or Class 1 flex for intake air.***

Use Table 8U.1 for venting requirements if using UL approved 10 inch flex for intake air.

Vent runs utilizing 10 inch rigid metal pipe may be 110 feet with 11 elbows. We recommend insulating the intake air duct or using UL approved Class 1 insulated flex in hot, humid or cold climates.

If not using our LOUVER 10/12 intake cap, the intake cap must maintain the square inches stated in table 8U.2. This usually means the intake cap will need to be sized larger than the intake pipe to account for bird/ insect screens.

Example: 10 inch intake will require 12 inch intake cape connected via duct reducer. Failure to do so will result in higher operating temperatures.

The fireplace may also take room air for combustion. Intake screen/vent must be sized appropriately. You must plan for the replacement air that is consumed from the room by the fireplace. Do not draw intake air from a crawl space or an attic (ventilated or not ventilated).

***WARNING! Risk of Fire! DO NOT draw intake air from an attic or crawl space. Appliance could overheat.***

Use Table 8U.2 for reference on CFM replacement air if drawing intake air from inside the house and open air requirements for intake screen/vent or consult Hearth & Home Technologies for more information.

| Figure 8U.1                                                                 |               |                                 |           |           |           |           |           |
|-----------------------------------------------------------------------------|---------------|---------------------------------|-----------|-----------|-----------|-----------|-----------|
| UL Approved Class 1, 10 Inch Insulated Flex Intake Air Venting Requirements |               |                                 |           |           |           |           |           |
| Fireplace Size                                                              | Length Of Run | Number of Offsets FEET [METERS] |           |           |           |           |           |
|                                                                             |               | 0-3                             | 4         | 5         | 6         | 7         | 8         |
| 3'                                                                          | Feet [Meters] | 100 [30.5]                      | 90 [27.4] | 80 [24.4] | 70 [21.3] | 60 [18.2] | 50 [15.2] |
| 4'                                                                          |               | 100 [30.5]                      | 90 [27.4] | 80 [24.4] | 70 [21.3] | 60 [18.2] | 50 [15.2] |
| 5'                                                                          |               | 70 [21.3]                       | 60 [18.2] | 50 [15.2] | 40 [12.2] | 30 [9.1]  | 20 [6.1]  |
| 6'                                                                          |               | 45 [13.7]                       | 35 [10.7] | 25 [7.6]  | 15 [4.6]  | 5 [1.5]   | N/A       |
| 7'                                                                          |               | 32 [9.8]                        | 20 [6.1]  | 15 [4.6]  | 10 [3.05] | ---       | ---       |
| 8'                                                                          | 12" Flex      | 70 [21.3]                       | 60 [18.2] | 50 [15.2] | 40 [12.2] | 30 [9.1]  | 20 [6.1]  |

| Figure 8U.2         |              |                      |
|---------------------|--------------|----------------------|
| CFM Replacement Air |              |                      |
| Fireplace Size      | Required CFM | Open Air Requirement |
| 3'                  | 320 CFM      | 78 Sq. Inches        |
| 4'                  | 480 CFM      | 78 Sq. Inches        |
| 5'                  | 640 CFM      | 78 Sq. Inches        |
| 6'                  | 800 CFM      | 78 Sq. Inches        |
| 7'                  | 960 CFM      | 78 Sq. Inches        |
| 8'                  | 1,120 CFM    | 113 Sq. Inches       |

#### NOTE: GLASS TEMPERATURES

Stellar fireplaces use large amount of outside air for combustion and to cool the viewing glass.

When operating the fireplace in the summer, the incoming air will be warmer therefore the glass will be warmer.

When operating the fireplace in the winter, the glass will be cooler. This is not a safety concern, but something to note.

#### POWERVERT AND AIR-INTAKE CAP PLACEMENT CLEARANCES

For horizontal installation clearances refer to *Section 8 - Venting (K, L & M)*.

For vertical installation clearances refer to *Section 8 - Venting (J, N, O & P)*.

## 8 - VENTING

### V. CHANGING FROM OUTSIDE SIDE INTAKE AIR TO BOTTOM INTAKE AIR

Step 1: Remove 4 screws that hold collar plate in place.  
Refer to Figure 8V.1

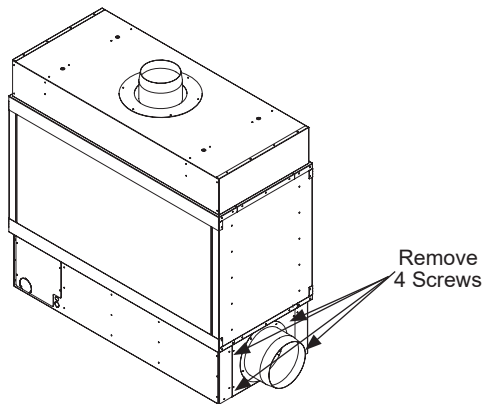


Figure 8V.1

Step 2: Slide collar plate off fireplace.  
Refer to Figure 8V.2

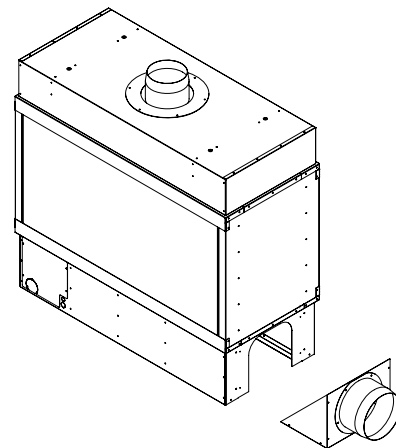


Figure 8V.2

Step 3: Turn plate so collar is facing down, slide plate into slots on each side. Refer to Figure 8V.3A and Figure 8V.3B

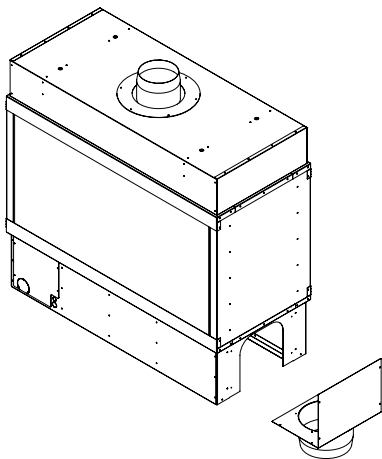


Figure 8V.3A

Step 4: Re-attach the plate with four screws.  
Refer to Figure 8V.4

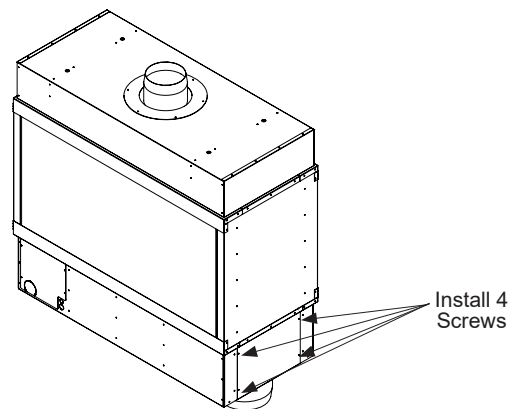


Figure 8V.4

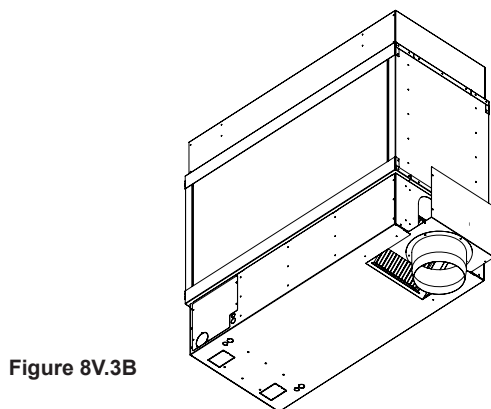


Figure 8V.3B

**NOTE: SINGLE SIDED SHOWN IN EXAMPLE**


## 8 - VENTING

### W. ROOM AIR FOR COMBUSTION - TOE KICK EXAMPLE WITHOUT HEARTH

#### SINGLE SIDE INTAKE WITHOUT HEARTH EXTENSION

*If drawing air from the room, the appropriate amount of make-up air must be introduced to replace the air taken from the room.*

*This is especially important in small volume rooms.*

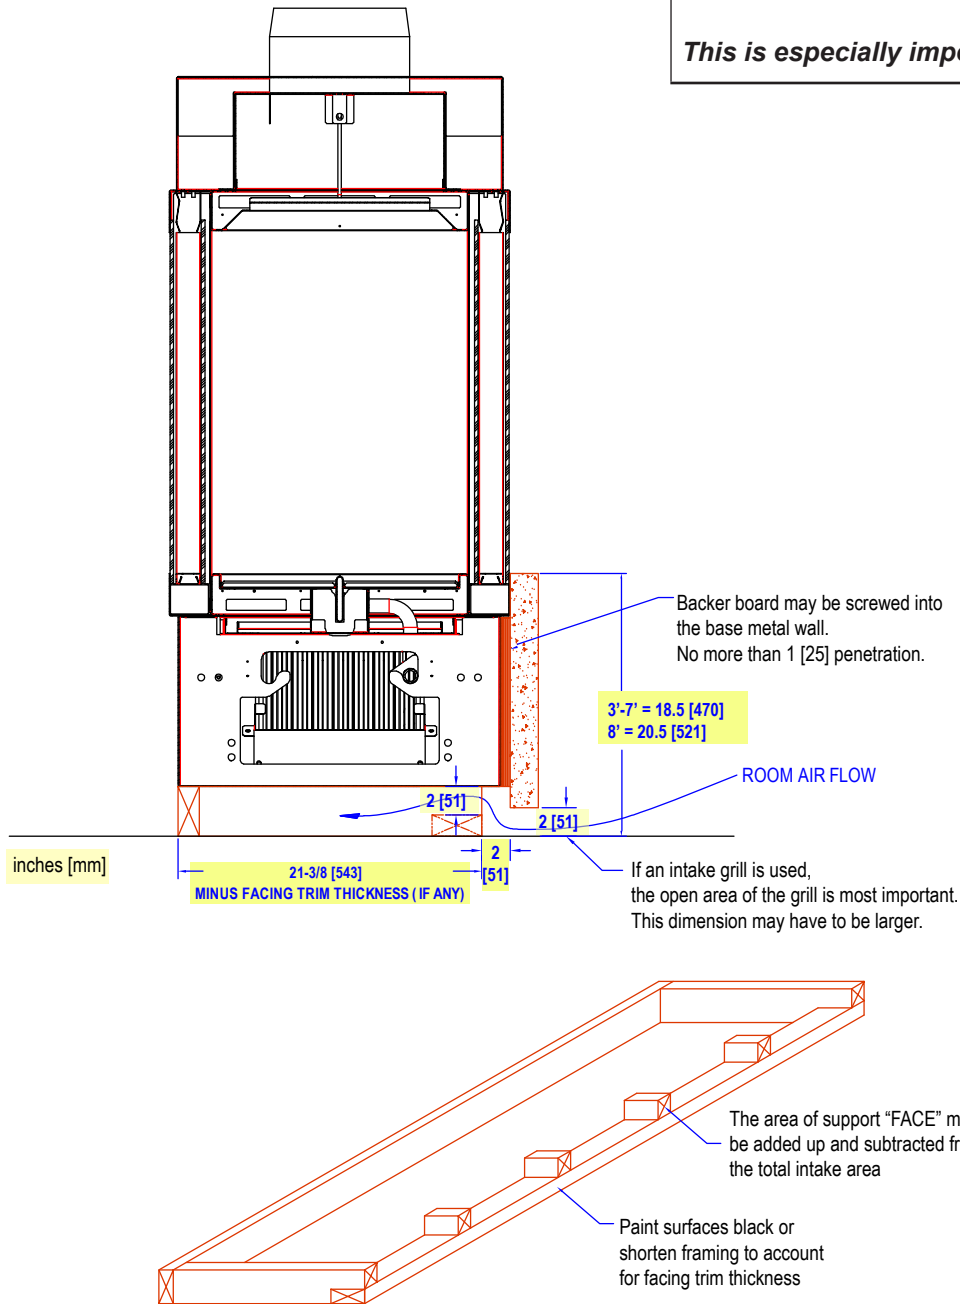

#### FIREPLACE BASE SUPPORT

Total required open area is 78 SQIN for 3'-7' fireplaces and 113 SQIN for 8' fireplaces.

Custom fireplace's open area must be 1.5 X the total area of the exhaust flue(s).

Any grill work must take into account these opening minimums.


Figure 8W

## 8 - VENTING

### X. ROOM AIR FOR COMBUSTION - TOE KICK EXAMPLE WITH HEARTH

SINGLE SIDE INTAKE WITH HEARTH EXTENSION

*Follow this template on at least one long side of multisided units.*

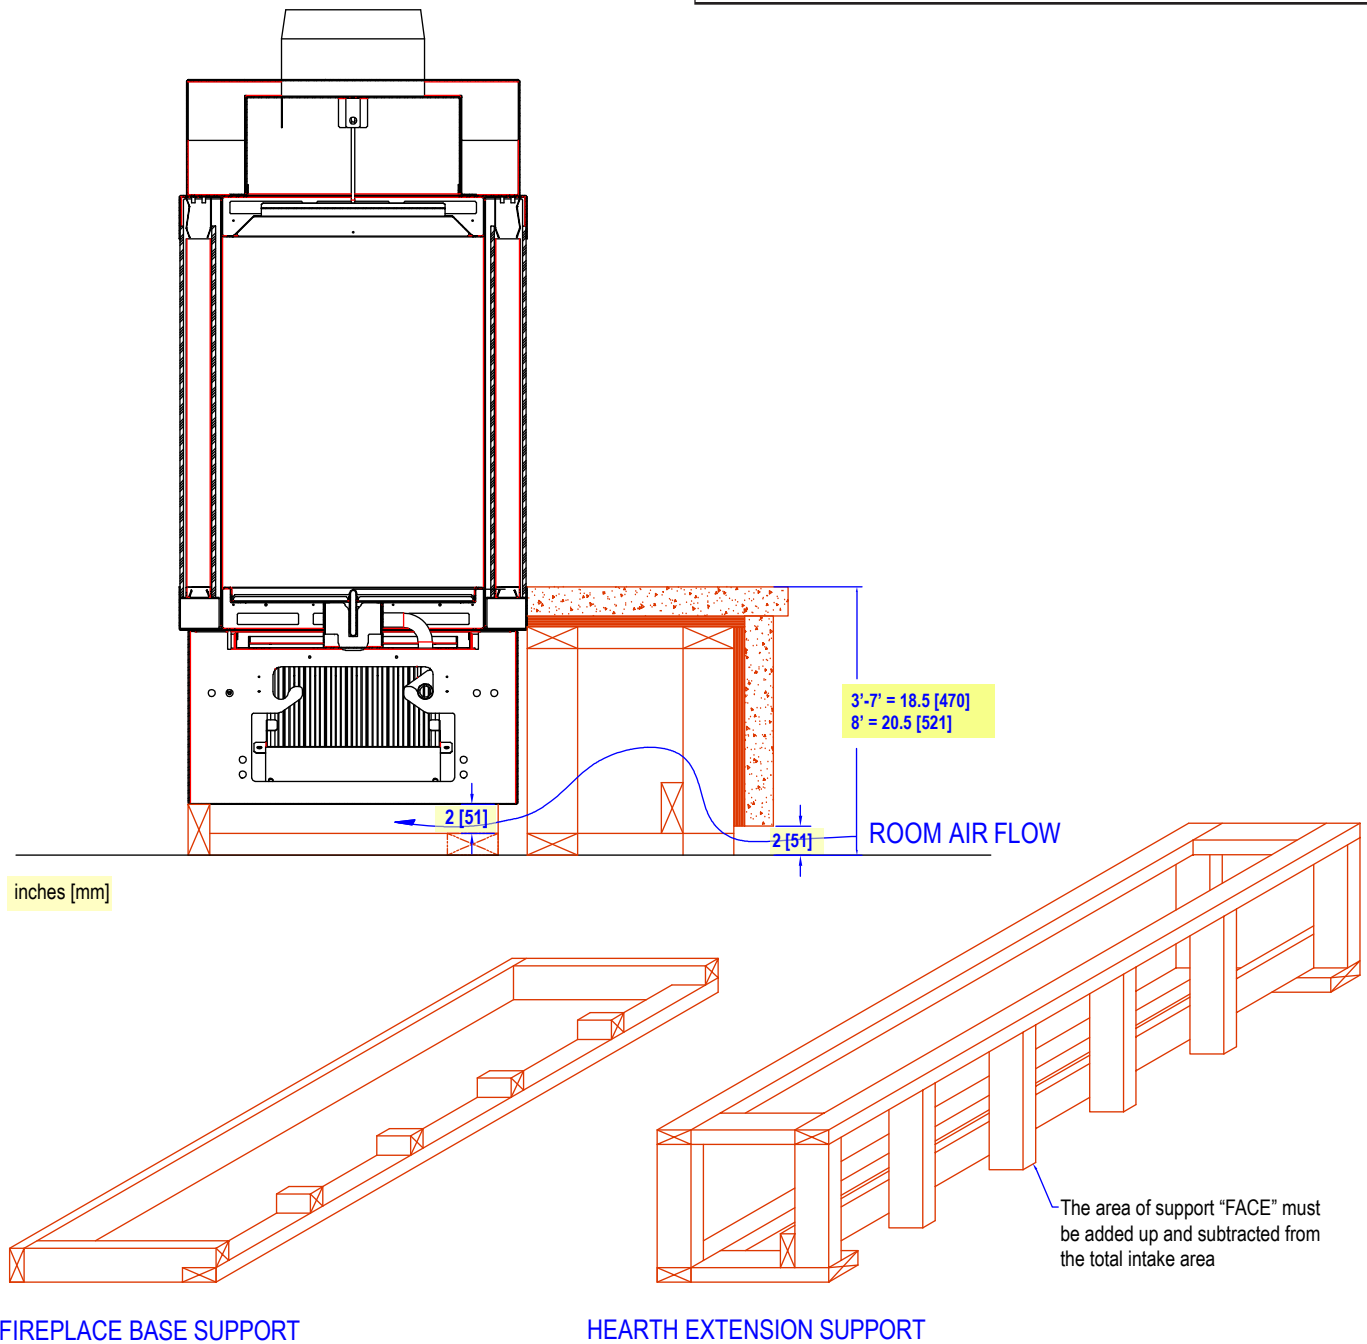

Total required open area is 78 SQIN for 3'-7' fireplaces and 113 SQIN for 8' fireplaces.  
 Custom fireplace's open area must be 1.5 X the total area of the exhaust flue(s).  
 Any grill work must take into account these opening minimums.

Figure 8X


## 9 - VENTING OPTIONS

**NOTE: CANNOT USE ON BAY OR FOUR SIDED DESIGNS**

### A. OPTIONAL VERTICAL AIR-INTAKE SIDE CHUTE

Use of the optional Outdoor Air-Intake Side Chute may be used with vertical runs where space is limited on the side of the fireplace.

| inches [mm]               |                                                            | WIDTH         | DEPTH          | HEIGHT            | COLLAR<br>DIAMETER |
|---------------------------|------------------------------------------------------------|---------------|----------------|-------------------|--------------------|
| Side Chute<br>Part Number | DESCRIPTION - (FP WIDTH)                                   | A             | B              | C                 | D                  |
| VIC20                     | Vertical Air-intake Chute for 20" High Enlight (3/4/5/6/7) | 8-9/32 [210]  | 14-21/32 [372] | 54-29/32 [1,395]  | 10 [254]           |
| VIC24                     | Vertical Air-intake Chute for 24" High Enlight (3/4/5/6/7) | 8-9/32 [210]  | 14-21/32 [372] | 58-29/32 [1,496]  | 10 [254]           |
| VIC30                     | Vertical Air-intake Chute for 30" High Enlight (3/4/5/6/7) | 8-9/32 [210]  | 14-21/32 [372] | 64-29/32 [1,649]  | 10 [254]           |
| VIC36                     | Vertical Air-intake Chute for 36" High Enlight (3/4/5/6/7) | 8-9/32 [210]  | 14-21/32 [372] | 70-29/32 [1,801]  | 10 [254]           |
| VIC48                     | Vertical Air-intake Chute for 48" High Enlight (3/4/5/6/7) | 8-9/32 [210]  | 14-21/32 [372] | 82-29/32 [2,108]  | 10 [254]           |
| VIC60                     | Vertical Air-intake Chute for 60" High Enlight (3/4/5/6/7) | 8-9/32 [210]  | 14-21/32 [372] | 94-29/32 [2,387]  | 10 [254]           |
| VIC20-8                   | Vertical Air-intake Chute for 20" High Enlight (8)         | 11-9/32 [287] | 14-21/32 [372] | 60-29/32 [1,547]  | 12 [305]           |
| VIC24-8                   | Vertical Air-intake Chute for 24" High Enlight (8)         | 11-9/32 [287] | 14-21/32 [372] | 64-29/32 [1,649]  | 12 [305]           |
| VIC30-8                   | Vertical Air-intake Chute for 30" High Enlight (8)         | 11-9/32 [287] | 14-21/32 [372] | 70-29/32 [1,801]  | 12 [305]           |
| VIC36-8                   | Vertical Air-intake Chute for 36" High Enlight (8)         | 11-9/32 [287] | 14-21/32 [372] | 76-29/32 [1,953]  | 12 [305]           |
| VIC48-8                   | Vertical Air-intake Chute for 48" High Enlight (8)         | 11-9/32 [287] | 14-21/32 [372] | 88-29/32 [2,260]  | 12 [305]           |
| VIC60-8                   | Vertical Air-intake Chute for 60" High Enlight (8)         | 11-9/32 [287] | 14-21/32 [372] | 100-29/32 [2,565] | 12 [305]           |

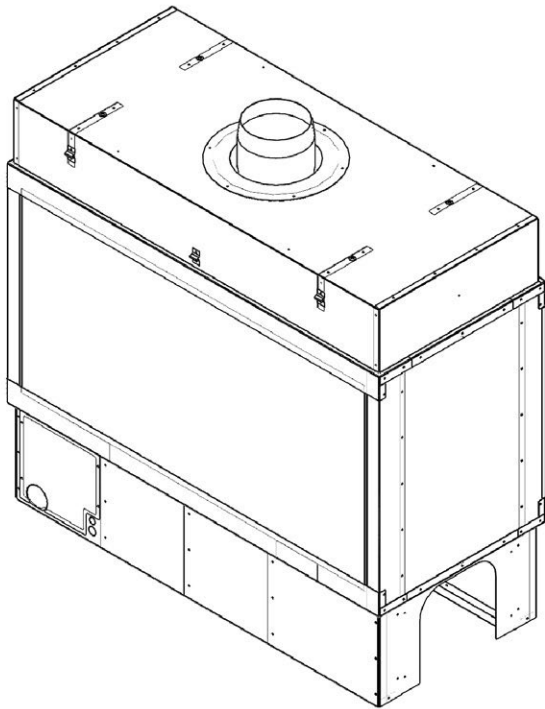

- Order at same time as the fireplace to ensure fireplace is built with the VIC attached during production.
- VIC fits inside of framing.

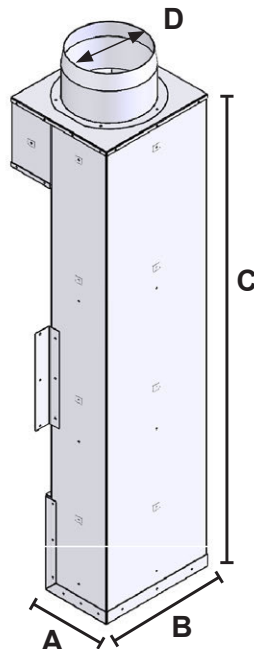


Figure 9A

## 9 - VENTING OPTIONS

### B. OPTIONAL UNIVERSAL EXHAUST IN AIR-INTAKE LOUVER



| MODEL     | UNITS       | USE                    |
|-----------|-------------|------------------------|
| LOUVER-8  | 3', 4' & 5' | Exhaust Only           |
| LOUVER-10 | 3', 4' & 5' | Air-Intake             |
| LOUVER-10 | 6', 7'      | Exhaust and Air-Intake |
| LOUVER-10 | 8'          | Exhaust Only           |
| LOUVER-12 | 8'          | Air-Intake ONLY        |

- This kit is an optional method of terminating the fresh air and/or exhaust for the appliance.
- Exhaust terminations must be installed with an in-line powervent.
- Follow the complete installation instructions provided with the louver kit.



Figure 9B.1

#### LOUVER-8 & LOUVER-10

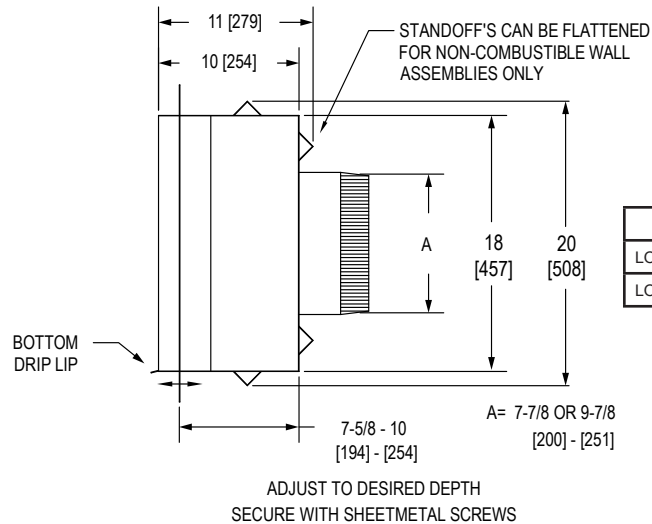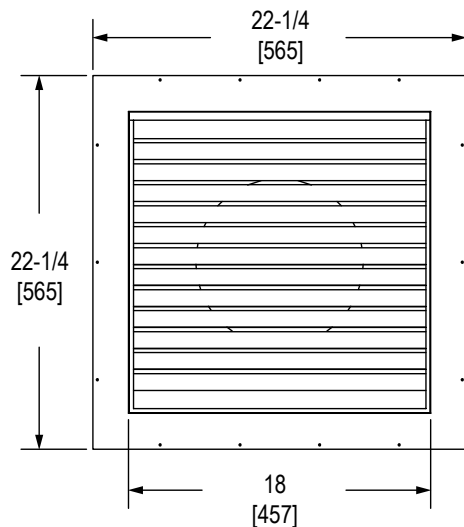

inches [mm]

#### LOUVER-12

##### AIR-INTAKE ONLY


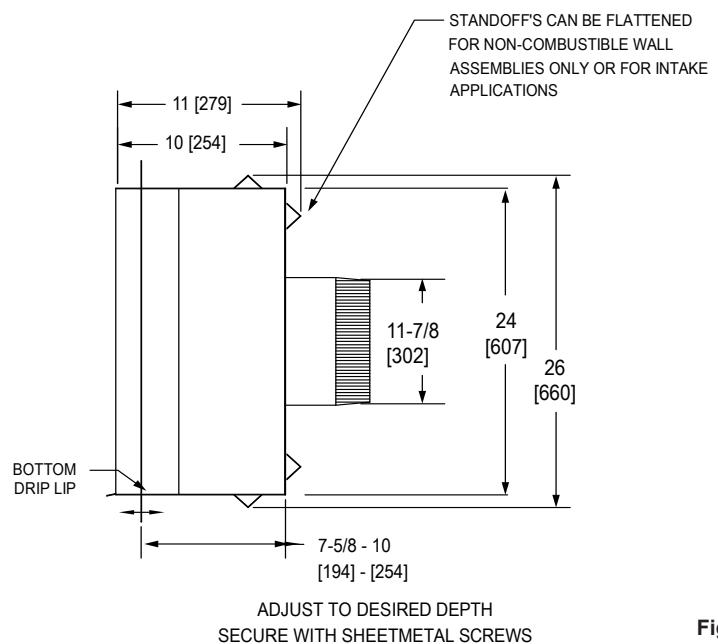


Figure 9B.2


Figure 9B.3

# 10 - ELECTRIC

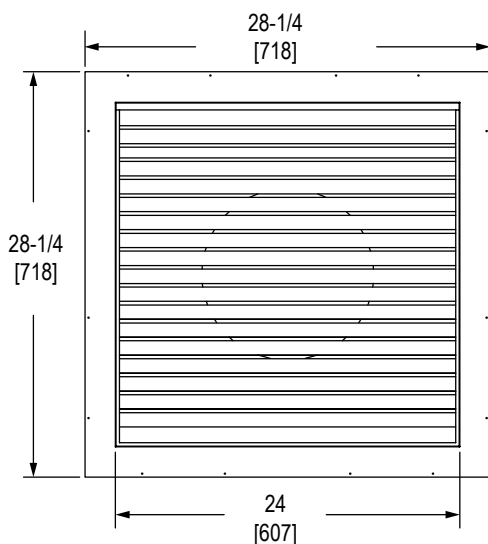

For Tethered Control Panel Refer To Section 10 (D, E.1 & E.2)

## A. ELECTRICAL INSTALLATION OVERVIEW

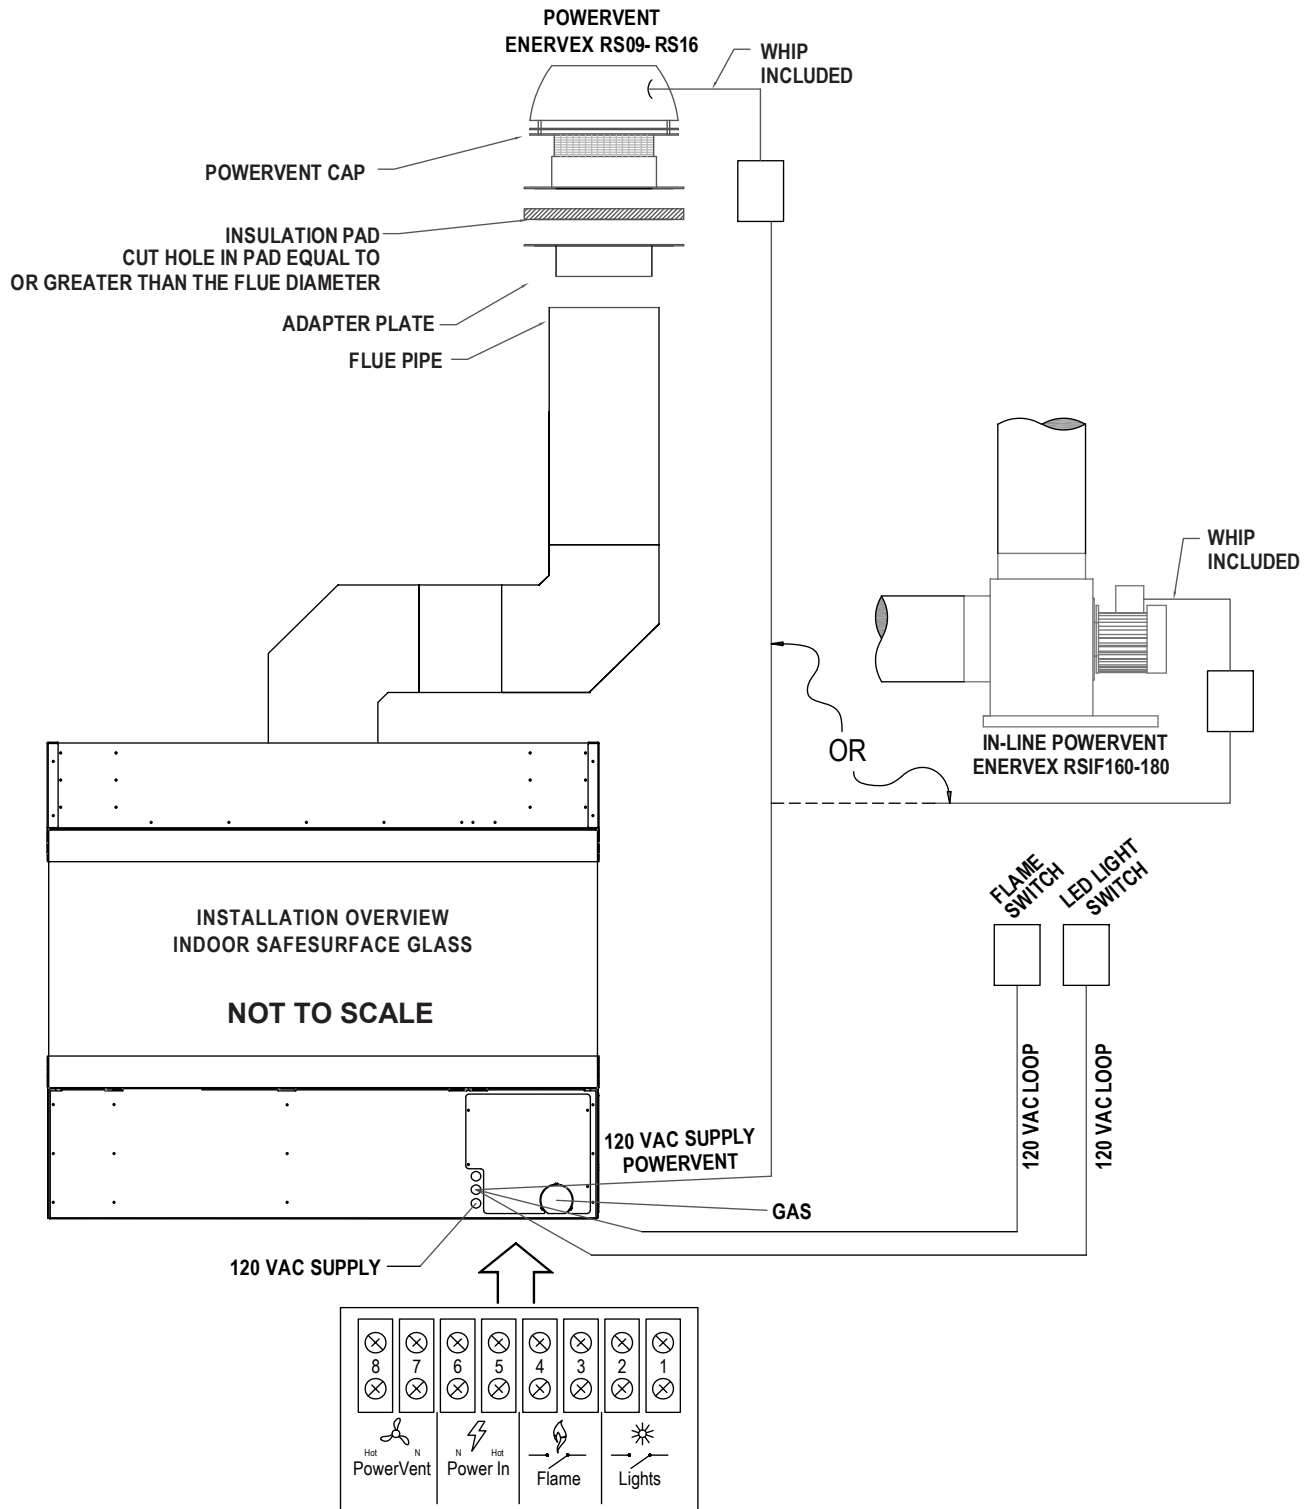


**NOTE FOR THE ELECTRICIAN: FIELD WIRING SHOULD BE LABELED FOR EASY IDENTIFICATION.**

# 10 - ELECTRIC

## B.1 ELECTRICAL WIRING SCHEMATIC - SERVICE



**NOTE:** The appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the *National Electrical Code, ANSI/NFPA 70*, or the *Canadian Electrical Code, Part 1, CSA C22.1*.

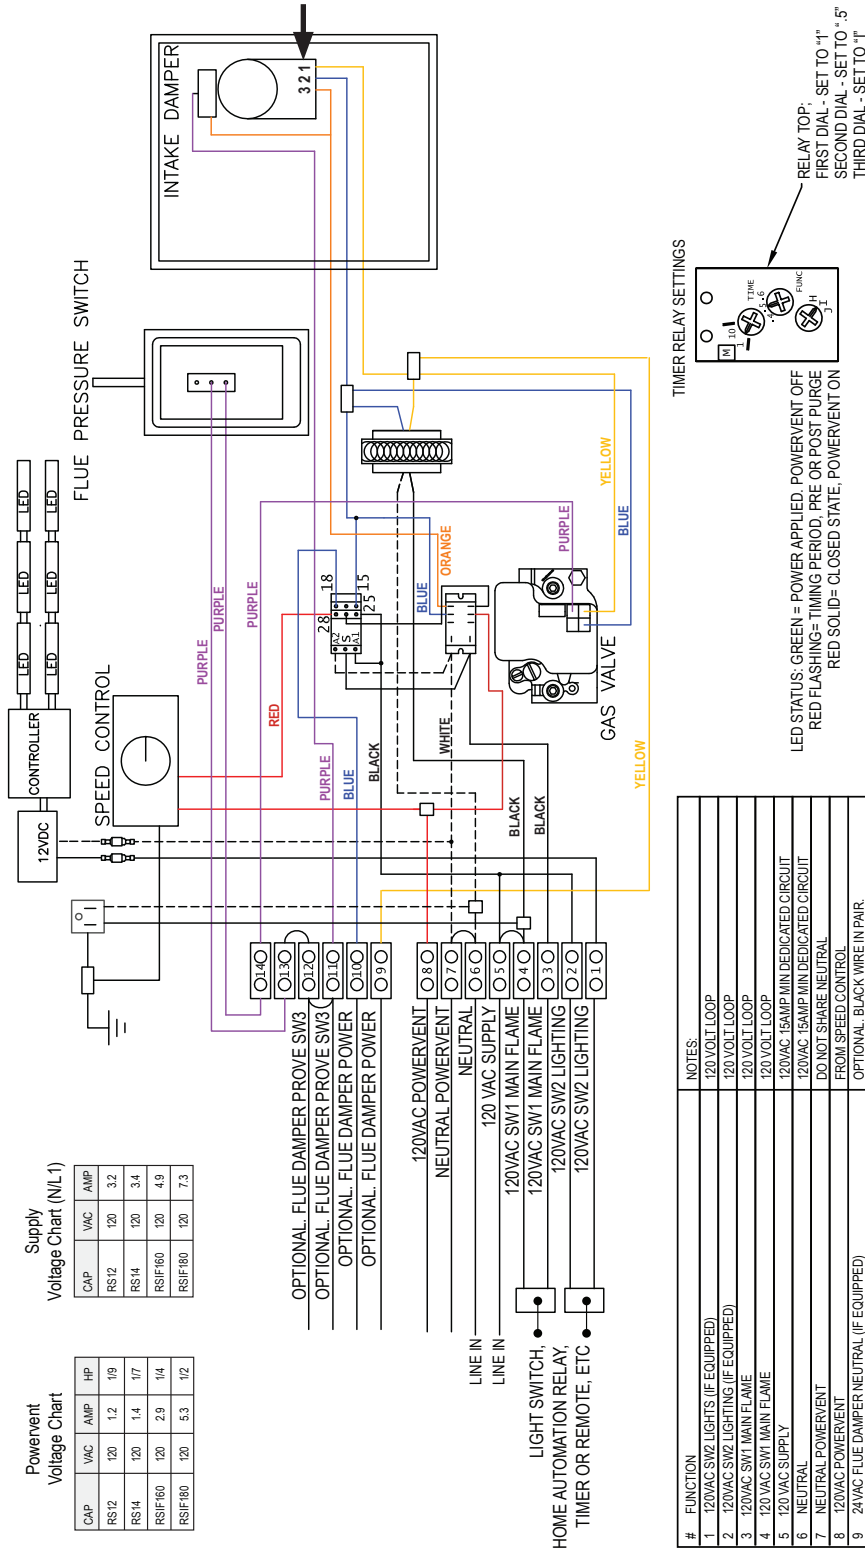

**LED STATUS:** GREEN = POWER APPLIED, POWERVENT OFF  
**RED FLASHING**= TIMING PERIOD, PRE OR POST PURGE  
**RED SOLID**= CLOSED STATE, POWERVENT ON

**RELAY TOP:**  
 FIRST DIAL - SET TO "1"  
 SECOND DIAL - SET TO "5"  
 THIRD DIAL - SET TO "1"

**TIMER RELAY SETTINGS**

To light the fireplace: Activate the switch.  
 The fireplace has a pre and post timer, set at the factory for 30 seconds.  
 The powervent will start after the switch is activated.  
 The flame will not turn on for 30-60 seconds after switch is activated  
 and the powervent will run for 30 seconds after it has been shut off.

SYSTEM FB1B111SYS


Figure 10 B.1

# 10 - ELECTRIC

## B.2 ELECTRICAL WIRING SCHEMATIC - FIELD

**WIRE THE FIREPLACE TO A 15 AMP MIN DEDICATED CIRCUIT. SEE TERMINALS #5 & #6.**

### SYSTEM A - LIGHTS

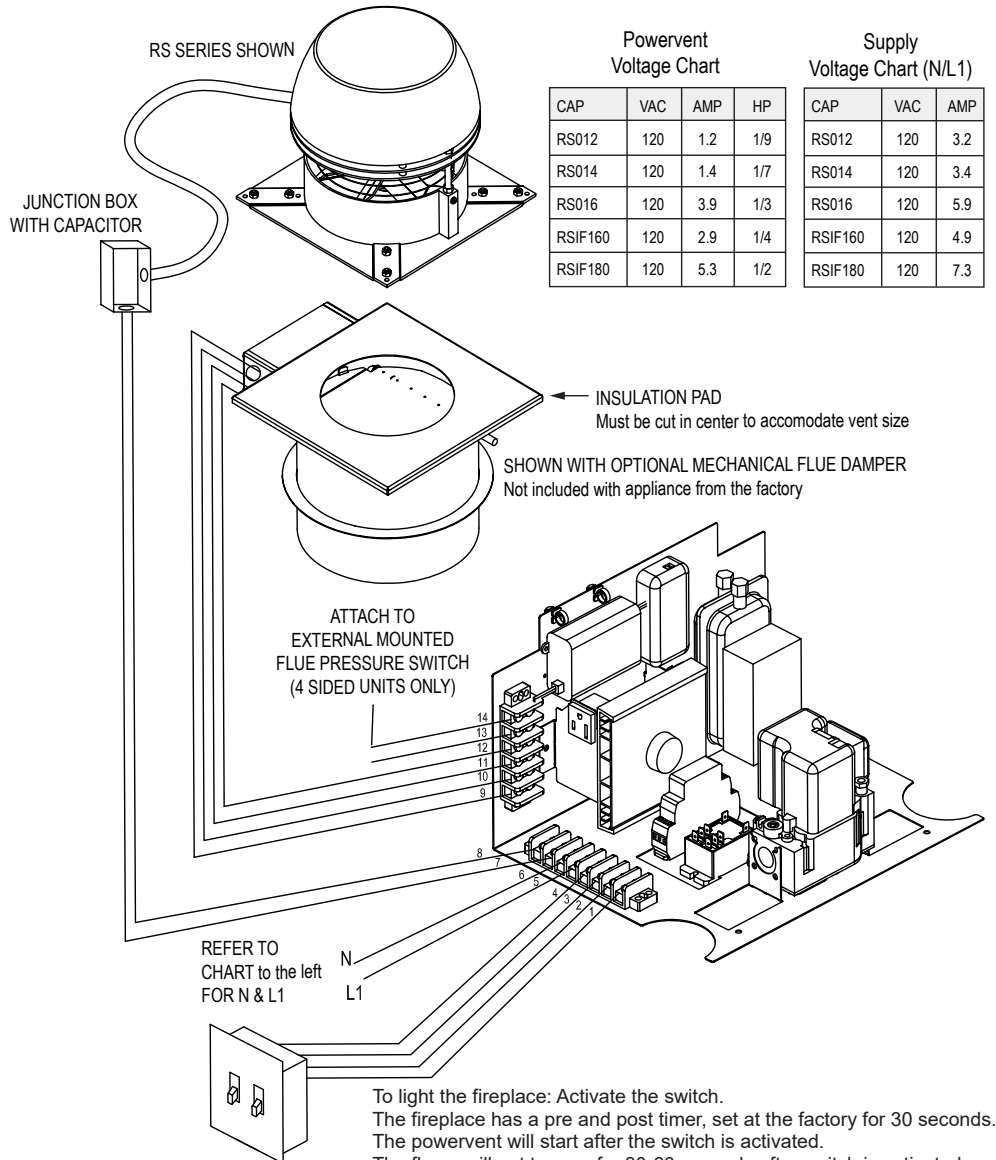

Powervent  
Voltage Chart

| CAP     | VAC | AMP | HP  |
|---------|-----|-----|-----|
| RS012   | 120 | 1.2 | 1/9 |
| RS014   | 120 | 1.4 | 1/7 |
| RS016   | 120 | 3.9 | 1/3 |
| RSIF160 | 120 | 2.9 | 1/4 |
| RSIF180 | 120 | 5.3 | 1/2 |

Supply  
Voltage Chart (N/L1)

| CAP     | VAC | AMP |
|---------|-----|-----|
| RS012   | 120 | 3.2 |
| RS014   | 120 | 3.4 |
| RS016   | 120 | 5.9 |
| RSIF160 | 120 | 4.9 |
| RSIF180 | 120 | 7.3 |

| #  | FUNCTION                                                    | NOTES:                                  |
|----|-------------------------------------------------------------|-----------------------------------------|
| 1  | 120 VAC SW2 LIGHTS (IF EQUIPPED)                            | 120 VOLT LOOP                           |
| 2  | 120VAC SW2 LIGHTS (IF EQUIPPED)                             | 120 VOLT LOOP                           |
| 3  | 120VAC SW1 MAIN FLAME                                       | 120 VOLT LOOP                           |
| 4  | 120 VAC SW1 MAIN FLAME                                      | 120 VOLT LOOP                           |
| 5  | 120 VAC SUPPLY                                              | CONNECT TO CONSTANT POWER SOURCE        |
| 6  | NEUTRAL                                                     | CONNECT TO CONSTANT POWER SOURCE        |
| 7  | NEUTRAL POWERVENT                                           | DO NOT SHARE NEUTRAL                    |
| 8  | 120VAC POWERVENT                                            | FROM SPEED CONTROL                      |
| 9  | 24VAC FLUE DAMPER NEUTRAL                                   | OPTIONAL                                |
| 10 | 24VAC FLUE DAMPER POWER                                     | OPTIONAL                                |
| 11 | SW3 FLUE DAMPER PROVE                                       | OPTIONAL. USE PURPLE AND WHITE, NOT RED |
| 12 | SW3 DAMPER PROVE                                            | OPTIONAL. USE PURPLE AND WHITE, NOT RED |
| 13 | CONNECTION FOR EXTERNAL FLUE PRESSURE SWITCH (4 SIDED ONLY) | FACTORY WIRED                           |
| 14 | CONNECTION FOR EXTERNAL FLUE PRESSURE SWITCH (4 SIDED ONLY) | FACTORY WIRED                           |


Figure 10 B.2

# 10 - ELECTRIC

## B.3 JUNCTION BOX & CAPACITOR

**DO NOT DISCARD  
JUNCTION BOX - CAPACITOR INSIDE**

**JUNCTION BOX  
PRE-WIRED FROM STELLAR**

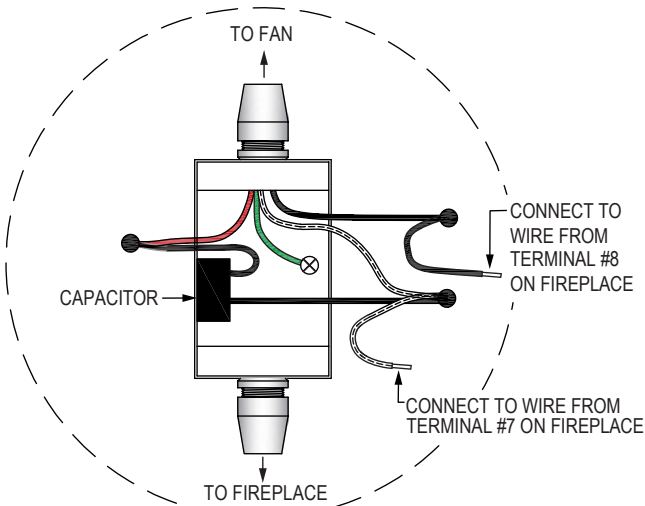

**JUNCTION BOX  
WIRING FROM ENERVEX**

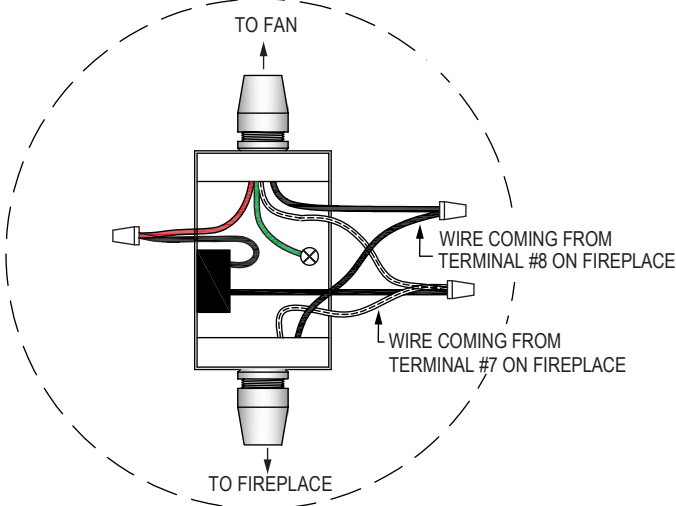


Figure 10 B.3

## C.1 TERMINALS 1 & 2 - LED LIGHTING

### TERMINAL 1 & 2: LED LIGHTING

|             |                                                                 |
|-------------|-----------------------------------------------------------------|
| TERMINAL #2 | HAS 120VAC POWER TO SUPPLY A SWITCH, RELAY, TIMER, REMOTE, ETC. |
| TERMINAL #1 | RETURNS 120VAC POWER TO ACTIVATE THE LED DRIVER.                |

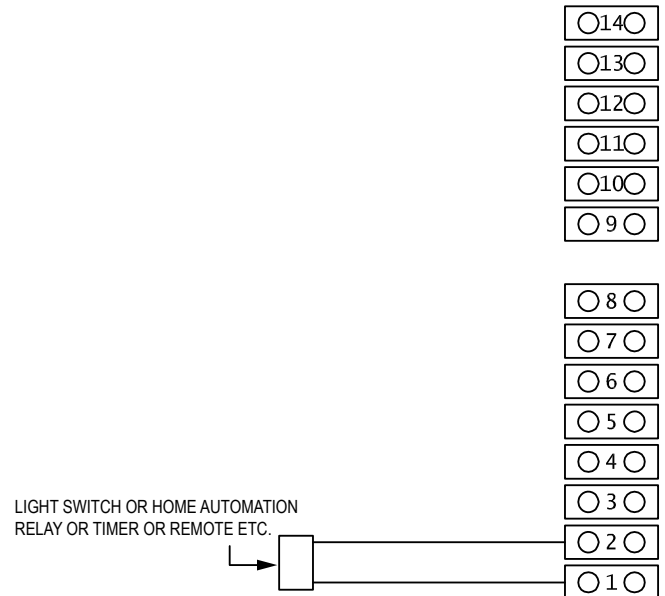


Figure 10 C.1

**NOTE FOR THE ELECTRICIAN:  
FIELD WIRING SHOULD BE LABELED  
FOR EASY IDENTIFICATION.**

# 10 - ELECTRIC

## C.2 TERMINALS 3 & 4 - MAIN FLAME

### TERMINAL 3 & 4 : MAIN FLAME

|             |                                                                 |
|-------------|-----------------------------------------------------------------|
| TERMINAL #4 | HAS 120VAC POWER TO SUPPLY A SWITCH, RELAY, TIMER, REMOTE, ETC. |
| TERMINAL #3 | RETURNS 120VAC POWER TO ACTIVATE TO MAIN FLAMES.                |

IF USING STANDARD ROMEX, CONNECT BLACK TO TERMINAL #4 AND WHITE TO TERMINAL #3.  
SINCE 120 VOLTS WILL TRAVEL ON WHITE, MARK THE WHITE WIRE ACCORDING TO CODE.

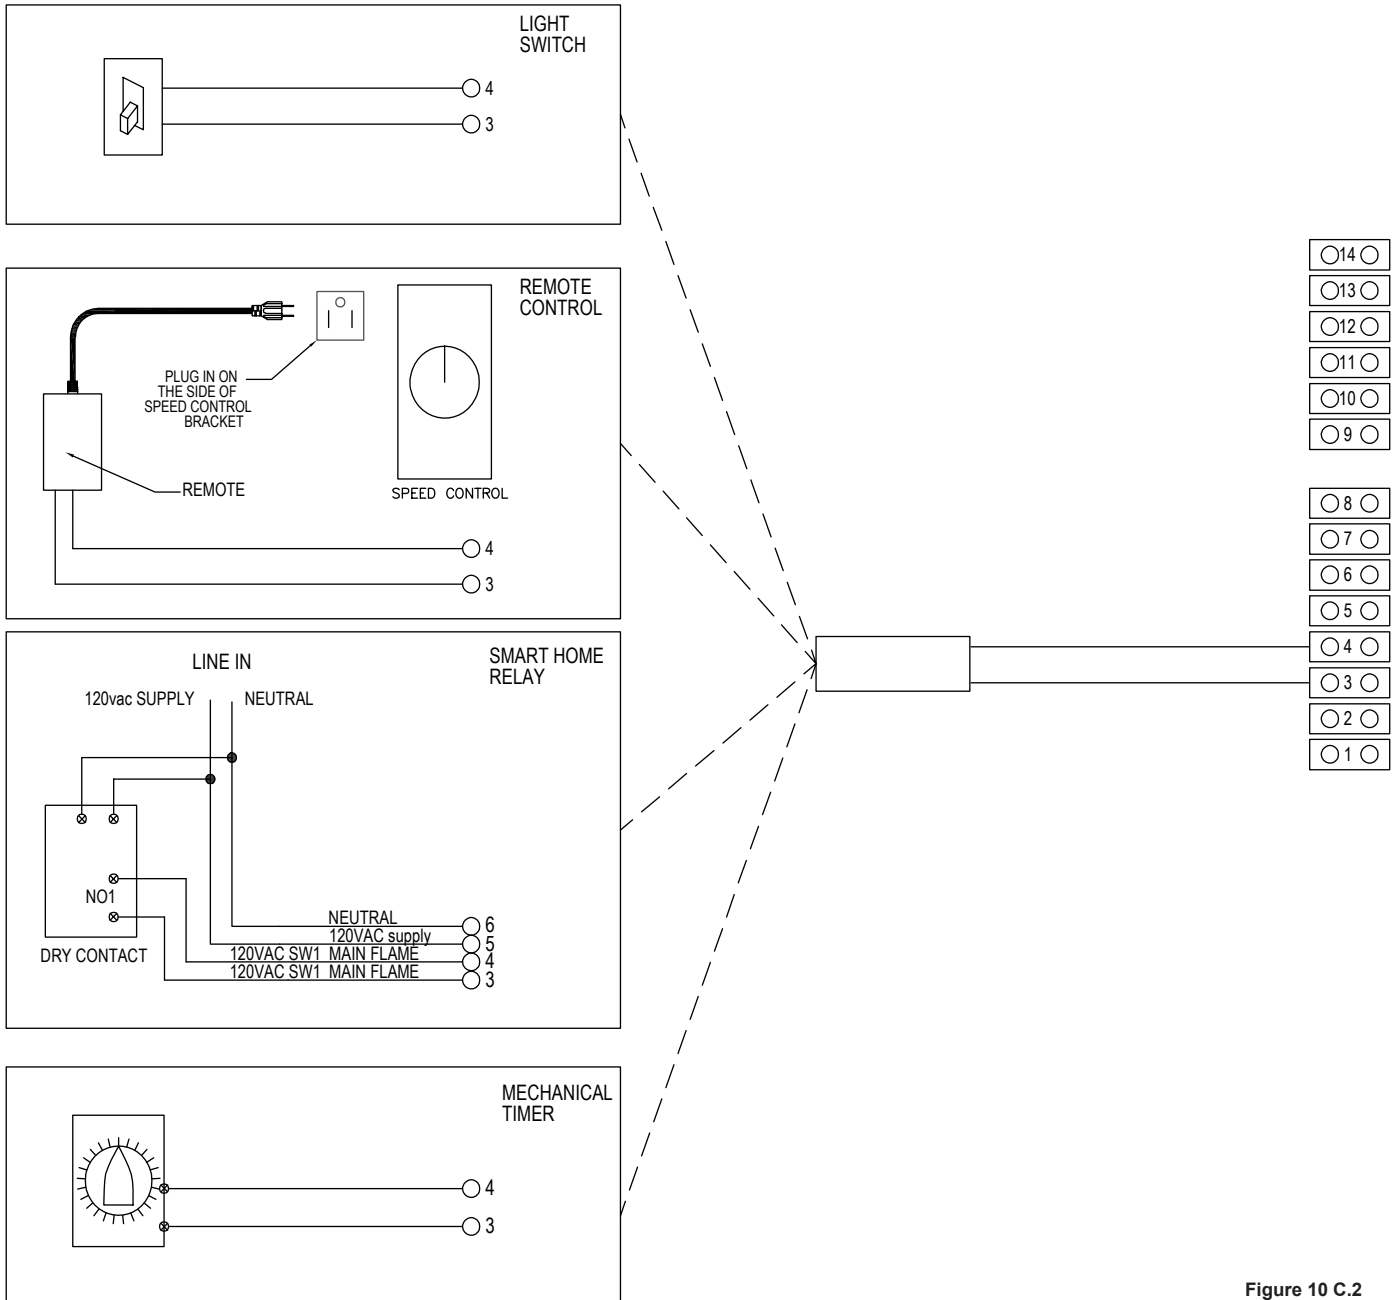


Figure 10 C.2

**SMART HOME RELAY NOTE:** Generic diagram, follow specific relay manufactures instructions.

10 - ELECTRIC

C.3 TERMINALS 5 & 6  
FIREPLACE POWER

TERMINAL 5 & 6: FIREPLACE POWER

|                                                                                          |                                                                                                                                                |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| GROUND - LOCATE THE GREEN WIRE CLUSTER<br>CONNECT THE GREEN WIRE TAIL TO BUILDING GROUND |                                                                                                                                                |
| TERMINAL #5                                                                              | IS THE 120VAC POWER SUPPLY FOR THE FIREPLACE. THIS IS A CONSTANT POWER SUPPLY AND SHOULD NOT BE SWITCHED. A SERVICE DISCONNECT MAY BE DESIRED. |
| TERMINAL #6                                                                              | IS THE NEUTRAL CONNECTION                                                                                                                      |

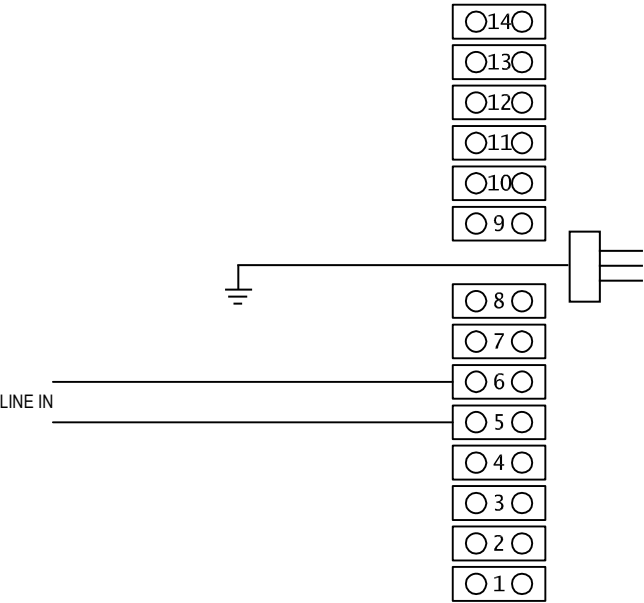


Figure 10 C.3

WIRE THE FIREPLACE TO A 15 AMP MIN DEDICATED CIRCUIT.

C.4 TERMINALS 7 & 8  
POWERVERT MOTOR

TERMINAL 7 & 8: POWERVERT CONNECTION

|                                                                                   |                                                                       |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| POWERVERT POWER MUST COME FROM THE TERMINAL BLOCK AND NOT ANY OTHER POWER SOURCE. |                                                                       |
| TERMINAL #8                                                                       | IS THE HOT CONNECTION FOR THE POWERVERT MOTOR FROM THE SPEED CONTROL. |
| TERMINAL #7                                                                       | IS THE NEUTRAL CONNECTION FOR THE POWERVERT MOTOR.                    |

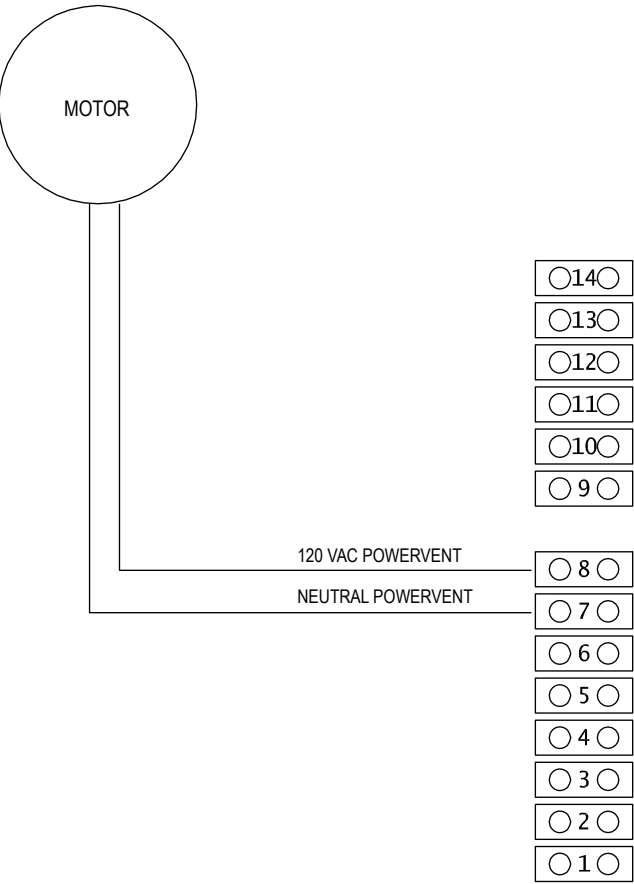


Figure 10 C.4

# 10 - ELECTRIC


## C.5 TERMINALS 9 & 10 FLUE DAMPER CONNECTION

### TERMINALS 9 & 10: FLUE DAMPER CONNECTION

THIS IS LOW VOLTAGE AND EXTERNAL POWER MUST NOT BE APPLIED

|              |                                                                |
|--------------|----------------------------------------------------------------|
| TERMINAL #9  | IS THE NEUTRAL CONNECTION FOR THE DAMPER MOTOR.<br>BLACK WIRE. |
| TERMINAL #10 | IS THE HOT CONNECTION FOR THE DAMPER MOTOR.<br>RED WIRE.       |

NOTE: THIS IS OPTIONAL.  
IF A DAMPER IS NOT USED DO NOT CONNECT ANYTHING TO TERMINALS 9 & 10.

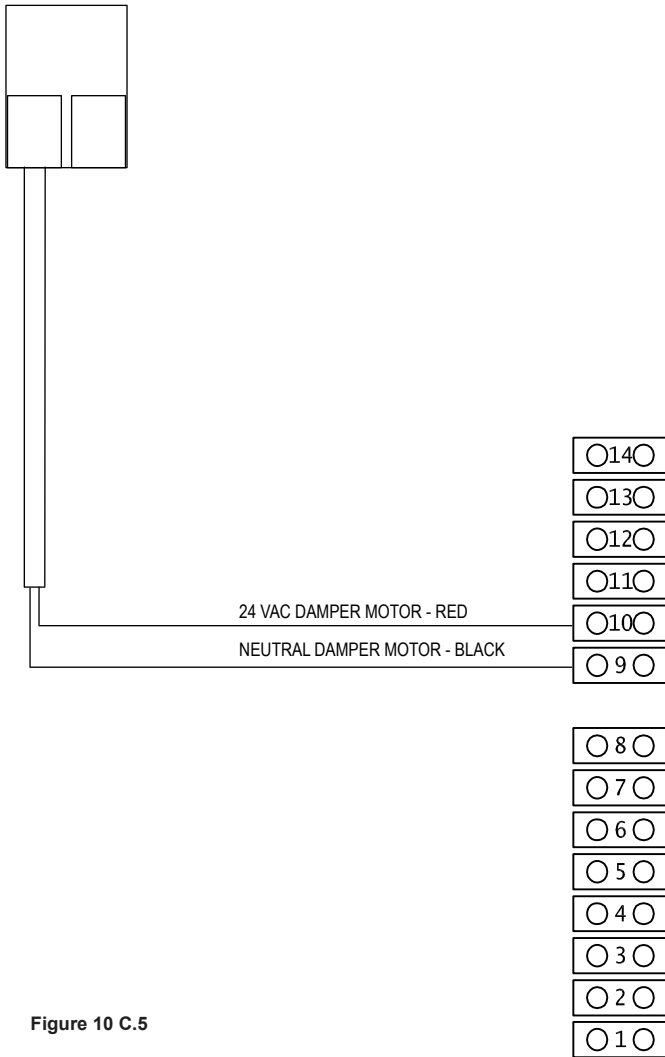


## C.6 TERMINALS 11 & 12 FLUE DAMPER PROVE

### TERMINALS 11 & 12: FLUE DAMPER PROVE

THIS IS LOW VOLTAGE AND EXTERNAL POWER MUST NOT BE APPLIED

|              |                                                                               |
|--------------|-------------------------------------------------------------------------------|
| TERMINAL #11 | CONNECTS TO THE WHITE WIRE FROM THE TRIPLE WIRE LEAD<br>ON THE DAMPER MOTOR.  |
| TERMINAL #12 | CONNECTS TO THE PURPLE WIRE FROM THE TRIPLE WIRE LEAD<br>ON THE DAMPER MOTOR. |

NOTE: THIS IS OPTIONAL.  
IF A DAMPER IS NOT USED TERMINALS 11 & 12 HAVE A JUMPER ACROSS THEM

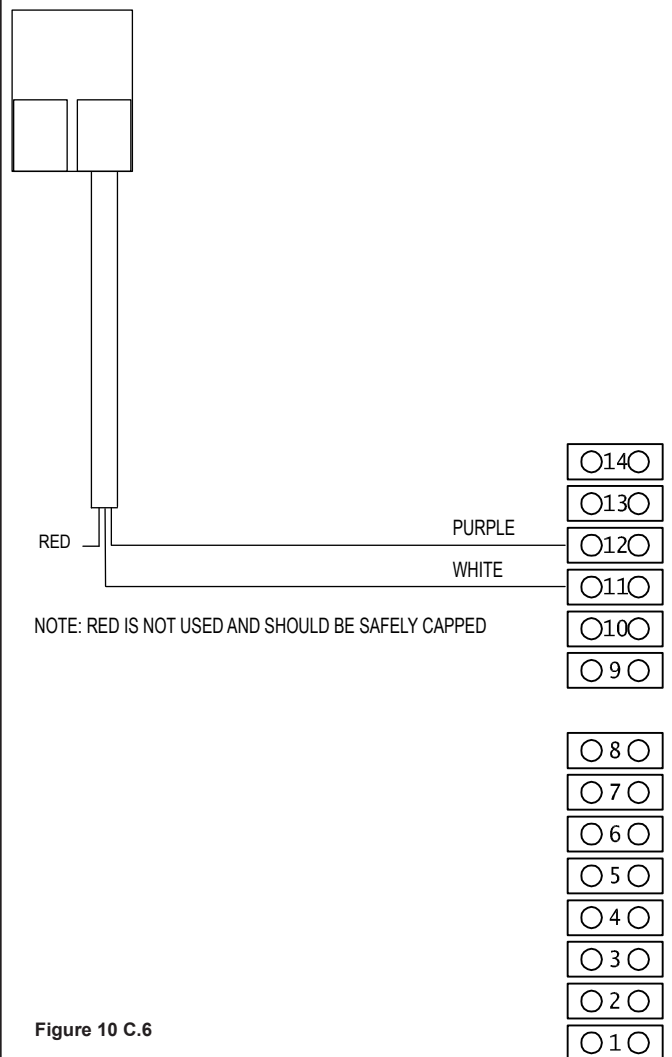

### Low Voltage Wire Gauge - Max Length

#### Feet [Meters]

| Transformer Output | 12 awg    | 14 awg     | 16 awg      | 18 awg     |
|--------------------|-----------|------------|-------------|------------|
| 40VA(W)            | 453 [138] | 285 [86.9] | 179 [54.56] | 113 [34.4] |

Use a minimum of 18 awg wire

# 10 - ELECTRIC

For Standard Electric Installation Refer To Section 10 (A.1 - C.6)

## D. TETHERED CONTROL PANEL INSTALLATION OVERVIEW

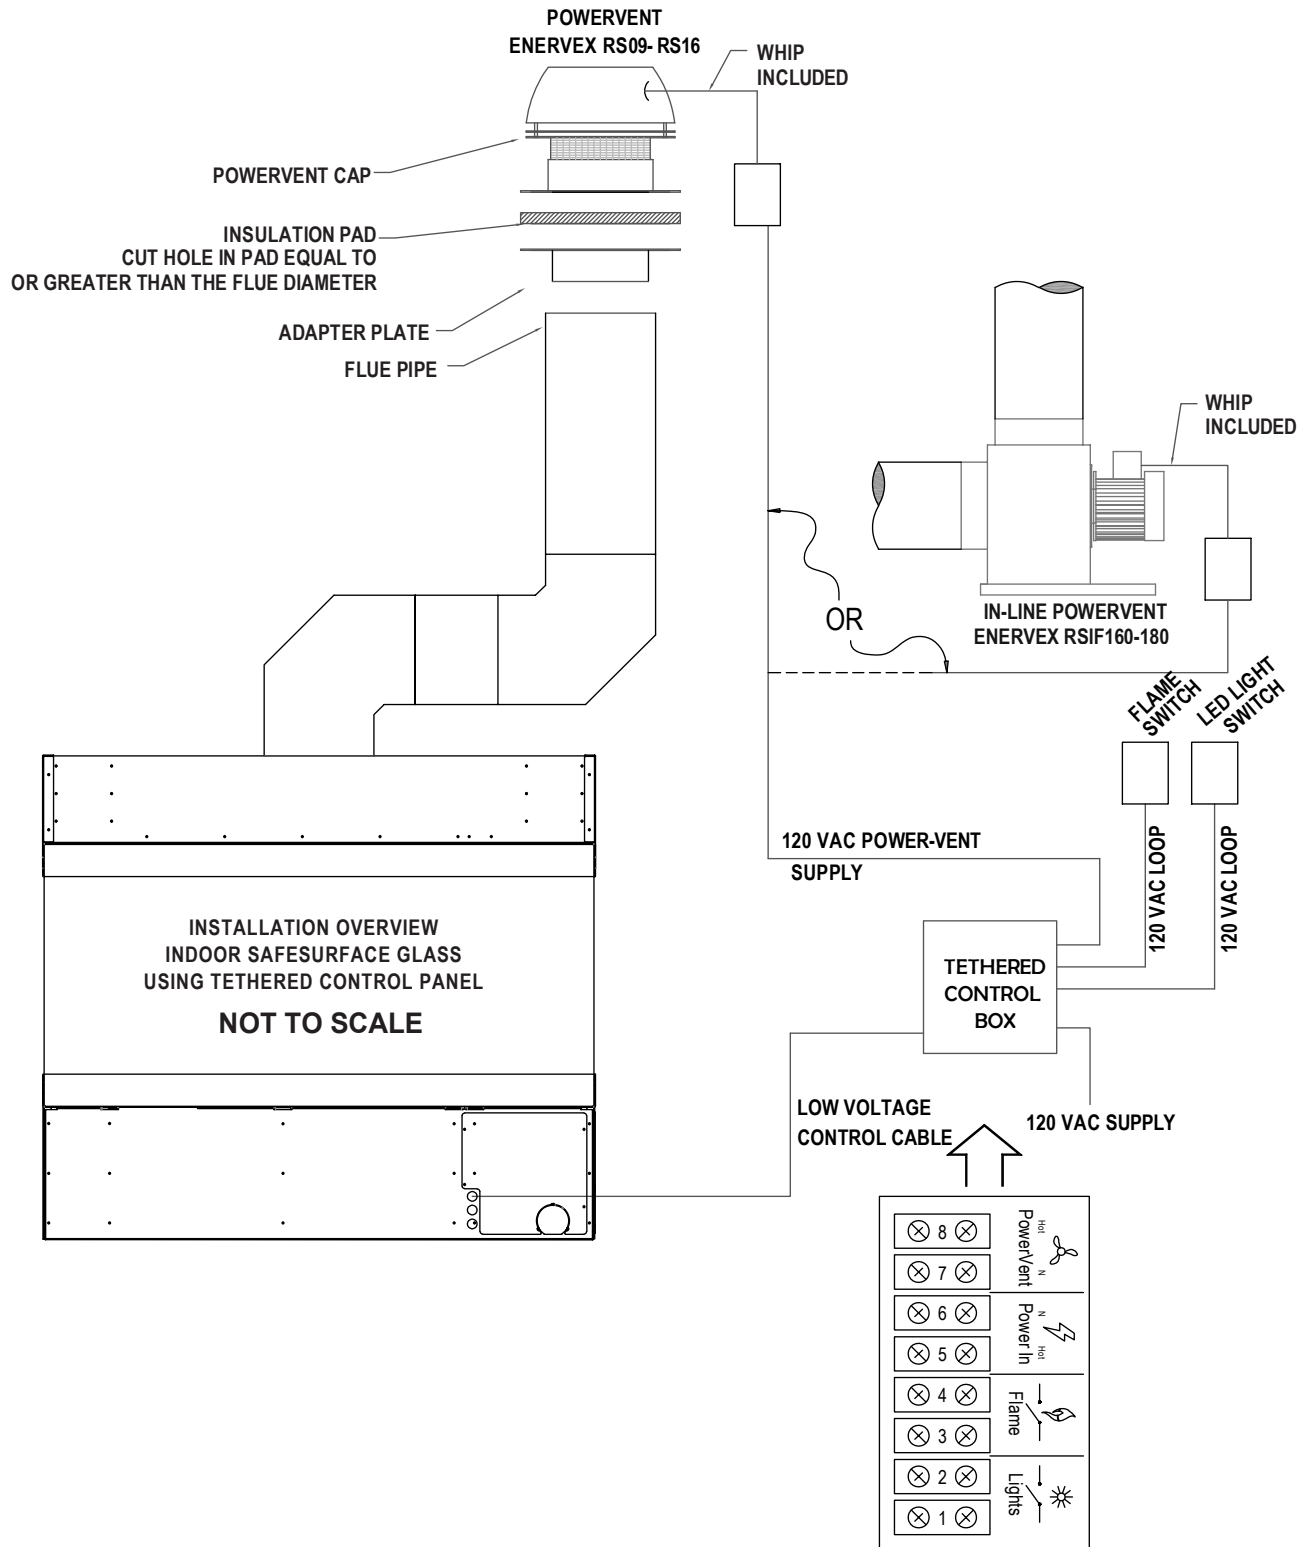


Figure 10 D

# 10 - ELECTRIC

## E.1 ELECTRICAL WIRING SCHEMATIC - FIELD

**WIRE THE FIREPLACE TO A 15 AMP MIN DEDICATED CIRCUIT. SEE TERMINALS #5 & #6.**

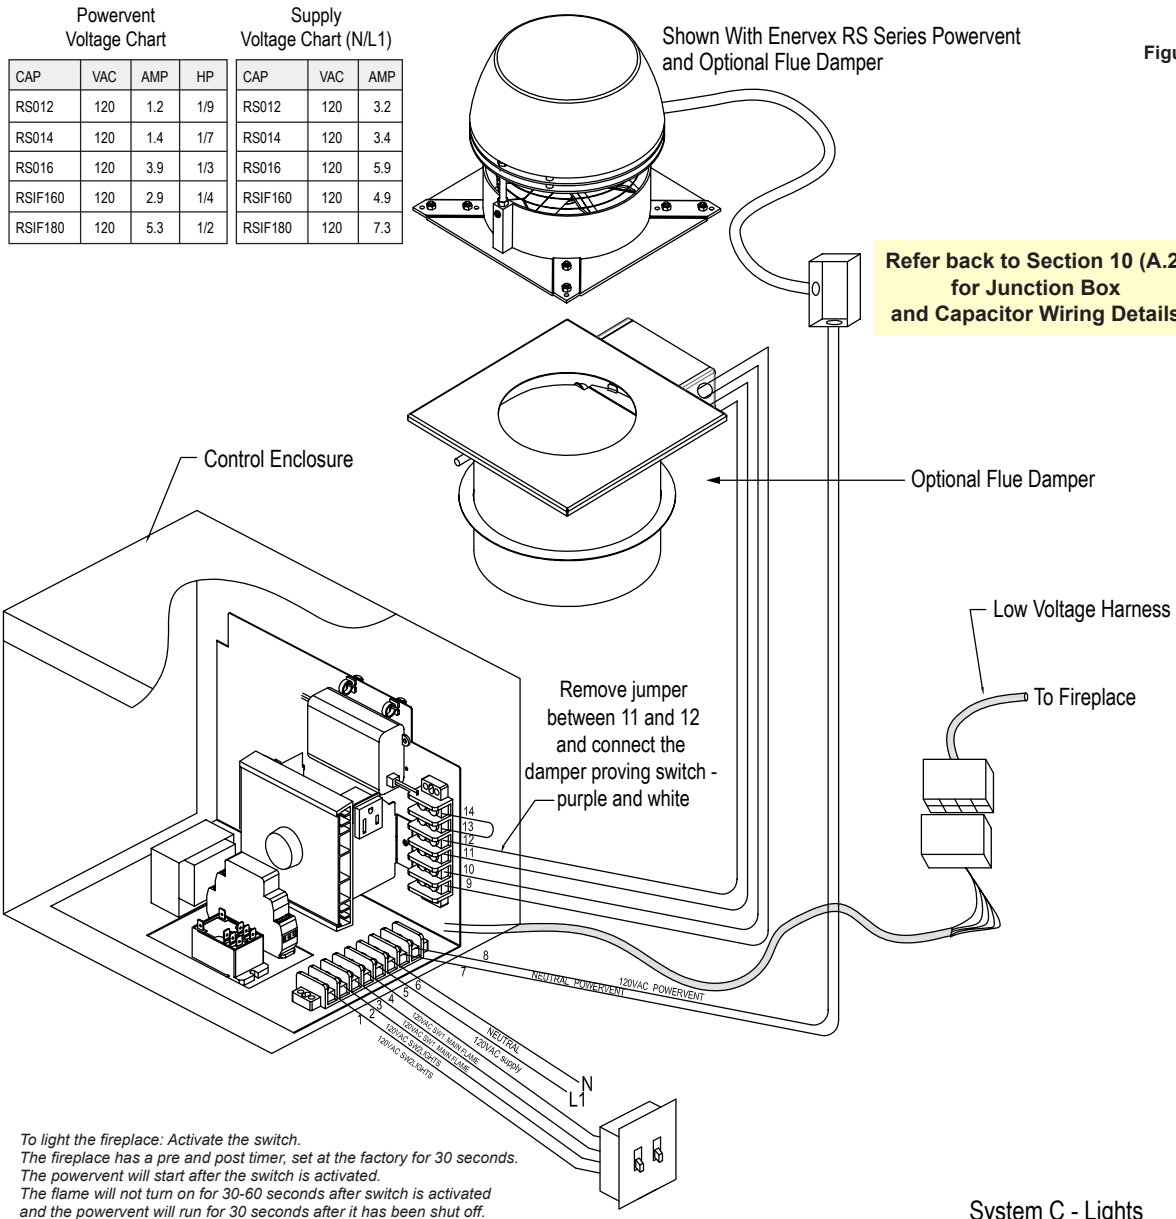


Figure 10 E.1

System C - Lights


| #  | FUNCTION                                                    | NOTES:                                  |
|----|-------------------------------------------------------------|-----------------------------------------|
| 1  | 120 VAC SW2 LIGHTING - IF EQUIPPED                          | 120 VOLT LOOP                           |
| 2  | 120 VAC SW2 LIGHTING - IF EQUIPPED                          | 120 VOLT LOOP                           |
| 3  | 120VAC SW1 MAIN FLAME                                       | 120 VOLT LOOP                           |
| 4  | 120 VAC SW1 MAIN FLAME                                      | 120 VOLT LOOP                           |
| 5  | 120 VAC SUPPLY                                              | CONNECT TO CONSTANT POWER SOURCE        |
| 6  | NEUTRAL                                                     | CONNECT TO CONSTANT POWER SOURCE        |
| 7  | NEUTRAL POWERVENT                                           | DO NOT SHARE NEUTRAL                    |
| 8  | 120VAC POWERVENT                                            | FROM SPEED CONTROL                      |
| 9  | 24VAC FLUE DAMPER NEUTRAL                                   | OPTIONAL                                |
| 10 | 24VAC FLUE DAMPER POWER                                     | OPTIONAL                                |
| 11 | SW3 FLUE DAMPER PROVE                                       | OPTIONAL. USE PURPLE AND WHITE, NOT RED |
| 12 | SW3 DAMPER PROVE                                            | OPTIONAL. USE PURPLE AND WHITE, NOT RED |
| 13 | CONNECTION FOR EXTERNAL FLUE PRESSURE SWITCH (4 SIDED ONLY) | FACTORY WIRED                           |
| 14 | CONNECTION FOR EXTERNAL FLUE PRESSURE SWITCH (4 SIDED ONLY) | FACTORY WIRED                           |

# 10 - ELECTRIC


## E.2 ELECTRICAL WIRING SCHEMATIC - SERVICE

SYSTEM: TB1B111SYS

Figure 10 E.2

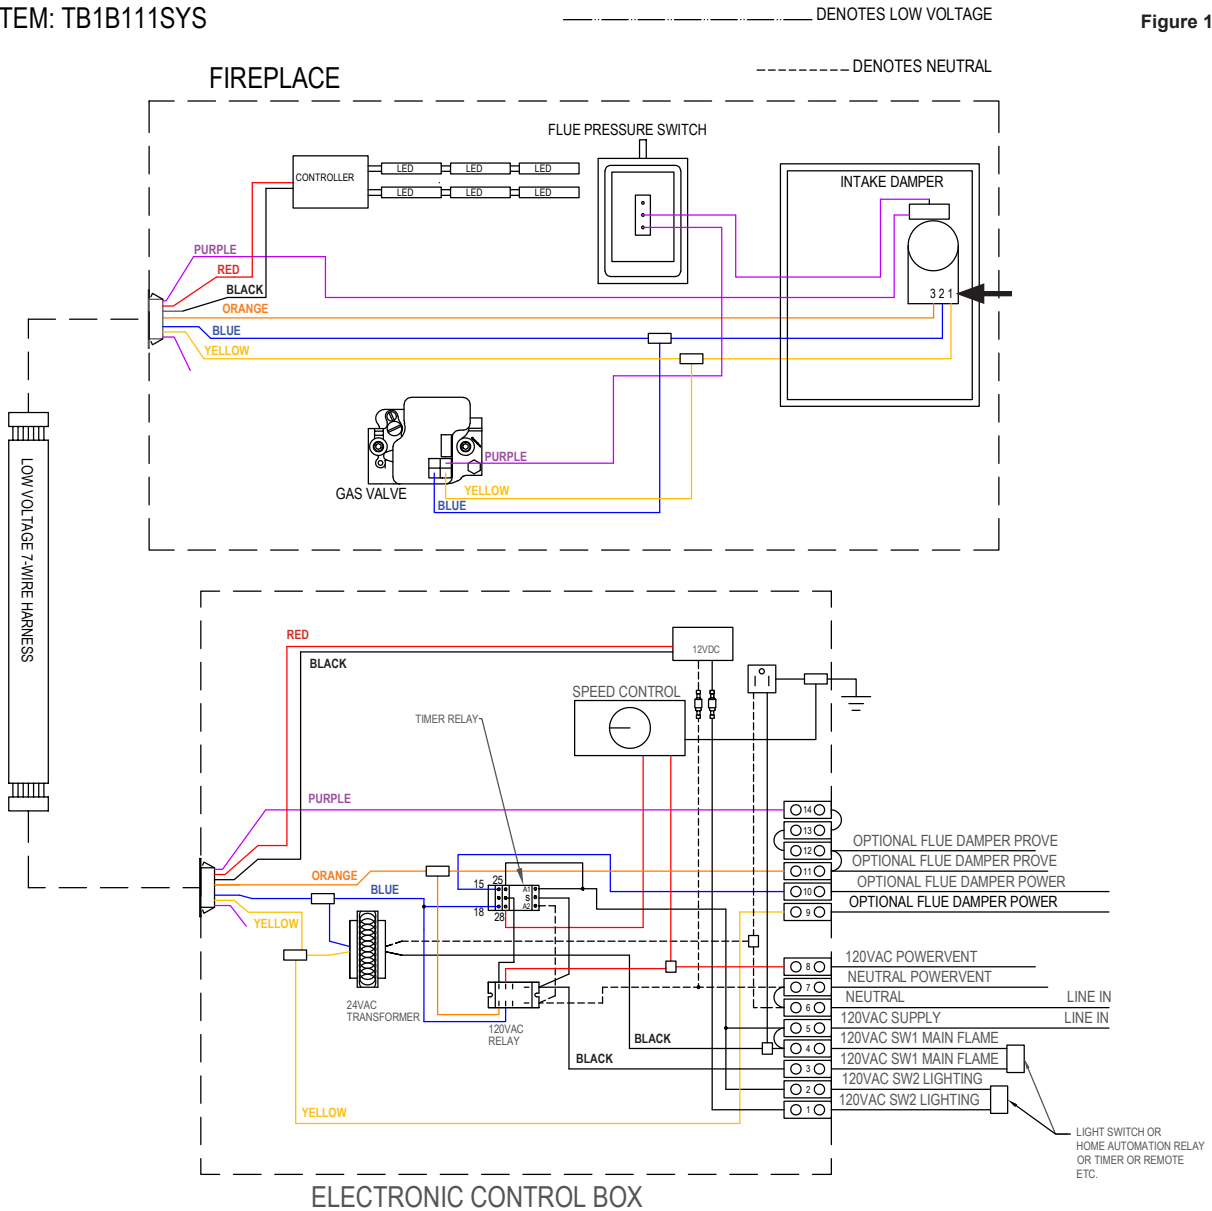

| #  | FUNCTION                                       | NOTES                              |
|----|------------------------------------------------|------------------------------------|
| 1  | SW2 LIGHTS (IF EQUIPPED) 120VAC LOOP           | 120 VOLT LOOP                      |
| 2  | SW2 LIGHTS (IF EQUIPPED) 120VAC LOOP           | 120 VOLT LOOP                      |
| 3  | SW1 MAIN FLAME- 120VAC LOOP                    | 120 VOLT LOOP                      |
| 4  | SW1 MAIN FLAME- 120VAC LOOP                    | 120 VOLT LOOP                      |
| 5  | 120VAC SUPPLY                                  | 120vac 15amp MIN DEDICATED CIRCUIT |
| 6  | NEUTRAL                                        | 120vac 15amp MIN DEDICATED CIRCUIT |
| 7  | NEUTRAL TO POWERVENT                           |                                    |
| 8  | 120VAC TO POWERVENT                            |                                    |
| 9  | 24VAC FLUE DAMPER NEUTRAL (IF EQUIPPED)        | BLACK WIRE IN PAIR                 |
| 10 | 24VAC FLUE DAMPER POWER ( IF EQUIPPED)         | RED WIRE IN PAIR                   |
| 11 | SW3 FLUE DAMPER PROVE (ONLY IF DAMPER IS USED) | USE PURPLE AND WHITE, NOT RED      |
| 12 | SW3 FLUE DAMPER PROVE (ONLY IF DAMPER IS USED) | USE PURPLE AND WHITE, NOT RED      |
| 13 | FLUE PRESSURE SWITCH                           | FACTORY                            |
| 14 | FLUE PRESSURE SWITCH                           | FACTORY                            |

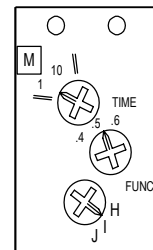

LED STATUS: GREEN =POWER APPLIED, POWERVENT OFF  
RED FLASHING= TIMING PERIOD, PRE OR POST PURGE  
RED SOLID= CLOSED STATE, POWERVENT ON

REFER BACK TO STANDARD ELECTRIC TERMINAL SCHEMATICS IN SECTION 10 (C.1-C.6).

## 11 - FINISHING

### A.1 FINISHING THE WALL - USING THE PROVIDED 1/2" STANDOFFS



**NOTE: REFER TO DIMENSIONS SECTION FOR ALLOWABLE FINISHING DIMENSIONS REQUIRED TO FIT THE GLASS PANELS INTO THE FIREPLACE. FINISHING MATERIALS MUST NOT OVERLAP THE DIMENSIONS HIGHLIGHTED IN GREEN ON PAGE 5. NEVER COVER THE GLASS WITH FINISHING MATERIALS.**




**NOTE: DO NOT PIERCE ANY OF THE BLACK PAINTED SURFACES WITH SCREWS, RIVETS, ETC. THIS INCLUDES THE 3" [76mm] BLACK TOP AND BOTTOM GLASS TRIM AND ANY PAINTED SIDES ADJACENT TO THE GLASS.**



**NOTE: REFER TO MANTEL REQUIREMENTS: NON-COMBUSTIBLE ZONE USING PROVIDED 1/2" [13mm] STANDOFFS FOR MORE INFORMATION.**

Figure 11A.1

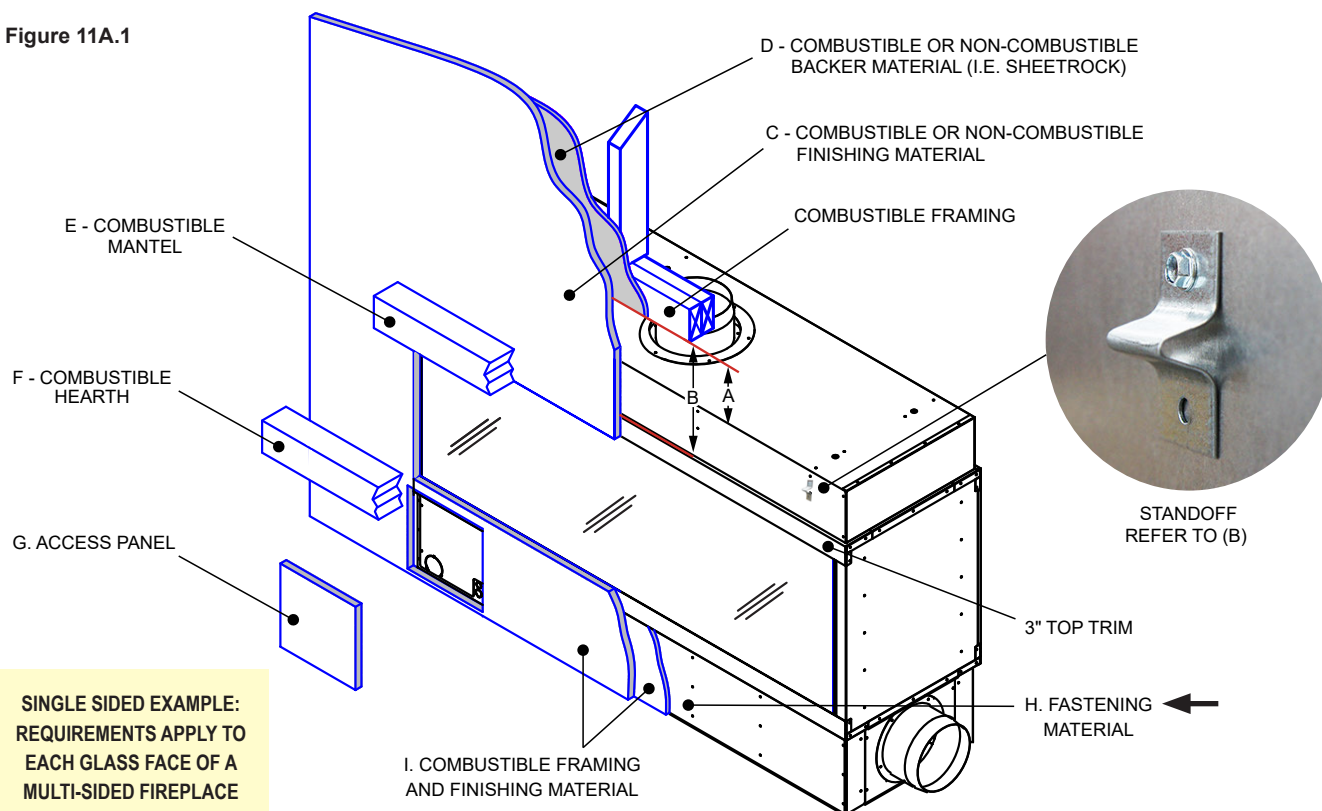

A. No combustible materials may be within 6 [152] of the top of the fireplace.

B. 1/2 [13] CLEARANCE TO COMBUSTIBLES ON SURFACE.

The fireplace ships with hood standoffs in place to ensure a 1/2 [13] clearance to combustibles is maintained on the surface. See Figure 10A.1. If the standoffs are removed, only non-combustible material can be installed against the surface of the fireplace such as a non-combustible backer cement board. 1/2 [13] minimum thickness must be used in the space\* between the top of the 3 [76] trim to the combustible framing the full width of the fireplace. The space\* includes a 7 [178] minimum above the top of the fireplace that is recommended for ease of attachment. \*= 15 [381] for 3'-7' units and 19 [483] for 8' units. See Figure 10A.2

C. Combustible material may cover the non-combustible area mentioned in B.

D. Combustible finishing materials allowed.

E. Combustible mantel may be placed above the top of the glass viewing area. There are no restrictions on mantel depth.

F. Combustible hearth may be placed below the bottom of the glass viewing area.

G. Flat covers will cover the components access. Gas and electric inlets are located behind this panel. There are four access panel options all located on the pilot side of the fireplace; front (shown above), side, back and inside behind the glass.

Please take consideration of which option will be used to access the components for service later during planning.

H. When fastening material, use screws no more than 1/2 [13] longer than the thickness of the material.

For example, use 1 [25] length screws to fasten 1/2 [13] thick material.

I. Combustible framing and finishing materials allowed.

inches [mm]

## 11 - FINISHING

### A.2 FINISHING THE WALL - **NOT** USING THE PROVIDED 1/2" STANDOFFS



NOTE: REFER TO DIMENSIONS SECTION FOR ALLOWABLE FINISHING DIMENSIONS REQUIRED TO FIT THE GLASS PANELS INTO THE FIREPLACE. FINISHING MATERIALS MUST NOT OVERLAP THE DIMENSIONS HIGHLIGHTED IN GREEN ON PAGE 5. NEVER COVER THE GLASS WITH FINISHING MATERIALS.




NOTE: **DO NOT** PIERCE ANY OF THE BLACK PAINTED SURFACES WITH SCREWS, RIVETS, ETC. THIS INCLUDES THE 3" [76mm] BLACK TOP AND BOTTOM GLASS TRIM AND ANY PAINTED SIDES ADJACENT TO THE GLASS.



NOTE: REFER TO MANTEL REQUIREMENTS: NON-COMBUSTIBLE ZONE USING PROVIDED 1/2" [13mm] STANDOFFS FOR MORE INFORMATION.

Figure 11A.2

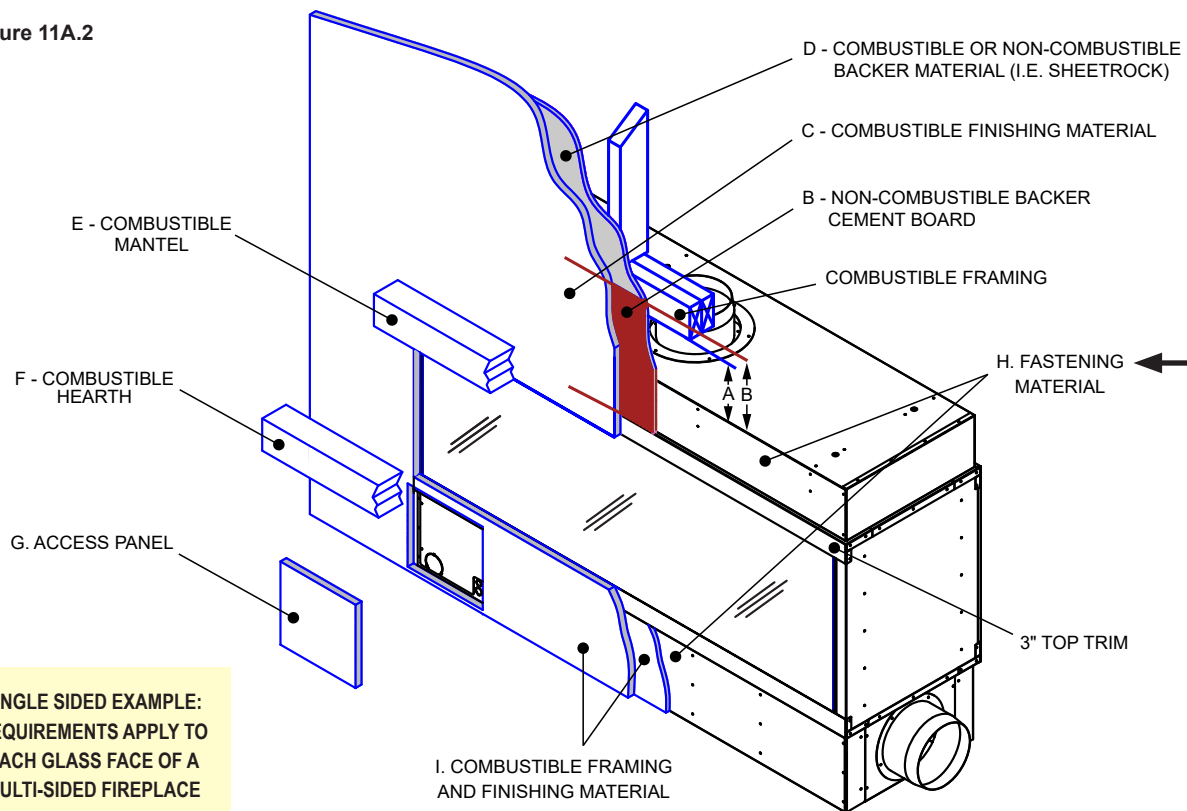

**SINGLE SIDED EXAMPLE:  
REQUIREMENTS APPLY TO  
EACH GLASS FACE OF A  
MULTI-SIDED FIREPLACE**

A. No combustible materials may be within 6 [152] of the top of the fireplace.

B. 1/2 [13] CLEARANCE TO COMBUSTIBLES ON SURFACE.

The fireplace ships with hood standoffs in place to ensure a 1/2 [13] clearance to combustibles is maintained on the surface. See Figure 10A.1. If the standoffs are removed, only non-combustible material can be installed against the surface of the fireplace such as a non-combustible backer cement board. 1/2 [13] minimum thickness must be used in the space\* between the top of the 3 [76] trim to the combustible framing the full width of the fireplace. The space\* includes a 7 [178] minimum above the top of the fireplace that is recommended for ease of attachment. \*= 15 [381] for 3'-7' units and 19 [483] for 8' units. See Figure 10A.2

C. Combustible material may cover the non-combustible area mentioned in B.

D. Combustible finishing materials allowed.

E. Combustible mantel may be placed above the top of the glass viewing area. There are no restrictions on mantel depth.

F. Combustible hearth may be placed below the bottom of the glass viewing area.

G. Flat covers will cover the components access. Gas and electric inlets are located behind this panel. There are four access panel options all located on the pilot side of the fireplace; front (shown above), side, back and inside behind the glass.

Please take consideration of which option will be used to access the components for service later during planning.

H. When fastening material, use screws no more than 1/2 [13] longer than the thickness of the material.

For example, use 1 [25] length screws to fasten 1/2 [13] thick material.

I. Combustible framing and finishing materials allowed.

inches [mm]

## 12 - LIGHTING & SHUTDOWN

### FOR YOUR SAFETY - READ BEFORE LIGHTING



**STOP: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT, CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.**

**DUE TO HIGH SURFACE TEMPERATURES, KEEP CHILDREN, CLOTHING AND FURNITURE AWAY.**

This appliance needs fresh air for safe operation and must be installed so there are provisions for adequate combustion and ventilation air. It is important to make sure the termination cap remains unobstructed at all times from snow, ice, leaves or other debris.

- This fireplace is equipped with an ignition device which automatically lights the pilot and main burner. The pilot and burner light automatically with the wall switch. **DO NOT** try to light the pilot by hand. Before lighting this fireplace, follow these instructions exactly.
- **BEFORE LIGHTING**, smell all around the appliance for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system which has been under water.

#### **WHAT TO DO IF YOU SMELL GAS:**

- Do not touch any electrical switches
- Do not try to light any appliance
- Do not use the phone in your building
- Immediately call your gas supplier from a neighbor's phone
- Follow the gas supplier's instructions
- If you cannot reach your gas supplier, call the fire department

**DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE**



**NOTE: A PAINT SMELL WILL OCCUR DURING THE FIRST FEW HOURS OF BURNING.**



**NOTE: THIS FIREPLACE MAY PRODUCE NOISES OF VARYING DEGREE AS IT HEATS AND COOLS DUE TO METAL EXPANSION AND CONTRACTION. THIS IS NORMAL AND DOES NOT AFFECT THE PERFORMANCE OR LONGEVITY OF THE FIREPLACE.**

### A. LIGHTING THE FIREPLACE

To light the fireplace:

Activate the switch.

The fireplace has a pre and post timer, set at the factory for 30 seconds.

The powervent will start after the switch is activated.

The flame will not turn on for 30-60 seconds after switch is activated.

The powervent will run for 30 seconds after the fireplace has been shut off.

## 12 - LIGHTING & SHUTDOWN




**STOP!** Read safety information on previous page and front cover of this manual before continuing.



**NOTE:** This fireplace is equipped with an ignition device which automatically lights the pilot. **DO NOT** try to light the pilot by hand.

### B. IF THE FIREPLACE DOES NOT LIGHT

1. Turn off the fireplace at switch.
2. Turn off all electrical power to fireplace.
3. Wait five (5) minutes to allow any gas that may have accumulated inside firebox to escape. If you then smell gas, STOP! Follow safety information on front cover and on previous page of the installation manual. If you don't smell gas, go to next step.
4. Turn ON all electrical power to fireplace.
5. Turn fireplace on at switch.

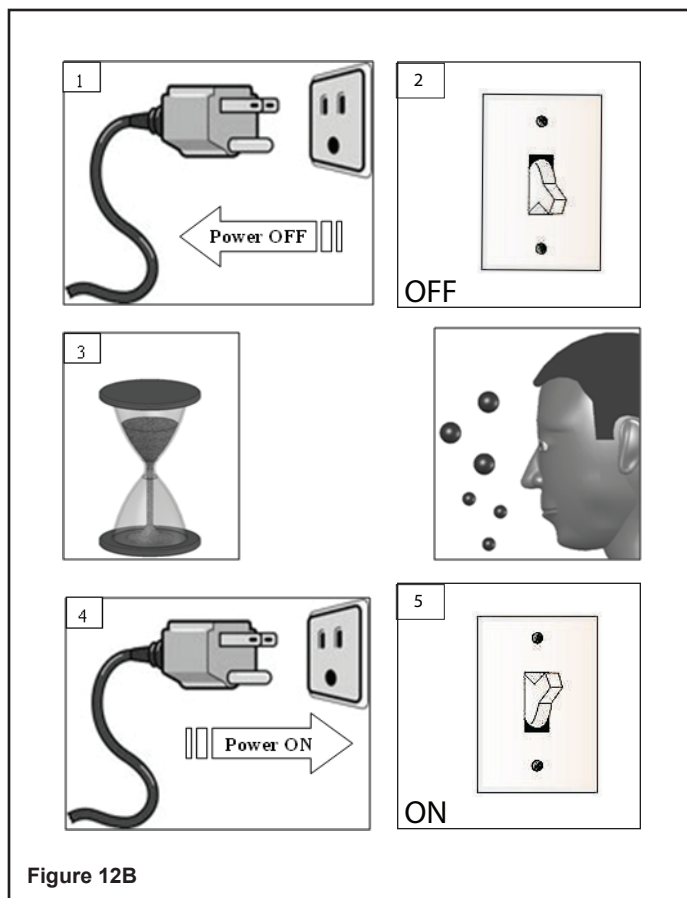

**CAUTION:** If fireplace will not operate, follow instructions **TURNING OFF GAS TO FIREPLACE** and call your service technician or the gas supplier.



**NOTE:** When fireplace is initially lit, condensation may appear on the glass; this is normal in all gas fireplaces and will disappear after several minutes.

## 13 - PRESSURE TESTING



**WARNING: Risk of Fire! Risk of Explosion!**

Pressure exceeding 1/2 PSIG (14 in. w.c. / 3.5 kPa) will damage gas valve control.

- Disconnect appliance and its manual shutoff valve **BEFORE** line pressure testing.
- Cap outlet on piping system at appliance connection **BEFORE** line pressure testing.
- Connect appliance **AFTER** confirming piping system pressure is equal or less than 1/2 PSIG (14 in. w.c./ 3.5 kPa).



**NOTE:** The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at pressures in excess of 1/2 PSIG (14 in. w.c. / 3.5 kPa).



**NOTE:** The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas line at test pressures equal to or less than 1/2 PSIG (14 in. w.c. / 3.5 kPa).

### INLET PRESSURE TEST

1. The valve has an Allen-plug on the inlet and outlet.
2. Install a barb fitting on the tap you want to measure.
3. Light the fireplace, check the pressure.
4. Turn off fireplace; reinstall plug.
5. Check for leaks.



**CAUTION: A LOW PRESSURE READING CAN CAUSE DELAYED IGNITION**



**NOTE:** If inlet pressure reading is too high or too low, contact the gas company. Only a qualified gas service technician should adjust incoming gas pressure.

## 14 - FINALIZING THE INSTALLATION

### A. INSTALLING THE MEDIA

Place the supplied glass media into the base tray.  
Cover the base evenly. Do not use more than the supplied amount.

Do not get any glass media into the pilot area; a hazardous condition could result!

You should be able to see the top line of the burner through the media.

**DO NOT COVER THE BURNERS;  
POOR FLAME APPEARANCE WILL RESULT.**



**Figure 14**

**NOTE: DO NOT SUBSTITUTE THE SUPPLIED MEDIA WITH ANY OTHER KIND OF MEDIA WITHOUT WRITTEN APPROVAL OF Stellar by Heat&Glo.**

### B. FLAME APPEARANCE

Flame appearance is affected by several factors including altitude, venting configuration and fuel quality. Although the venturi setting has been factory set, adjustments may be necessary for optimal performance and visual aesthetics.

When fireplace is first lit, the flames will be blue. Flames will gradually turn yellowish-orange during first 15 minutes of operation. If flames remain blue, or become dark orange with evidence of sooting (black tips), the burner tube venturi may need adjustment. Contact Stellar Hearth.

## 15 - MAINTENANCE

The appliance is required to be inspected at least once a year by a professional service person. The compartment below firebox (behind lower access panel) must be cleaned at least once a year, more frequent cleaning may be required due to excessive lint from carpeting, bedding materials, or other fibrous materials. It is imperative that the burner be cleaned once a year.

### VALVE AND ELECTRICAL ACCESS

There is an access panel under the floor of the firebox should more extensive service be needed. Remove the inner and outer glass panels. Remove the glass media on the end with the pilot. The end floor lifts out; remove the screws and lift it out. If the LED's are mounted on a "U" shaped steel bracket, loosen the bracket and flip the LED's over the burner. There is a panel covering the valve area. Remove the screws and lift the panel up and out to expose the valve area.



**NOTE:** INSTALLATION AND REPAIR SHOULD BE DONE ONLY BY QUALIFIED SERVICE PERSON. THE APPLIANCE SHOULD BE INSPECTED BEFORE USE AND ANNUALLY BY A QUALIFIED SERVICE PERSON. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESSIVE LINT FROM CARPETING, BEDDING MATERIALS, ETC. IT IS IMPERATIVE THAT CONTROL COMPARTMENTS, BURNERS AND CIRCULATION AIR PASSAGEWAYS OF THE APPLIANCE BE KEPT CLEAN.

### A. VENT SYSTEM

- Annual examination of venting system by a qualified agency is required.
- IF VENT-AIR INTAKE SYSTEM IS DISASSEMBLED FOR ANY REASON, RE-INSTALL PER INSTRUCTIONS PROVIDED WITH INITIAL INSTALLATION.
- The flow of combustion air must not be obstructed.

### B. GLASS CLEANING & REPLACEMENT



**WARNING! RISK OF INJURY!** DO NOT remove glass until it is cooled to room temperature. Glass breakage could occur. See Section 6 for glass installation and removal instructions.

- Clean glass only when cool and only with non-abrasive cleansers.
- Do not operate this fireplace with glass/frame assembly removed, cracked or broken.
- The glass assembly shall only be replaced as a complete unit.
- Replacement of glass & frame assembly, must only be performed by a licensed or qualified service person.
- DO NOT SUBSTITUTE MATERIALS.
- Do not strike or slam glass door assembly.



**NOTE: IN CASE OF CHIPPED OR BROKEN GLASS**

Due to the size and sensitivity of shipping the glass separately, it is best to have the replacement glass cut locally if needed. Refer to Section 16- Replacement Parts for more information.



**CAUTION:** LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING. KEEP APPLIANCE AREA CLEAR OF COMBUSTIBLE MATERIALS, SUCH AS GASOLINE AND OTHER FLAMMABLE VAPORS AND LIQUIDS.

## 16 - REPLACEMENT PARTS

### A. REPLACEMENT PARTS LIST

#### IMPORTANT: REPLACEMENT PARTS

Parts must be ordered from a dealer or distributor.

Hearth & Home Technologies does not sell directly to consumers.

Provide model number and serial number when requesting service parts from your dealer or distributor.

| PART                      | PART NUMBER |
|---------------------------|-------------|
| Gas Valve - 3' - 7' Units | SV9501      |
| Gas Valve - 8' Units      | SV9601      |
| Pilot Assembly            | 112-5000    |
| Pilot Tube                | 16400-2851  |
| Replacement Ignitor       | B13M-1D643C |
| Orifice, NG #43           | 16400-2043  |
| Orifice, Propane #55      | 16400-2055  |
| Vacuum Switch             | 112-5003    |
| Transformer, 24 VAC       | 112-5002    |
| Timer Relay               | 112-5014    |
| Solid State Relay         | 112-5009    |
| Speed Control, 10 AMP     | 16400-4000  |

| PART                   | PART NUMBER | QUANTITY                    |
|------------------------|-------------|-----------------------------|
| Crystal Rock, 5 lb bag | 2188-851    | <u>Varies by model size</u> |
|                        |             | 3' = 6 bags                 |
|                        |             | 4' = 8 bags                 |
|                        |             | 5' = 9 bags                 |
|                        |             | 6' = 11 bags                |
|                        |             | 7' = 13 bags                |
|                        |             | 8' = 15 bags                |

| PART                                                  | PART NUMBER |
|-------------------------------------------------------|-------------|
| Natural Gas to Propane Gas Conversion Kit - All Sizes | NG2LP       |
| Propane Gas to Natural Gas Conversion Kit - All Sizes | LP2NG       |

| PART                                               | PART NUMBER |
|----------------------------------------------------|-------------|
| Enervex Chimney Fan used for 3' - 5' units         | RS012       |
| Enervex Chimney Fan used for 6' - 8' units         | RS014       |
| Enervex In-line Chimney Fan used for 3' - 5' units | RSIF160     |
| Enervex In-line Chimney Fan used for 6' - 8' units | RSIF180     |

| PART                                        | PART NUMBER |
|---------------------------------------------|-------------|
| 8 Inch Exhaust Collar - 3'-5' Units         | 16400-1450  |
| 10 Inch Intake/Exhaust Collar - 6'-7' Units | 16400-1550  |
| 12 Inch Intake Collar - 8' Units            | 16800-1550  |
| LED Controller                              | 16400-1901  |
| LED Remote Control                          | 16400-1901R |
| LED Transformer, 12VDC                      | 16400-1900  |
| Switch, 15 Amp Toggle                       | 16400-3013  |
| 2-Gang Electrical Box                       | 16400-3014  |
| White Nylon 2-Gang Plate                    | 16400-3015  |
| Suction Cup                                 | 675-9605    |
| 8 Inch Powervent Chimney Collar             | 117-001     |
| 10 Inch Powervent Chimney Collar            | 117-002     |

| PART                            | PART NUMBER   |
|---------------------------------|---------------|
| Replacement Capacitor - RS012   | 601.0400.0064 |
| Replacement Capacitor - RS014   | 604.0400.0064 |
| Replacement Capacitor - RSIF160 | 604.0600.0064 |
| Replacement Capacitor - RSIF180 | 604.0800.0064 |

## 16 - REPLACEMENT PARTS

### B. GLASS SIZE AND SPECIFICATIONS

**NOTE: IN CASE OF CHIPPED OR BROKEN GLASS**

Due to the size and sensitivity of shipping the glass separately, it is best to have the replacement glass cut locally if needed using the specifications listed here or have your local dealer assist you with contacting Stellar by Heat&Glo directly for more information.

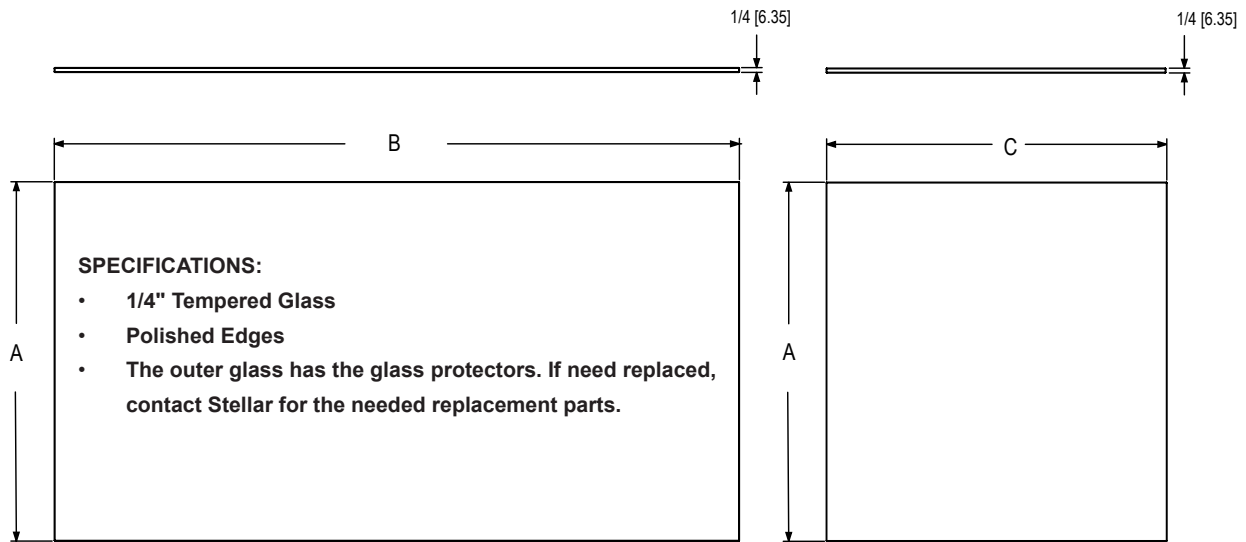


Figure 16B

| LONG - FRONT PANELS |                |     |                 |     | SHORT - RIGHT END PANELS |     |              |     |
|---------------------|----------------|-----|-----------------|-----|--------------------------|-----|--------------|-----|
| MODEL               | B.             | QTY | B.              | QTY | C.                       | QTY | C.           | QTY |
|                     | OUTER WIDTH    |     | INNER WIDTH     |     | OUTER WIDTH              |     | INNER WIDTH  |     |
| 3'                  | 39-1/4 [997]   | 1   | 37-1/16 [941]   | 1   | 21-7/16 [545]            | 1   | 19-1/4 [489] | 1   |
| 4'                  | 51-1/4 [1,302] | 1   | 49-1/16 [1,246] | 1   | 21-7/16 [545]            | 1   | 19-1/4 [489] | 1   |
| 5'                  | 63-1/4 [1,607] | 1   | 61-1/16 [1,551] | 1   | 21-7/16 [545]            | 1   | 19-1/4 [489] | 1   |
| 6'                  | 75-1/4 [1,911] | 1   | 73-1/16 [1856]  | 1   | 21-7/16 [545]            | 1   | 19-1/4 [489] | 1   |
| 7'                  | 87-1/4 [2,216] | 1   | 85-1/6 [2,161]  | 1   | 21-7/16 [545]            | 1   | 19-1/4 [489] | 1   |
| 8'                  | 99-1/4 [2,521] | 1   | 97-1/16 [2,465] | 1   | 21-7/16 [545]            | 1   | 19-1/4 [489] | 1   |

| INNER & OUTER GLASS BOTH |                |
|--------------------------|----------------|
| Model Height             | A. HEIGHT      |
| 20"                      | 21-5/8 [549]   |
| 24"                      | 25-5/8 [651]   |
| 30"                      | 31-5/8 [803]   |
| 36"                      | 37-5/8 [956]   |
| 48"                      | 49-5/8 [1,260] |
| 60"                      | 61-5/8 [1,565] |

inches [mm]

## 16 - REPLACEMENT PARTS

### C. GLASS TRIM PIECES IDENTIFICATION


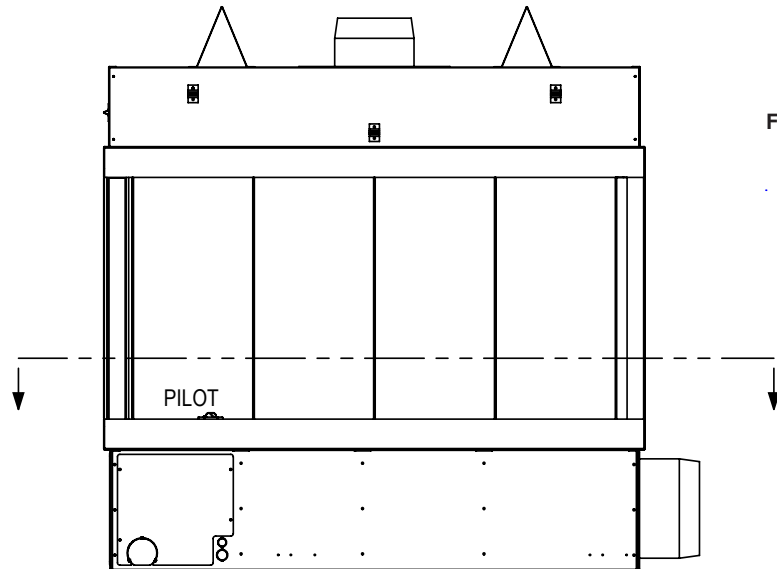


Figure 16C

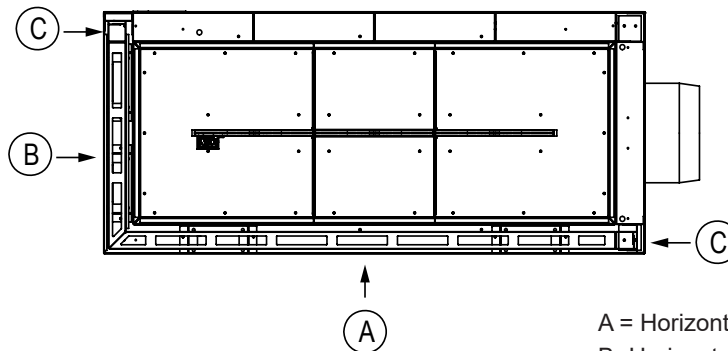

A = Horizontal Trim Pieces - Front  
B = Horizontal Trim Pieces - Left Side  
C = Vertical Trim Pieces

| Model Width | A. Horizontal Trim Pieces Between Glass - Front |     | B. Horizontal Trim Pieces Between Glass - Right Side |     | Model Height | C. Vertical Trim |     |
|-------------|-------------------------------------------------|-----|------------------------------------------------------|-----|--------------|------------------|-----|
|             | Part #                                          | Qty | Part #                                               | Qty |              | SKU              | Qty |
| 3'          | SRV16300-1344                                   | 1   | SRV16400-1145                                        | 1   | 20"          | SRV16400-1433    | 2   |
| 4'          | SRV16400-1344                                   | 1   | SRV16400-1145                                        | 1   | 24"          | SRV16400-1033    | 2   |
| 5'          | SRV16500-1344                                   | 1   | SRV16400-1145                                        | 1   | 30"          | SRV16400-1633    | 2   |
| 6'          | SRV16600-1344                                   | 1   | SRV16400-1145                                        | 1   | 36"          | SRV16400-1833    | 2   |
| 7'          | SRV16700-1344                                   | 1   | SRV16400-1145                                        | 1   | 48"          | SRV16400-1533    | 2   |
| 8'          | SRV16800-1344                                   | 1   | SRV16400-1245                                        | 1   | 60"          | SRV16400-1933    | 2   |

17 - SERVICE & MAINTENANCE HISTORY

| Service & Maintenance History |                        | Provided By |
|-------------------------------|------------------------|-------------|
| Date:                         | Description of Service | Name        |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |
|                               |                        |             |

# TROUBLE SHOOTING


## Turn on Stellar fireplace


For new installations, double and triple check that the wiring is correct. Fireplace must be wired exactly as noted in the manual.

Fireplace will attempt to light two times. Then it will lock out for 5 minutes. Power must be cycled to release from lock mode before 5 minutes

When power is applied to the fireplace, the green light on the timer relay will be lit. It does not matter if the switch is 'ON' or 'OFF'. When main flame switch is flipped 'ON', red light on timer will blink for 30 seconds, then go solid red.

Do not wire a switch into the main power supply (5&6) for turning the flames on and off. Switch must be looped between 3 & 4.

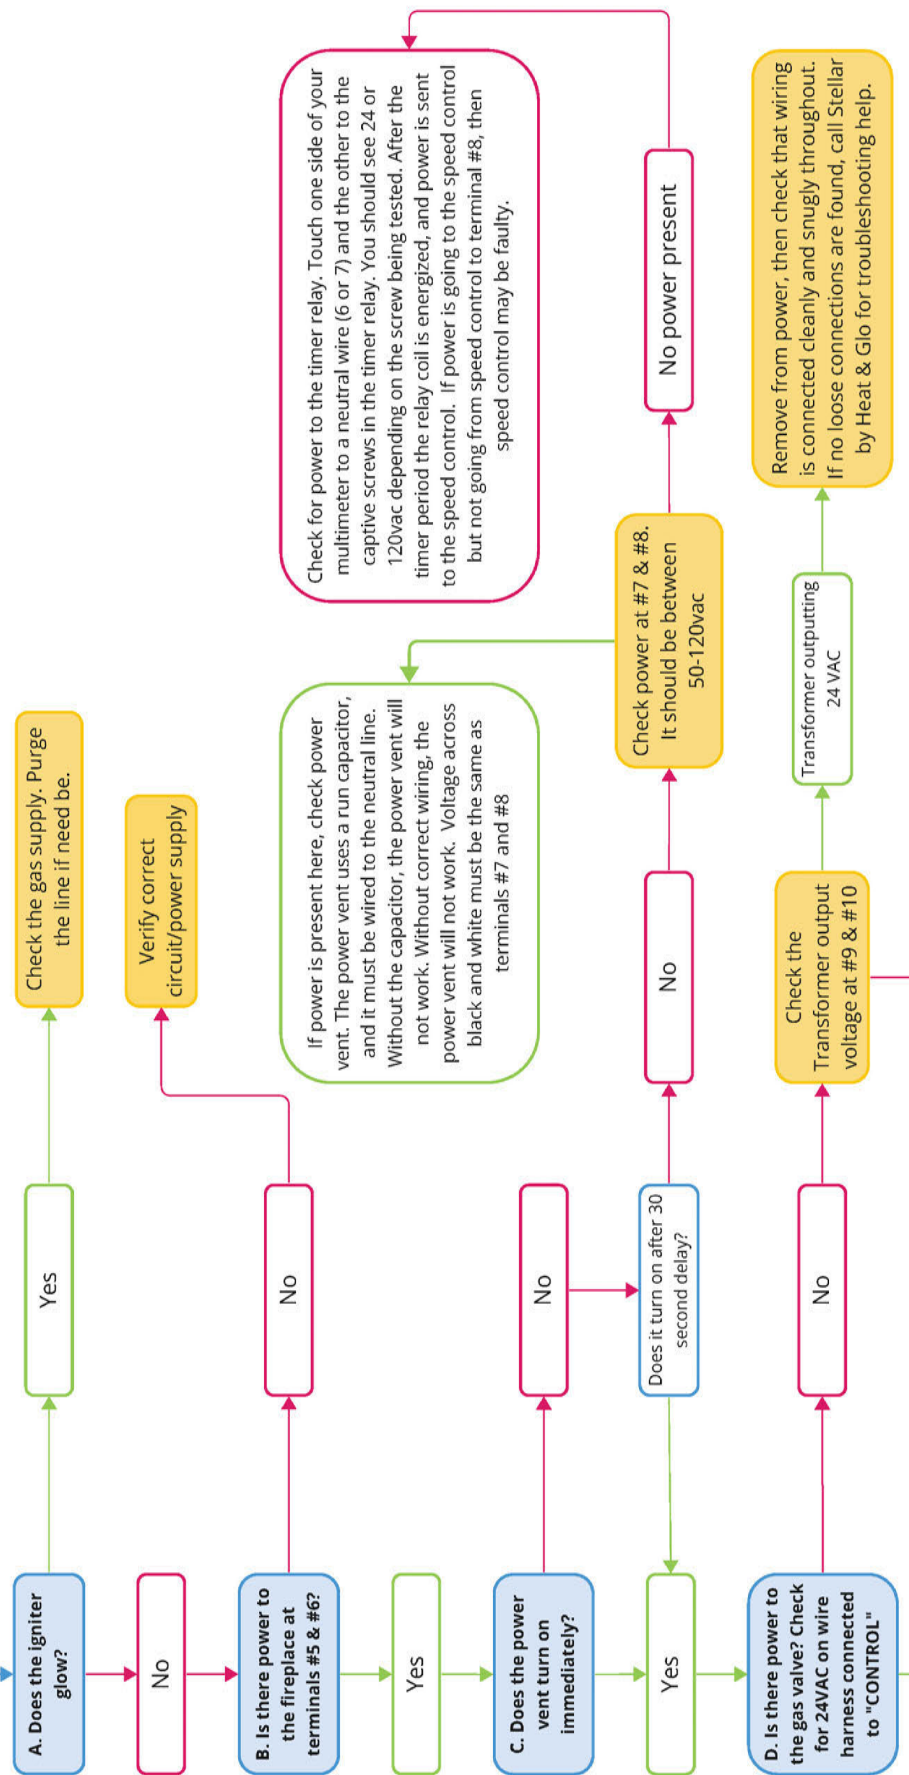

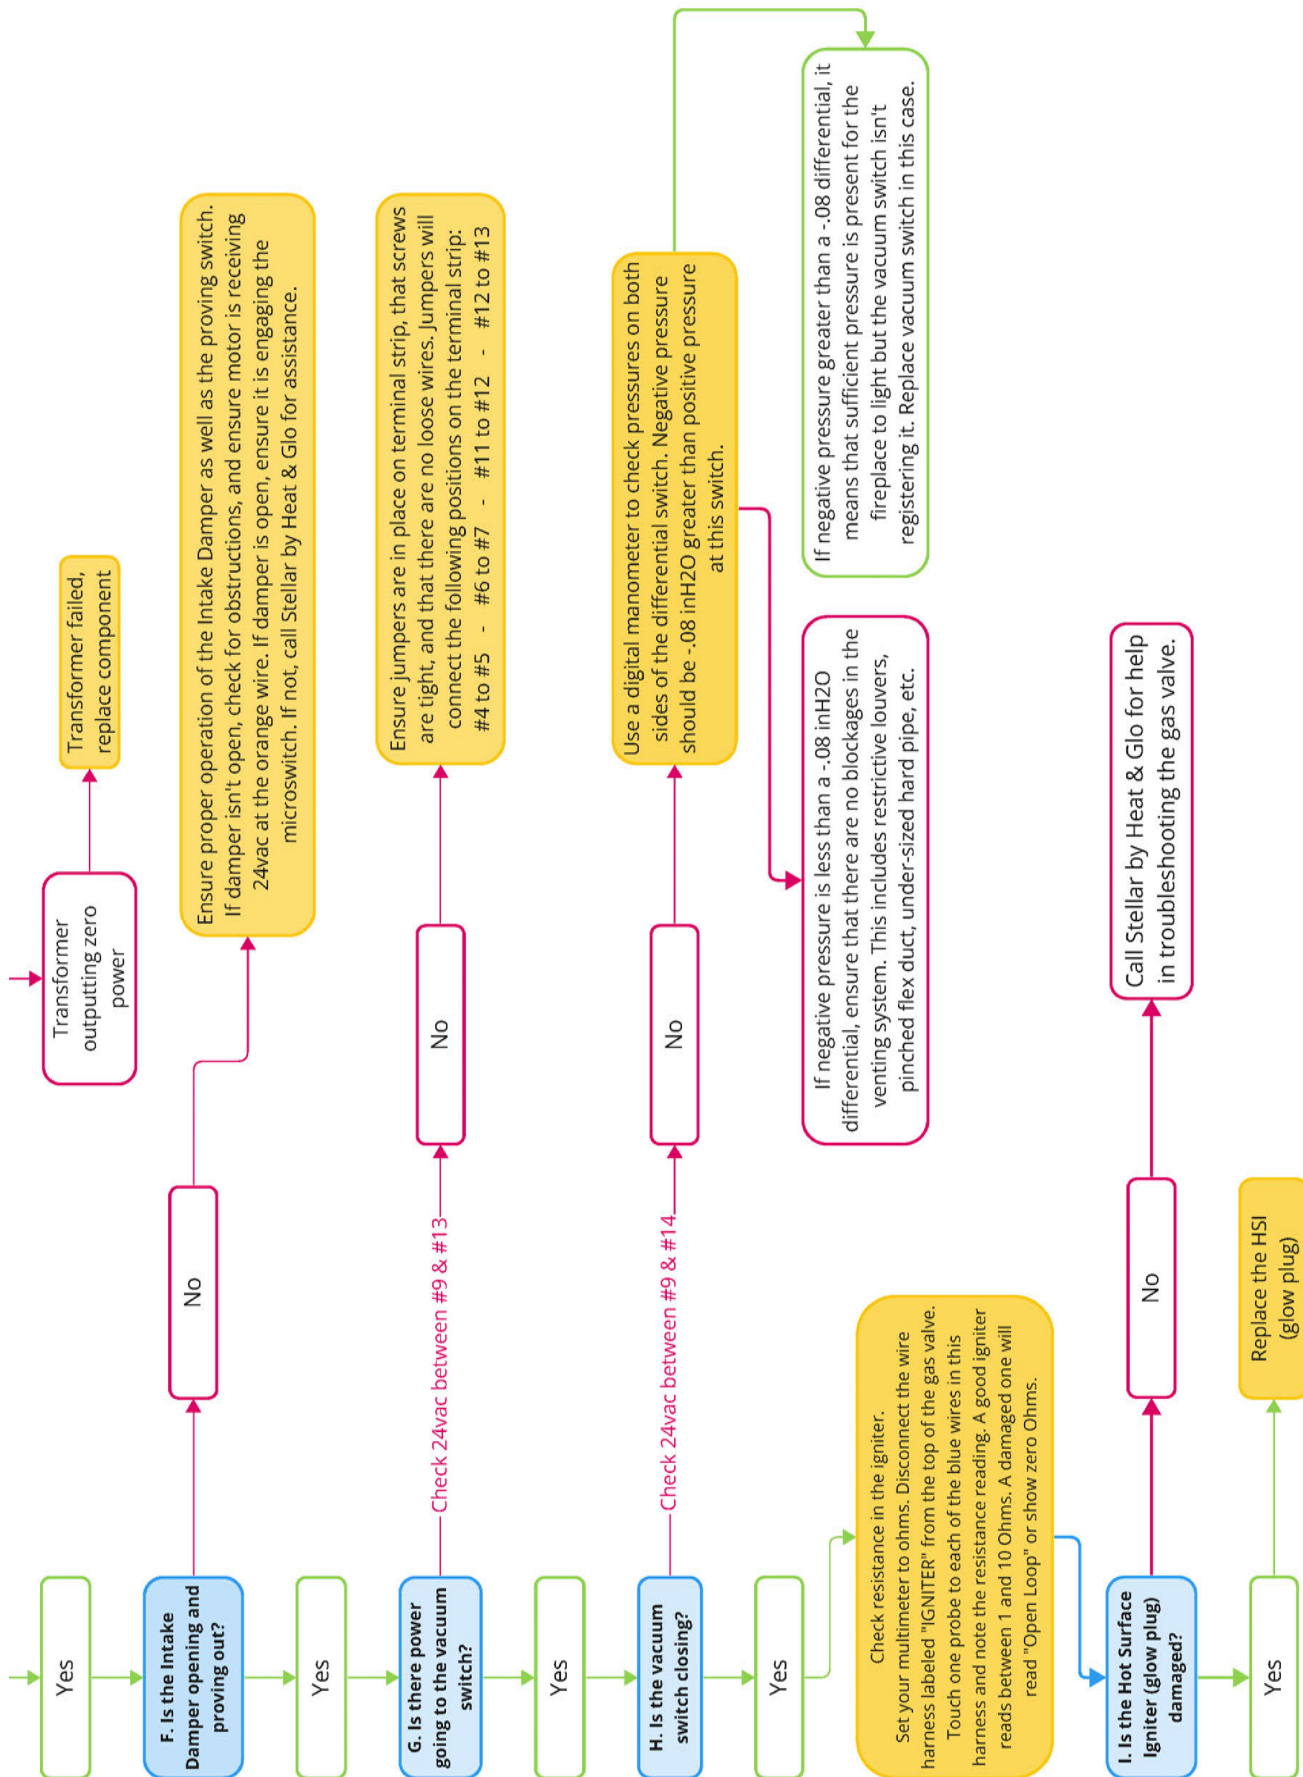

## Hearth & Home Technologies LLC

### LIMITED WARRANTY

Hearth & Home Technologies LLC ("HHT") extends the following warranty for HHT gas, wood, pellet and electric hearth appliances (each a "Product" and collectively, the "Product(s)") and certain component parts set forth in the table below ("Component Part(s)") that are purchased from a HHT authorized dealer or distributor.

#### **WARRANTY COVERAGE:**

HHT warrants that the Products and their Component Parts will be free from defects in materials and workmanship for the applicable period of Warranty coverage set forth in the table below ("Warranty Period"). If a Product or Component Parts are found to be defective in materials or workmanship during the applicable Warranty Period, HHT will, at our discretion, repair the applicable Component Part(s), replace the applicable Component Part(s), or refund the purchase price of the applicable Product(s). The maximum amount recoverable under this Warranty is limited to the purchase price of the Product. This Warranty is transferable from the original purchaser to subsequent owners, but the Warranty Period will not be extended in duration or expanded in coverage for any such transfer. This Warranty is subject to conditions, exclusions, and limitations as described below.

#### **WARRANTY PERIOD:**

Warranty coverage begins at the date of installation. In the case of new home constructions, Warranty coverage begins six months after invoice of the final sale of the Product(s) by an independent, authorized HHT dealer or distributor. However, the Warranty coverage shall commence no later than 24 months following the date of Product shipment from HHT, regardless of the installation or purchase date.

| Warranty Period                                          |         | HHT Manufactured Appliances and Venting |        |      |          |                                                                                                                                                                                                                                 |
|----------------------------------------------------------|---------|-----------------------------------------|--------|------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Component Parts                                          | Labor   | Gas                                     | Pellet | Wood | Electric | Component Parts Covered by this Warranty                                                                                                                                                                                        |
| 1 Year                                                   |         | X                                       | X      | X    |          | All parts including handles, external enameled components and other material except as covered by Warranty Conditions, Warranty Exclusions, and Warranty Limitations listed                                                     |
| 2 Years                                                  |         |                                         |        |      | X        | All parts except as covered by Warranty Conditions, Warranty Exclusions, and Warranty Limitations listed                                                                                                                        |
|                                                          |         |                                         | X      | X    |          | Glass, Electrical components limited to heating element/igniters, Top feed auger assembly, Blowers, Junction Box, Remotes/Wall switches, linear actuator, power cord, vacuum switch, snap disc, wire harnesses and thermocouple |
|                                                          |         | X                                       |        |      |          | Electrical components limited to modules, remotes/wall switches, valves, pilots, blowers, junction boxes, wire harnesses, transformers and lights (excluding light bulbs)                                                       |
|                                                          |         | X                                       |        | X    |          | Cement Refractory Panels, Glass Liner Panels                                                                                                                                                                                    |
| 3 years                                                  |         |                                         | X      |      |          | Firepots, burnpots, Harman mechanical feeders                                                                                                                                                                                   |
| 5 years                                                  |         | X                                       |        | X    |          | Catalysts, Vented and Vent Free burners and logs                                                                                                                                                                                |
| 10 years                                                 | 1 year  | X                                       |        |      |          | Burners, logs and metal/fiber refractory components of HHT manufactured fireplaces or stoves, venting due to poor workmanship                                                                                                   |
| 10 years                                                 | 3 years |                                         | X      | X    |          | Castings, Medallions & Baffles, FlexBurn® System (engine, inner cover, access cover and fireback), Firebox and heat exchanger, HHT Chimney & Terminations, Manifolds                                                            |
| 20 years                                                 | 3 years | X                                       |        |      |          | Firebox and heat exchanger                                                                                                                                                                                                      |
| All purchased replacement parts and optional accessories |         |                                         |        |      |          |                                                                                                                                                                                                                                 |
| 1 Year                                                   | None    | X                                       | X      | X    | X        | All purchased replacement parts and optional accessories                                                                                                                                                                        |

4021-645N 12/23

### **WARRANTY CONDITIONS:**

- Because HHT cannot control the quality of any Products sold by unauthorized sellers, this Warranty only covers Products that are purchased through an HHT authorized dealer or distributor unless otherwise prohibited by law; a list of HHT authorized dealers is available on the HHT branded websites.
- This Warranty is only valid while the applicable Product remains at the site of original installation.
- This Warranty is only valid in the country in which the HHT authorized dealer or distributor that sold the applicable Product is authorized to sell applicable Product.
- Contact your installing distributor or dealer for Warranty service. If the installing dealer or distributor is unable to provide necessary parts, contact the nearest HHT authorized dealer or supplier. Additional service fees may apply if you are seeking Warranty service from a dealer other than the dealer from whom you originally purchased the applicable Product.
- No HHT consumer should bear cost of warranty service or costs incurred while servicing warranty claims (i.e., travel, gas, or mileage) when the service is performed within the terms of this Warranty. Check with your dealer or distributor in advance for any costs to you when arranging a warranty call. Travel and shipping charges for parts are not covered by this Warranty.

### **WARRANTY EXCLUSIONS:**

This Warranty does not cover the following:

- Changes in surface finishes as a result of normal use. As a heating appliance, some changes in color of interior and exterior surface finishes may occur. This is not a flaw and is not covered under the Warranty.
- Damage to printed, plated, or enameled surfaces caused by fingerprints, accidents, misuse, scratches, melted items or other external sources and residues left on the plated surfaces from the use of abrasive cleaners or polishes.
- Repair or replacement of parts that are subject to normal wear and tear during the Warranty Period are not covered. These parts include: paint, wood and pellet gaskets, firebricks, wood grates, flame guides, batteries and the discoloration of glass.
- Minor expansion, contraction, or movement of certain parts causing noise. These conditions are normal and complaints related to this noise are not covered by this Warranty.
- Damages resulting from: (1) failure to install, operate, or maintain the applicable Product in accordance with the installation instructions, operating instructions, and listing agent identification label furnished with the applicable Product; (2) failure to install the applicable Product in accordance with local building codes; (3) shipping or improper handling; (4) improper operation, abuse, misuse, continued operation with damaged, corroded or failed components, accident, or improperly/incorrectly performed repairs; (5) environmental conditions, inadequate ventilation, negative pressure, or drafting caused by tightly sealed constructions, insufficient make-up air supply, or handling devices such as exhaust fans or forced air furnaces or other such causes; (6) use of fuels other than those specified in the operation instructions; (7) installation or use of components not supplied with the applicable Product or any other components not expressly authorized and approved by HHT; (8) modification of the appliance not expressly authorized and approved by HHT in writing; and/or (9) interruptions or fluctuations of electrical power supply to the applicable Product.
- Non-HHT venting components, hearth connections or other accessories used in conjunction with the applicable Product.
- Any part of a pre-existing fireplace system in which an insert or a decorative gas applicable Product is installed.
- HHT's obligation under this Warranty does not extend to the Product's capability to heat the desired space. Information is provided to assist the consumer and the dealer in selecting the proper Product for the application. Consideration must be given to the Product location and configuration, environmental conditions, insulation and air tightness of the structure.

### **This warranty is void if:**

- The applicable Product has been over-fired, operated in atmospheres contaminated by chlorine, fluorine, or other damaging chemicals. Over-firing can be identified by, but not limited to, warped plates or tubes, deformation/warping of interior cast iron structure or components, rust colored cast iron, bubbling, cracking and discoloration of steel or enamel finishes.
- The applicable Product is subjected to prolonged periods of dampness or condensation.
- There is any damage to the applicable Product due to water or weather damage which is the result of, but not limited to, improper chimney or venting installation.

### **LIMITATIONS OF REMEDIES AND LIABILITY:**

- **EXCEPT TO THE EXTENT PROVIDED BY LAW, HHT MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY SPECIFIED HEREIN. The owner's exclusive remedy and HHT's sole obligation under this Warranty or in contract, tort or otherwise, shall be limited to, at HHT's sole option, replacement of the Component Part(s), repair of the Component Part(s), or refund of the original purchase price of the applicable Product(s). In no event will HHT be liable for any incidental or consequential damages caused by defects in the applicable Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from State to State. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO DURATION OF THE EXPRESSED WARRANTY SPECIFIED ABOVE FOR THE APPLICABLE PRODUCT. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.**

## **3 in 1 LED Controller ( 2.4G )**

### **Instruction Manual**

## **Contents**

---

|                                                               |     |
|---------------------------------------------------------------|-----|
| <u>Product features</u> .....                                 | 2   |
| <u>Set up output mode</u> .....                               | 3   |
| <u>Compatible with remote</u> .....                           | 3   |
| <u>2.4G RF remote control instruction</u> .....               | 4-7 |
| <u>Link / Unlink Instructions</u> .....                       | 4   |
| <u>Auto transmitting &amp; Synchronization</u> .....          | 5   |
| <u>Dynamic mode table selection</u> .....                     | 5   |
| <u>PWM frequency switching</u> .....                          | 6   |
| <u>“Do Not Disturb” mode is activated and shut down</u> ..... | 7   |
| <u>DMX512 LED transmitter control instruction</u> .....       | 8   |
| <u>Attention</u> .....                                        | 9   |

## Product features

Made by new 2.4GHz wireless transmitting technology with low power consumption, strong ability to build network automatically and anti-interference. with MiBoxer 2.4GHz gateway to get wireless dimming color, remote control, timing control, group control, music rhythm function. Support 2.4G RF remote control.



16 Millions of colors to choose



Color temperature adjustable



Dim brightness / Saturation



2.4G RF wireless transmission technology



Remote control distance 30m



Auto-transmitting & Synchronization



Support Smartphone app control (2.4GHz gateway is needed)



Support third party voice control (2.4GHz gateway is needed)



DMX512 controllable  
(Only for RGB+CCT output mode DMX512 LED transmitter is needed)

## Set up output mode


Set up correct output mode based on the feature of lights

Setting method: Press "SET" button continuously to switch output mode (attention: it will log out without operation within 3 seconds)

Output mode sheet ( confirm output mode based on color of indicator)


| Indicator color | Red Light | Green Light | Blue Light |
|-----------------|-----------|-------------|------------|
| Output          | RGB       | RGBW        | RGB+CCT    |

## Compatible with these 2.4G RF remote controls (Purchased separately)

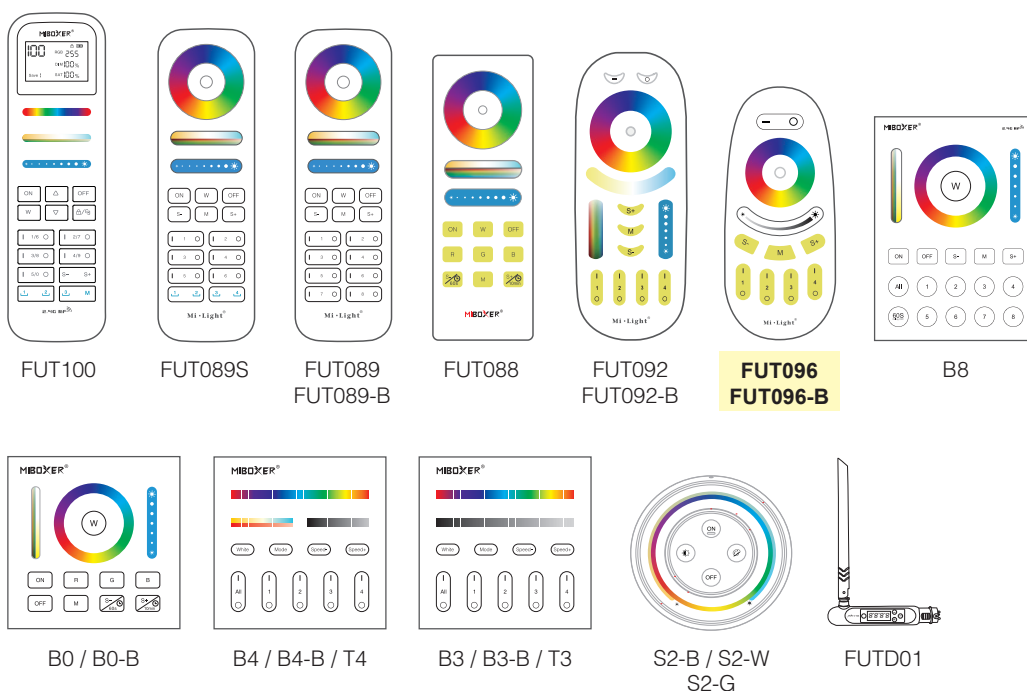

## 2.4G RF Remote control instruction


### 1). Linking Code Instructions

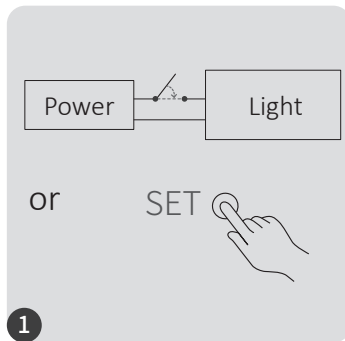

Power off 10 seconds and power on again or short press "SET" one time.



Short press " I " button 3 times within 3 seconds.

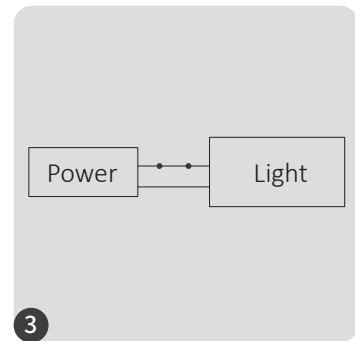


Lights blink 3 times slowly means linking is done successfully.



Linking failed if light is not blinking slowly, Please follow above steps again.  
(Note: Light that have linked can't link again)


### 2). Unlinking Code Instructions

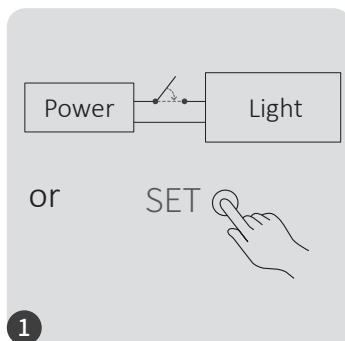

Power off 10 seconds and power on again or short press "SET" one time.



Short press " I " button 5 times within 3 seconds.

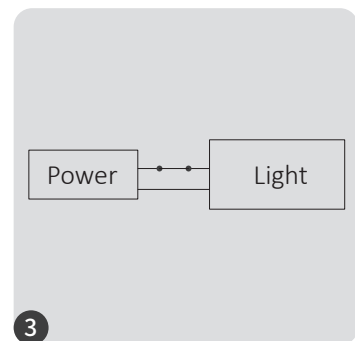

Lights blink 10 times quickly means unlinking is done successfully.



Unlinking failed if light is not blinking quickly, Please follow above steps again.  
(Note: Light haven't linked that don't need to unlink)


### 3). Auto transmitting & Synchronization (only for remote control)

#### Remote signal auto transmitting

One light can transmit the signals from the remote control to another light within 30m, as long as there is a light within 30m, the remote control distance can be limitless.

#### Dynamic modes auto synchronization

Multi lights can synchronize if they are in same dynamic mode and linked with same remote (distance between each light is within 30m)

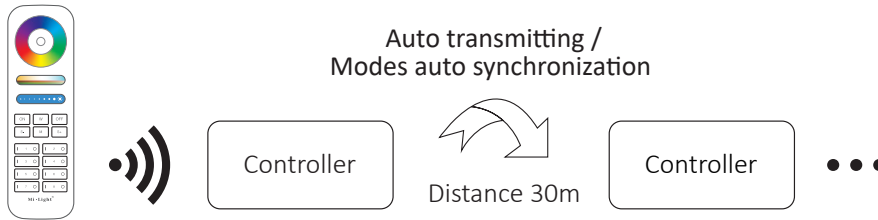

### 4). Dynamic mode table selection (only for remote control)

#### Select dynamic mode table 1:

While the light is in static mode, short press “**S+**” button 5 times quickly until blue light flashes 3 times slowly, static mode is activated successfully.

#### Select dynamic mode table 2:

While the light is in static mode, short press “**S-**” button 5 times quickly until yellow light flashes 3 times slowly, static mode is activated successfully.

### Dynamic mode table 1 (default)

| Number | Dynamic Mode           | Brightness / Saturation / Speed |
|--------|------------------------|---------------------------------|
| 1      | Mardi Gras             | Adjustable                      |
| 2      | Automatic color change |                                 |
| 3      | Sam                    |                                 |
| 4      | Gemstone               |                                 |
| 5      | Twilight               |                                 |
| 6      | American               |                                 |
| 7      | Fat Tuesday            |                                 |
| 8      | Party                  |                                 |
| 9      | Slow Color Splash      |                                 |

## Dynamic mode table 2 (need to switch manually)

| Number | Dynamic Mode                                 | Brightness / Saturation / Speed |
|--------|----------------------------------------------|---------------------------------|
| 1      | Seven colors gradual change                  | Adjustable                      |
| 2      | White light Gradual change                   |                                 |
| 3      | RGB gradual change                           |                                 |
| 4      | Seven colors jump to change                  |                                 |
| 5      | Jump to change randomly                      |                                 |
| 6      | Red light gradual change<br>+Flash 3 times   |                                 |
| 7      | Green light gradual change<br>+Flash 3 times |                                 |
| 8      | Blue light gradual change<br>+Flash 3 times  |                                 |
| 9      | White light gradual change<br>+Flash 3 times |                                 |

### 5). PWM high frequency / low frequency switching (only for remote control)

#### Switch to high frequency (16KHz):

Press “OFF” button 1 time within three seconds and press “ON” button 5 times,  
Activated successfully once led light flashes 2 times quickly.

#### Switch to low frequency (250Hz):

Press “ON” button 1 time within three seconds and press “OFF” button 5 times,  
Activated successfully once led light flashes 2 times slowly.

## 6). “Do Not Disturb” mode is activated and shut down (default activated)

Turn on “Do Not Disturb” mode (wide using in the area which have power failure frequently to save energy)

### 2.4G RF Remote turn on and turn off instruction

#### Turn on “Do Not Disturb” mode:

Press “OFF” button three times within three seconds and press “ON” button three times, Activated successfully once led light flashes four times quickly.

#### **Attention:** Do not disturb mode is activated

1. When the light is OFF status (For example: Use app or remote to turn off light)

The light is OFF status once you turn off power and turn on again.

**(User must turn off and turn on power twice times to activate light or use APP / remote to activate light)**

2. When the light is ON status

The light is ON status once you turn off and turn on power one time.


#### Turn off “Do Not Disturb” mode:

Press “ON” button three times within three seconds and press “OFF” button three times, closed successfully once led light flashes four times slowly.

**Attention:** The light will be always “ON” status if you turn on and turn off power once user closed “Do Not Disturb” mode.


## DMX512 LED Transmitter Control (Purchased separately)

Only for RGB+CCT output mode

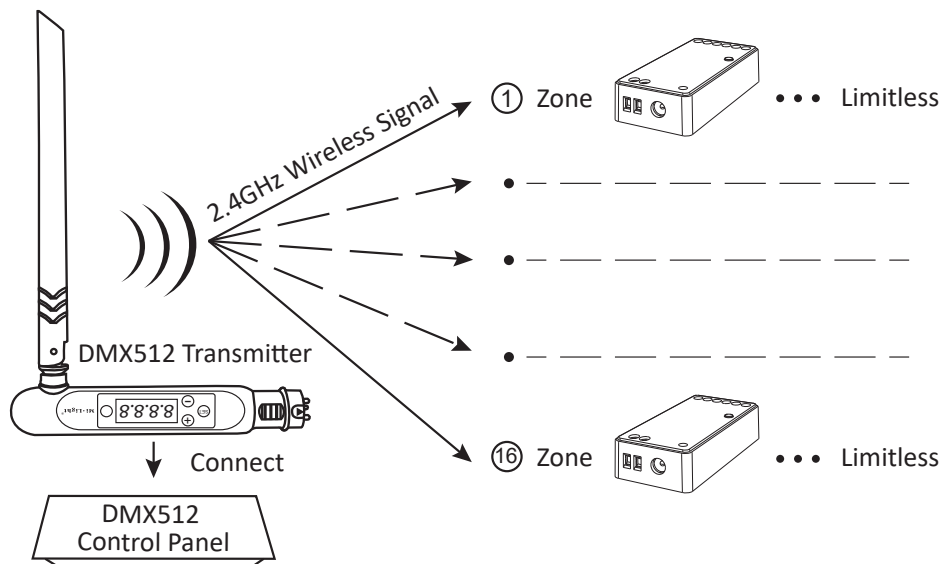

## DMX512 LED Transmitter Link/Unlink

- 1 Follow instruction of DMX512 transmitter (FUTD01), Choose the zone for the light by pressing “+” or “-” (e.g. “CH12” means zone 12)

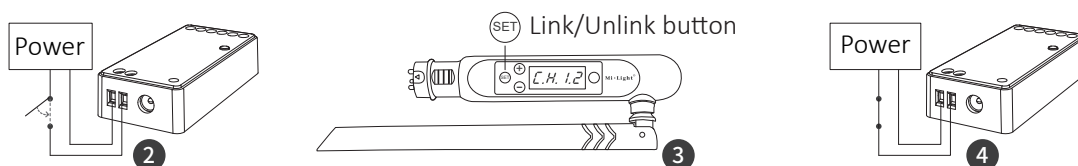

### Link

The controller is powered off for 10 seconds and then powered on, or press “SET” button 1 time.

Short press “SET” 3 times within 3 seconds while the indicator of controller is ON

Link is done once indicator of controller flashes 3 times slowly

### Unlink

The controller is powered off for 10 seconds and then powered on, or press “SET” button 1 time.

Short press “SET” 5 times within 3 seconds while the indicator of controller is ON

Unlink is done once indicator of controller flashes 10 times quickly



If the link or unlink failed, please follow the above steps again.

## Attention

1. Please turn off power supply before installation.
2. Please ensure input voltage to be same as requirements from device.
3. Don't disassemble device if you are not expert, otherwise it will damage it.
4. Please do not use the light in the place with widely range metal area or strong electromagnetic wave nearby, otherwise, the remote distance will be seriously affected.



Scan QR code to watch 2.4GHz series video instruction Or  
enter into following link directly

[https://miboxer.com/light/video/1pc\\_remote.html](https://miboxer.com/light/video/1pc_remote.html)



Made in China